



Cross-connect ZSI 2.5/2


To cross-connect the ZSI 2.5/2, you need to remove every second pole from the ZQV. The ZQV should look like the second picture.

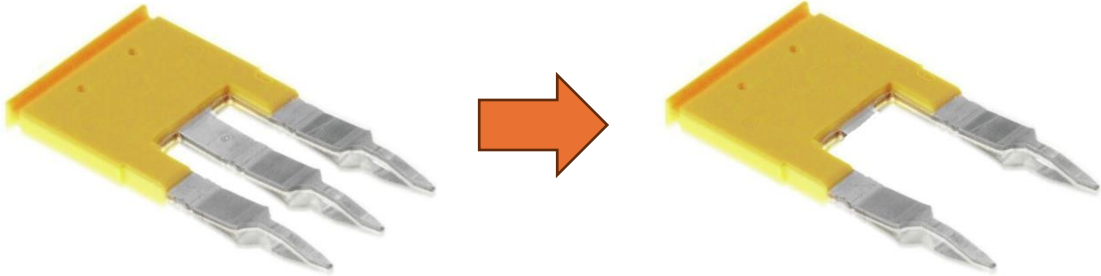


ZQV 4/3

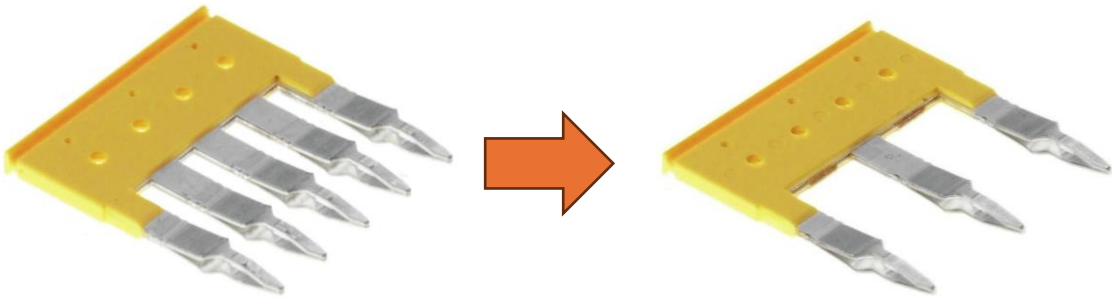

ZQV 4/5

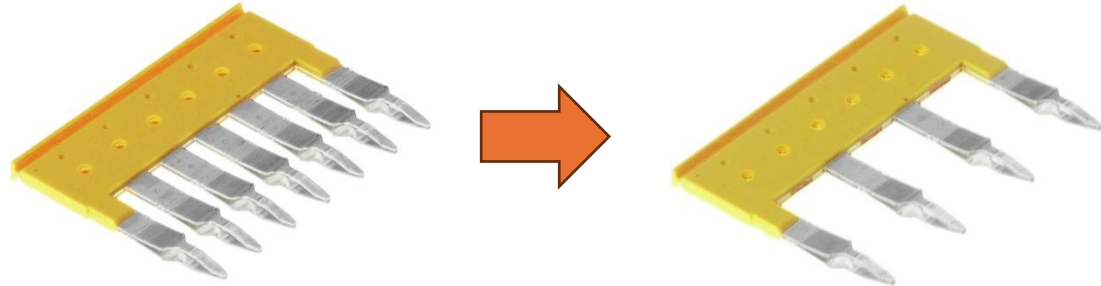

ZQV 4/7

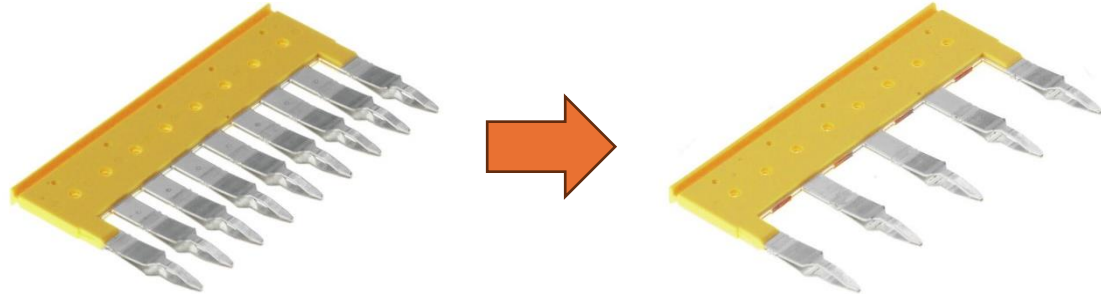

ZQV 4/9