


Timing function

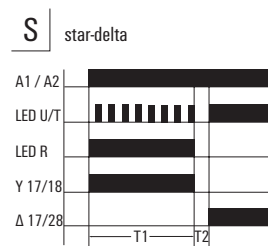

Star-Delta Start-up (S)

When the supply voltage U is applied, the star-relay switches into on-position and the set star-time t1 begins. After the time t1 has expired the star-relay switches into off-position and the set transit-time t2 begins. After the time t2 has expired the delta-relay switches into on-position. To restart the function the supply voltage must be interrupted and reapplied.

- 1 Time setting
- 2 Timescale Y
- 3 Timescale Y-Δ
- 4 Status display (green): Supply voltage
- 5 Status display (yellow): Star-relay closed



Ordering data

Type	Order-No.
TFIS 12-240VUC 2NO SD	2697270000