

Pin assignement

ELCO connector RS ELCO 20/20RM S/Z	
20poles	RS ELCO 20/20LM S/Z
A	1
B	2
C	3
D	4
E	5
F	6
H	7
J	8
K	9
L	10
M	11
N	12
P	13
R	14
S	15
T	16
U	17
V	18
W	19
X	20

Note