

ELCO connector	RS ELCO 38/38RM S/Z
38poles	RS ELCO 38/38LM S/Z
A	1
B	2
C	3
D	4
E	5
F	6
H	7
J	8
K	9
L	10
M	11
N	12
P	13
R	14
S	15
T	16
U	17
V	18
W	19
X	20
Y	21
Z	22
AA	23
BB	24
CC	25
DD	26
EE	27
FF	28
HH	29
JJ	30
KK	31
LL	32
MM	33
NN	34
PP	35
RR	36
SS	37
TT	38
Note	