

Hardware Installation Guide

Unmanaged Gigabit Ethernet PoE Switches

IE-SW-EL08-8GTPoE (Part No. 2682400000)
(From product Rev. 7.1)

1. Introduction

Ethernet Switches from Weidmüller are designed with a very compact housing size and are fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

2. Safety notice

	Switch off the electrical power before removing the power connection!
	The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.
	The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device. The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU and 2014/30/EU.
	Installation, commissioning and maintenance may only be performed by qualified electricians.
	Observe the operating instructions.
	- Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label. - Utilisation en intérieur et degré de pollution II, il faut l'essuyer avec un chiffon sec pour nettoyer l'appareil et son étiquette. - Do not block air ventilation holes. - Ne bloquez pas les orifices de ventilation. - If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. - Si l'appareil est utilisé d'une manière non spécifiée par le fabricant, la protection qu'il apporte peut se voir diminuée. - Shall be mounted in the Industrial Control Panel and ambient temperature is not exceed 70 degrees C. - Doit être monté dans le panneau de commande industriel et la température ambiante ne doit pas dépasser 70 degrés C.

Intended use

The device is intended for the realization of communication networks within an industrial environment, it is intended to be used in a restricted access location. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

Environmental conditions

This equipment is intended to be used in a restricted access location. When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data. Also make sure that the air flow will not be compromised by other devices. Ensure that the mounted and wired device is not exposed to any mechanical stress.

FCC compliance

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


3. Package Checklist

Your Ethernet Switch is shipped with the following items:

- Ethernet Switch
- Hardware Installation Guide (printed)
- 6-Pin Terminal connector
- Protective caps for RJ45 ports


4. Panel Layouts

IE-SW-EL08-8GTPoE
Front Panel View

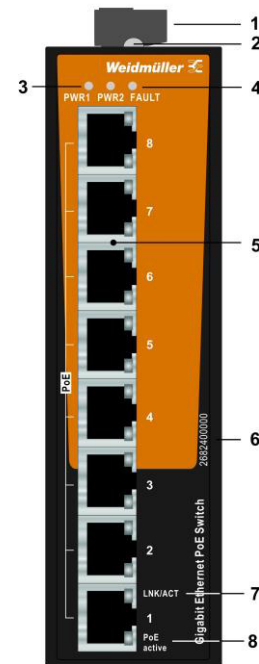


1. Terminal block for power input PWR1/PWR2 and Power failure relay (output)
 2. Grounding screw / Frame ground (Note: The shielding ground of the LAN port is electrically connected to the grounding screw)
 3. Power input LEDs (PWR1 / PWR2)
 4. Fault LED (PWR1 / PWR2 fault)
 5. 10/100/1000Base-T(X) PoE+ ports (P.S.E)
 6. Article Number
 7. LED RJ45 port Link/Activity
 8. LED for PoE power injection
 9. DIP switch for enabling / disabling Power Fault relay
 10. DIN-Rail kit
- SW1 ON: Switch relay if power 1 fails
SW2 ON: Switch relay if power 2 fails

Top Panel View

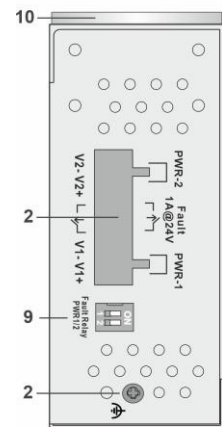


Rear Panel View

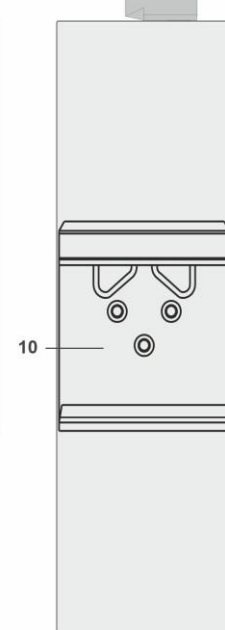

5. Mounting Dimensions

(units = mm)

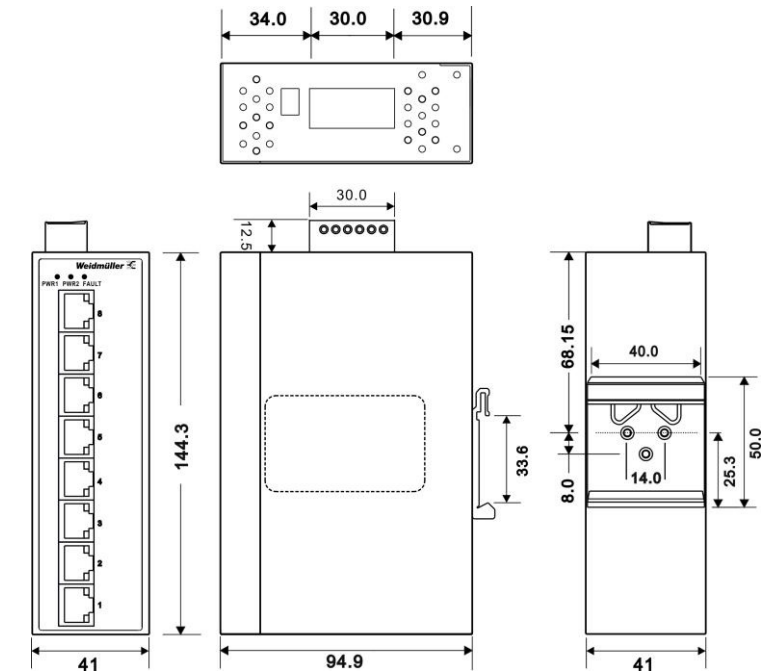


6. DIN-Rail Mounting

Slide the switch onto a DIN-rail and make sure that the switch's Din-rail clip clicks into the rail firmly.

STEP 1: Insert the top of the DIN-Rail into the slot just below the stiff metal spring.

STEP 2: The DIN-Rail attachment unit will snap into place as shown below.

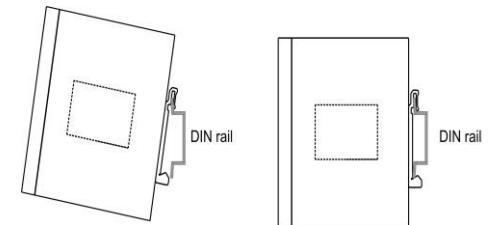

To remove the DIN-rail from the Ethernet Switch, simply reverse Steps 1 and 2.

7. Grounding Ethernet Switch



ATTENTION

- Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).
- the ground connection from the ground screw to the grounding surface prior to connecting devices.
- This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.
- The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).


8. Wiring Redundant Power Inputs and Power Fault Relay

The switch supports redundant power supplies and provides a power fault relay which can be used for alarming in case of interruption of Power 1 or Power 2. For wiring via 6-pin terminal connector please refer to below illustration.



Warning / Avertissement

- Take into consideration the following guidelines before wiring the device
 - Tenez compte des directrices suivantes avant de câbler l'appareil.
- Terminal block is mating with Plug and suitable for 12-18AWG. Torque value 4.5 lb-in.
 - Le bornier est compatible avec les connecteurs et convient pour 12-18AWG. Valeur de couple 4,5 lb-in.
- The temperature rating of the input connection cable should higher than 105°C.
 - La température de service nominale du câble d'entrée doit être supérieure à 105 °C.
- Use Copper Conductors Only.
 - Utilisez uniquement des conducteurs en cuivre.
- Supplied by SELV or double insulation source evaluated by UL 61010-1 or 61010-2-201 power supply only.
 - Fourni par la source SELV ou double isolation évaluée uniquement par l'alimentation UL 61010-1 or 61010-2-201.

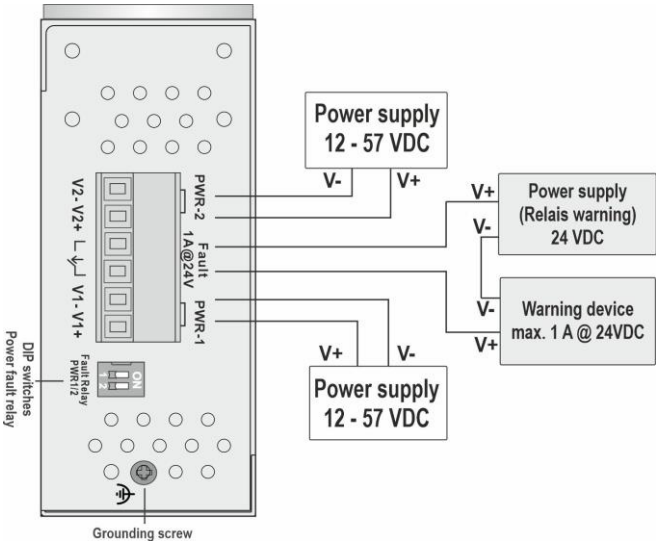

Note about behavior of power failure relay:

- Relay contact is closed if the device is powered-off.
- Relay contact always is open if the device is powered either by PWR1 or PWR2 and if DIP switches 1 and 2 for power control are set to off.
- Relay contact closes if DIP switch 1 is set to ON and PWR1 fails.
- Relay contact closes if DIP switch 2 is set to ON and PWR2 fails.

9. Communication Connections

Switch IE-SW-EL08-8GTPoE is equipped with the following communication interfaces:

 
8 x 10/100/1000Base-T PoE ports (P.S.E.)

9.1 10/100/1000Base-T(X) PoE ports (P.S.E)

For communication without PoE sourcing the switch supports auto negotiation speed, Full/Half duplex mode and auto MDI/MDI-X connection, means automatic setting of pinouts for both MDI ports (NIC-type) or MDI-X ports (HUB/Switch-type).

In case of active PoE sourcing the switch uses the pinout of “Alternative A, MDI mode” of 802.3af/802.3at standards. Please see the details in the following table.

Pinouts 10/100/1000Base-T(X) PoE ports (P.S.E)

8-Pin RJ45 Port	10/100 Base-T(X) MDI/MDI-X			1000Base-T MDI/MDI-X		
	Pin No.	MDI port	MDI-X port	Pin No.	MDI port	MDI-X port
	1	TD+(transmit) with PoE Power +	RD+(receive)	1	BI_DA+ with PoE Power +	BI_DB+
	2	TD-(transmit) with PoE Power +	RD-(receive)	2	BI_DA- with PoE Power +	BI_DB-
	3	RD+(receive) with PoE Power -	TD+(transmit)	3	BI_DB+ with PoE Power -	BI_DA+
	4	Not used	Not used	4	BI_DC+	BI_DC+
	5	Not used	Not used	5	BI_DC-	BI_DC-
	6	RD-(receive) with PoE Power -	TD-(transmit)	6	BI_DB- with PoE Power -	BI_DA-
	7	Not used	Not used	7	BI_DD+	BI_DD+
	8	Not used	Not used	8	BI_DD-	BI_DD-

Note:

According to IEEE 802.3af/at standards, the PD shall be implemented to be insensitive to the polarity of the power supply and shall be able to operate per MDI mode and MDI-X mode. However, some PDs only support MDI mode or MDI-X mode only.

If the PD only supports PoE MDI mode (V+, V+, V-, V- for pins 1, 2, 3, 6), choose a cross-over Ethernet cable to connect the PD and the switch. If the PD only supports PoE MDI-X mode (V-, V-, V+, V+ for pins 1, 2, 3, 6), choose a straight-through Ethernet cable between the PD and the Switch.

Total PoE Budget

For the total PoE power budget, the switch will provide 60 Watts from 12 to 24 VDC input voltage and 120 Watts from 24.1 to 57 VDC input voltage. The total power budget is the total amount of reserved PoE power based on the PoE class of the PoE device. If a newly connected PoE device causes the total reserved power to exceed the total power budget, the newly connected PoE device will be denied power.

10. LED Indicators

The front panel of the Ethernet Switch contains several LED indicators. The function of each LED is described in the table below.

LED	Color	Status	Description
PWR1	Green	On	Power is being supplied to power input PWR1.
		Off	Power is not being supplied to power input PWR1.
PWR2	Green	On	Power is being supplied to power input PWR2.
		Off	Power is not being supplied to power input PWR2.
FAULT	Amber	On	Indicates PWR1 or PWR2 fault (if corresponding DIP switches are set to ON).
		Off	If DIP switches are set to OFF or no power failure.
LNK/ACT	Green / Amber	Green	Port's link is active at 1000 Mbps.
		Amber	Port's link is active at 10/100 Mbps.
		Off	Port's link is inactive.
PoE active	Green	On	PoE power injection is active.
		Off	PoE power injection is inactive.

11. Disposal Information



Observe the notes for proper disposal of the product. You can find the notes here: www.weidmueller.com/disposal.



12. Specifications

Technology	
Standards	IEEE 802.3 for 10Base-T IEEE 802.3u for 100Base-TX IEEE 802.3ab for 1000Base-T IEEE 802.3af/at for Power over Ethernet IEEE 802.3x flow control
Processing Type	Store and Forward
MAC Table size	4K
Packet buffer size	1.5 Mbit
Backplane bandwidth	16 Gbps
Jumbo frame support	up to 9216 Bytes
Interfaces	
RJ45 Ports	10/100/1000Base-T(X) PoE ports (P.S.E.) compliant to PoE standard IEEE 802.3af/at.
LED Indicators	Power, Power Fault, Port Link/Activity, PoE
Relay Contact	Max. 1A @ 24 VDC (normally open)
DIP Switches	Enabling/Disabling relay alarm for PWR1/PWR2 failure
Power	
Input Voltage	12/24/48 V DC (12 - 57 V DC), 2 redundant inputs
Input Current	6.6 A @ 12 V DC; 5.86 A @ 24 V DC; 2.32 A @ 57 V DC
Connection	One removable 6-pin terminal block, Wiring cable 12-18AWG
Overload Current Protection	Present
Reverse Polarity Protection	Present
PoE	
Total power budget	60 W @ 12 - 24 V DC / 120 W @ 24.1 - 57 V DC
PoE Pinout	Mode A: Pin 1, 2 (V+); Pin 3, 6 (V-); Alternative A; MDI
Physical Characteristics	
Housing	IP30 protection, metal
Dimension (W x H x D)	41 x 144.3 x 94.9 mm (1.62 x 5.68 x 3.74 in)
Weight	643 g
Installation	DIN-rail
Environmental conditions	
Operating Temperature	-40 to 70°C (-40 to 158°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5 to 95% (non-condensing)
Operating Altitude	Up to 2000 m in acc. with UL Up to 6000 m for restrictions, see the manufacturer's declaration for operating altitude
Regulatory Approvals	
Safety	UL 61010-1; UL 61010-2-201
EMC	EN 55032, EN 55035, FCC Part 15 Subpart B Class A, IEC 61000-4-2 ESD: Contact: 4 kV; Air: 8 kV, IEC 61000-4-3 RS: 80 MHz to 1 GHz: 3 V/m, IEC 61000-4-4 EFT: Power: 0.5 kV; Signal: 0.5 kV, IEC 61000-4-5 Surge: Power: 0.5 kV; Signal: 1 kV, IEC 61000-4-6 CS: 3 Vrms
Shock	IEC 60068-2-27
Free Fall	IEC 60068-2-31
Vibration	IEC 60068-2-6
MTBF	
Time	760.650 hrs
Database	Telcordia SR-332 Issue 4
Warranty	
Time Period	5 years

Contact Information

Weidmüller Interface GmbH & Co. KG
Klingenbergstraße 26, 32758 Detmold / Germany
Phone +49 (0) 5231 14-0, Fax +49 (0) 5231 14-292083
E-Mail weidmueller@weidmueller.com, Internet www.weidmueller.com