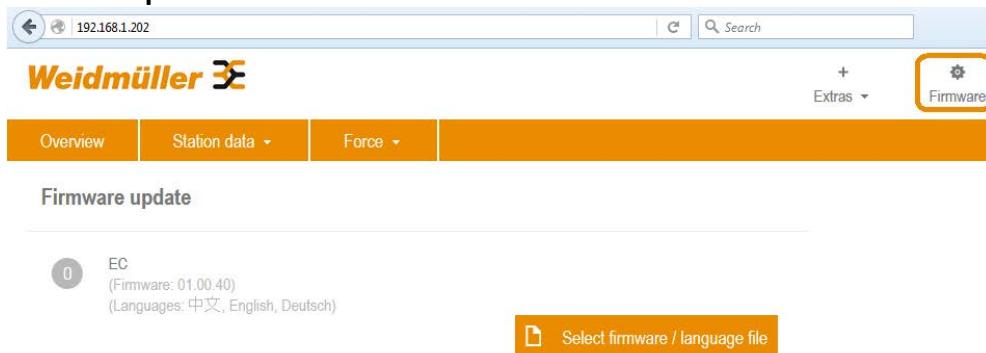
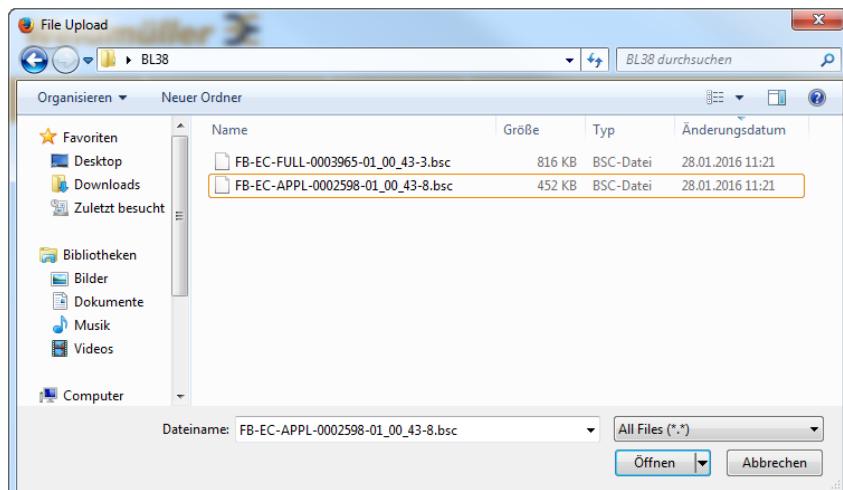
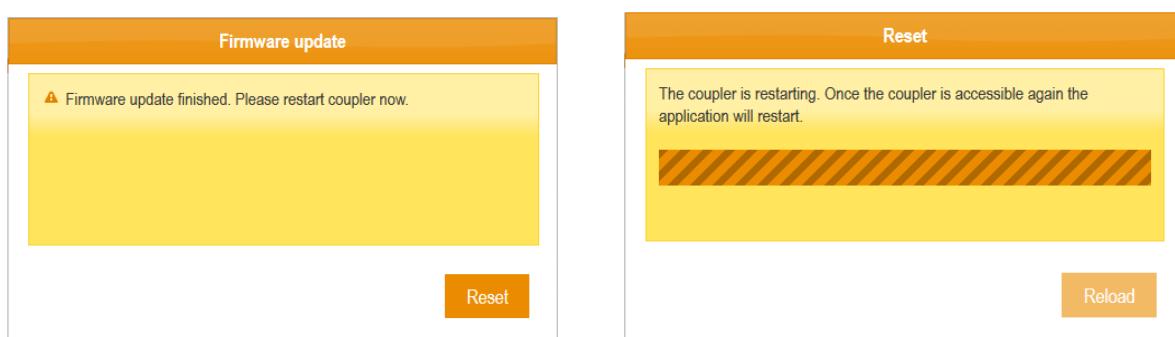
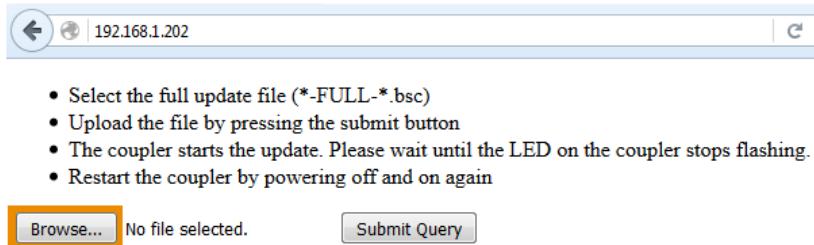
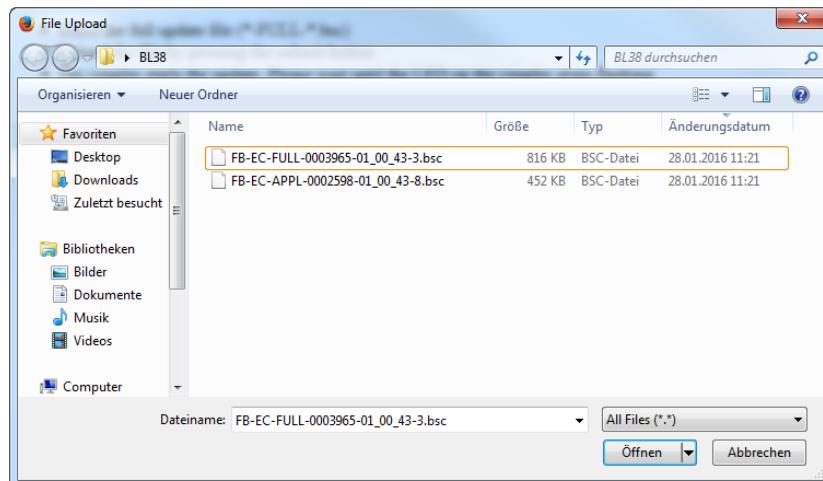
 



Application Note: Firmwareupdate Baseline 38**Sample: Firmwareupdate EtherCAT Koppler**

For this update are two .bsc files necessary!

1. Start the update in the Webserver:**2. Choose the ...APPL....bsc file:****3. Start the first part of the update process****4. After the firmware data has been transferred restart the coupler**

Application Note: Firmwareupdate Baseline 38**5. Second part of the update after coupler has restarted****6. Choose the ...FULL....bsc file:****7. Submit file**

During the update process the BF LED flashes red for approximately one minute with 1Hz. There is no visualization of the update process in the web browser displayed. Once the BF LED lights up permanently (DeviceNet flashes with 2Hz) the update is finished and the coupler has to be restarted by cutting off the power supply for a short time.

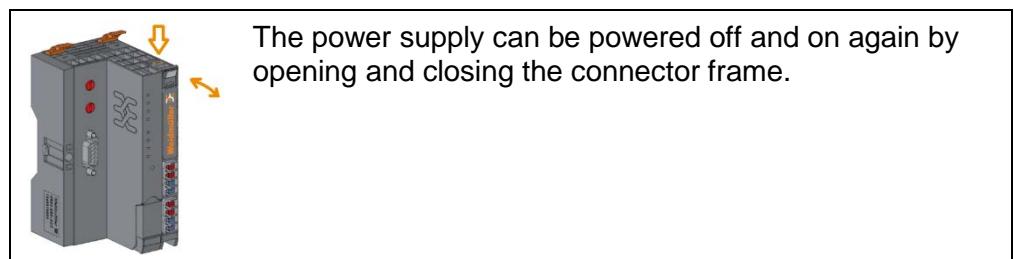**8. Update complete**

After updating the web browser the new webserver is displayed.