

Hardware Installation Guide

Unmanaged Gigabit Ethernet Switches







IE-SW-ELB-05-5GT V2.0 (Part No.2828560000)

IE-SW-ELB-08-8GT V2.0 (Part No.2828570000)

1. Introduction

Ethernet Switches from Weidmüller are designed with a very compact housing size and are fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

2. Safety notice

	Switch off the electrical power before removing the power connection!
	The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.
	The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device. The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU.
	Installation, commissioning and maintenance may only be performed by qualified electricians.
	Observe the operating instructions.
	<ul style="list-style-type: none"> Indoor use and pollution degree 2, it must be wiped with a dry cloth for clean up the device and label. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Shall be mounted in the Industrial Control Panel and ambient temperature is not exceed 75°C.

Intended use

The device is intended for the realization of communication networks within an industrial environment, it is intended to be used in a restricted access location. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

Environmental conditions

This equipment is intended to be used in a restricted access location. When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data. Also make sure that the air flow will not be compromised by other devices. Ensure that the mounted and wired device is not exposed to any mechanical stress.



3. Package Checklist

Your Ethernet Switch is shipped with the following items:

- Ethernet Switch
- Hardware Installation Guide (printed)

4. Panel Layouts


IE-SW-ELB-05-5GT IE-SW-ELB-08-8GT

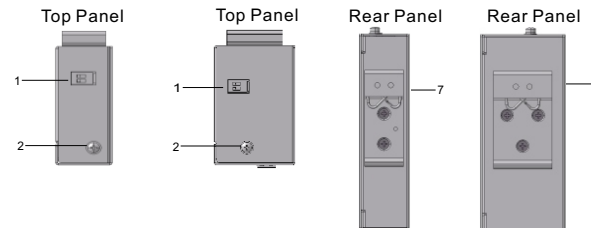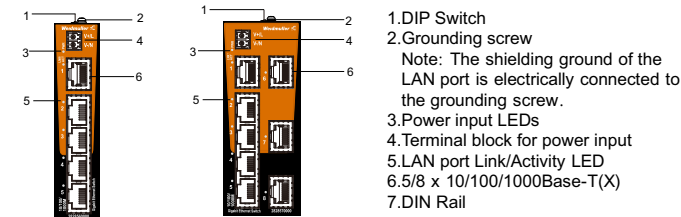

5. DIP Switch

IE-SW-ELB-05-5GT


IE-SW-ELB-08-8GT

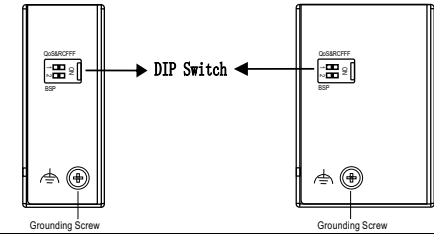


DIP Switch	Setting	Description																				
QoS&RCFFF	ON	Enable the Quality of Service to handle packet priorities in four WFQ queues. QoS priority mapping matrix in each queue																				
		<table><tr><td>Cos</td><td>7</td><td>6</td><td>5</td><td>4,3,2,1,0</td></tr><tr><td>DSCP</td><td>59</td><td>55</td><td>43,47</td><td>27,31,others</td></tr><tr><td>Queues</td><td>3</td><td>2</td><td>1</td><td>0</td></tr><tr><td>WFQ</td><td>8</td><td>4</td><td>2</td><td>1</td></tr></table>	Cos	7	6	5	4,3,2,1,0	DSCP	59	55	43,47	27,31,others	Queues	3	2	1	0	WFQ	8	4	2	1
		Cos	7	6	5	4,3,2,1,0																
		DSCP	59	55	43,47	27,31,others																
	Queues	3	2	1	0																	
WFQ	8	4	2	1																		
RCFFF:Enable Multicast Filtering which will block traffic by filtering frames with a destination MAC address within the range of 01-80-C2-00-00-02 to 01-80-C2-00-00-0F																						
OFF (Default)	Disable the QoS and RCFFF																					
BSP	ON	Enables broadcast storm protection (only allow maximum of 2000 broadcast packets per second) for each Ethernet port																				
	OFF (Default)	Disables the broadcast storm protection																				

6. Mounting Dimensions

IE-SW-ELB-05-5GT (units = mm)

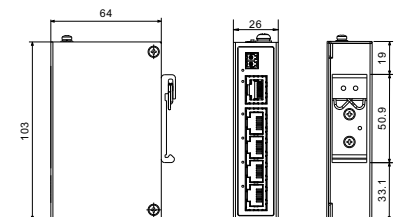

IE-SW-ELB-08-8GT (units = mm)

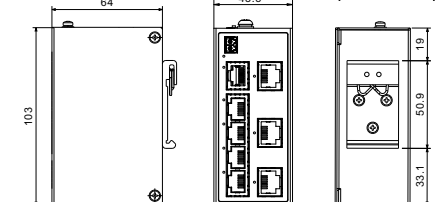

Contact Information

Weidmüller Interface GmbH&Co. KG

Klingenbergstraße 26, 32758 Detmold/Germany

Phone +49 (0) 5231 14-0, Fax +49 (0) 5231 14-292083

E-Mail weidmueller@weidmueller.com, Internet www.weidmueller.com


V1.2 2026-02-10

7. DIN-Rail Mounting


The switch supports horizontal and vertical installation, The DIN rail can be adjusted according to the actual application to meet different installation requirements.

Installation
Step 1: Select the mounting position for the device and guarantee adequate space and heat dissipation.
Step 2: Clip the upper part of the rail holder to the DIN rail, push the upper part of the device down slightly in the direction of arrow 1, push the front of the module toward the mounting surface until it audibly snaps into place in the direction of arrow 2.

Uninstallation
Step 1: As shown in the following figure, press the device downward in the direction of arrow 1 until the bottom of the device is detached from the DIN rail.
Step 2: Rotate the device in the direction of arrow 2 until the device is removed from the DIN rail.

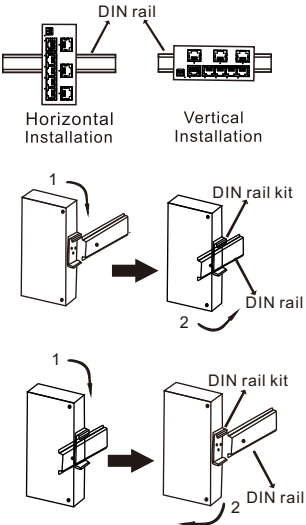

8. Grounding Ethernet Switch





ATTENTION

- Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).
- the ground connection from the ground screw to the grounding surface prior to connecting devices.
- This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.
- The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).
- Cross-sectional area of the grounding cable ≥ 0.82 mm² (AWG18); Grounding resistance < 5Ω.

9. Wiring the Power Inputs

The switch power supply inputs which are located on the 2-pin terminal block. Refer to illustration below for correct wiring.

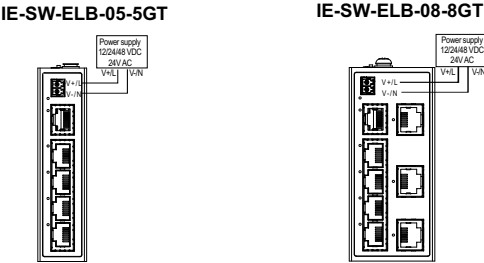



WARNING

- Take into consideration the following guidelines before wiring the device.
- Terminal block is mating with Plug and suitable for 0.14-1.5 mm².
- The temperature rating of the input connection cable should higher than 105°C.
- Supplied by SELV source evaluated by UL 61010-1 or 61010-2-201 power supply only.

10. Communication Connections

Switch **IE-SW-ELB-05-5GT** is equipped with following communication interfaces:
5 x10/100/1000Base-T(X) ports
Switch **IE-SW-ELB-08-8GT** is equipped with following communication interfaces:
8 x10/100/1000Base-T(X) ports

Please only use cables suitable for the respective type of communication and ensure that signals are protected from possible interference.


10/100/1000Base-T (X) RJ45 Ports


The 10/100/1000Base-T(X) ports located on Ethernet Switch's front panel are used to connect to Ethernet-enabled devices. Below we show pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports. Auto MDI-X ensures that both wiring- schemes are supported. (Automatic cross over function)

Each RJ45 Ethernet port independently supports auto-negotiation for recognizing the transmission speed 10/100/1000 Mbps according to the IEEE802.3 standard. This means that some of connected Ethernet devices could operate at 10/100 Mbps, while at the same time other nodes are operating at 1000 Mbps.

10/100/1000Base- T (X) RJ45 Pinouts

MDI Port Pinouts		MDI- X Port Pinouts		8-pin RJ45
Pin	Signal	Pin	Signal	
1	BI DA+	1	BI DB+	
2	BI DA-	2	BI DB-	
3	BI DB+	3	BI DA+	
4	BI DC+	4	BI DD+	
5	BI DC-	5	BI DD-	
6	BI DB-	6	BI DA-	
7	BI DD+	7	BI DC+	
8	BI DD-	8	BI DC-	

 



Note about possible loss of data packages in case of 'Duplex mismatching'

If the switch's auto-negotiation port is connected to a non-negotiating device, then the switch will set its port transmission speed same as the connected device but is unable to correctly detect the duplex mode. As result the port is set to the correct speed but is using always the half duplex mode as required by the IEEE 802.3u standard in such cases. For correct transmission, the non-negotiating port must be set to half-mode (speed can be either 10 Mbps, 100Mbps or 1000 Mbps, it always will be recognized automatically by an Auto-Negotiation-Device).


11. LED Indicators

The front panel of the Ethernet Switch contains several LED indicators. The function of each LED is described in the table below.

LED	Color	Status	Description
PWR	Green	On	Power is being supplied to power input PWR
		Off	Power is not being supplied to power input PWR
LNK/ACT	Green : 1000Mbps Orange : 10/100Mbps	On	Port's link is active
		Off	Port's link is inactive
		Blinking	Transmitting data

12. Specifications

Technology	
Standards	IEEE 802.3 for 10Base-T IEEE 802.3u for 100Base-TX IEEE 802.3ab for 1000Base-T IEEE 802.3x for Flow Control IEEE 802.1p for Class of Service
Processing Type	Store and Forward
MAC Table size	IE-SW- ELB-05-5GT: 2K IE-SW- ELB-08-8GT: 4K
Packet buffer size	IE-SW- ELB-05-5GT: 1Mbits IE-SW- ELB-08-8GT: 1.5Mbits
Interface	
RJ45 Ports	10/100/1000Base-T (X) auto negotiation speed, F/H duplex mode and auto MDI/MDI-X connection
LED Indicators	PWR , LNK/ACT
Power	
Input Voltage	9.0~60V DC or 18~30V AC
Input Current @24 VDC	IE-SW- ELB- 05-5GT: 0.17A IE-SW- ELB- 08-8GT: 0.21A
Connection	One removable 2-pin terminal block, Wiring cable 0.14-1.5 mm²
Overload Current Protection	Present
Reverse Polarity Protection	Present
Physical Characteristics	
Housing	IP40 protection, metal
Dimension (W x H x D)	IE-SW- ELB- 05-5GT: 26.0 x 103 x 64 mm IE-SW- ELB- 08-8GT: 43.5 x 103 x 64 mm
Weight	IE-SW- ELB- 05-5GT: 134 g IE-SW- ELB- 08-8GT: 198 g
Installation	DIN-rail
Environmental conditions	
Operating Temperature	-40 to 75°C
Storage Temperature	-40 to 85°C
Ambient Relative Humidity	5% to 95% (non-condensing)
Altitude	up to 2000m
Pollution Degree	2
Regulatory Approvals	
Safety	UL 61010-1; UL 61010-2-201 EN IEC 62368-1:2020+A11:2020
EMC	EN 55032, EN 55035, Class A IEC 61000-4-2 ESD: Contact: 6 kV; Air: 8 kV IEC 61000-4-3 RS: 80 MHz-1 GHz: 10 V/m 1.4 GHz-6 GHz: 3 V/m IEC 61000-4-4 EFT: Power: 2 kV; Signal: 1 kV IEC 61000-4-5 Surge: Power: 2 kV; Signal: 2 kV IEC 61000-4-6 CS: 10 V
Shock	IEC 60068-2-27
Free Fall	IEC 60068-2-32
Vibration	IEC 60068-2-6
MTBF	
Time	IE-SW- ELB-05-5GT: 2,815,267 hrs IE-SW- ELB-08-8GT: 1,567,427 hrs
Database	Telcordia SR332
Warranty	
Time Period	5 years



Observe the notes for proper disposal of the product.
You can find the notes here:
www.weidmueller.com/disposal

