

**INSTALLATION INSTRUCTIONS
& CONDITIONS FOR SAFE USE** II 3 G Ex ec IIC Gc**Modular TERMINAL Blocks: W- Series****TÜV 20 ATEX 8502 U
IECEx TUR 20.0014 U****Standards:**EN 60079-0:2018 and EN 60079-7:2015 A1:2018
IEC 60079-0: 7th Edition and IEC 60079-7: 5.1th Edition**Fuse Terminal Blocks: WFS 4**

Version:	Type	Order No
	WFS 4*	2561900000
	WFS 4 10-36V*	2562070000
	WFS 4 30-70V*	2561990000
	WFS 4 60-150V*	2561970000
	WFS 4 100-250V*	2561960000

Accessories:	Type	Order No
Endplate	WAP 2.5-10 SW*	1050010000
End bracket	WEW 35/2 SW*	1061210000

Terminal rail	TS 35/... acc.to IEC 60715
---------------	----------------------------

Cross-connection	Type	Order No
	Plugable	
	ZQV 4N/2*	1527930000
	ZQV 4N/3*	1527940000
	ZQV 4N/4*	1527970000
	ZQV 4N/5*	1527980000
	ZQV 4N/6*	1527990000
	ZQV 4N/7*	1528020000
	ZQV 4N/8*	1528030000
	ZQV 4N/9*	1528070000
	ZQV 4N/10*	1528090000

Insulation material:

- Type	Wemid
- Tracking resistance (A) to IEC 60112	CTI ≥ 600
- Flammability class to UL 94	V0
- Operating temperature range	-60°C...+120°C (insulating material limit)

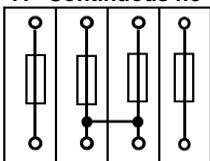
* in all colours

Technical data according to IEC/EN 60079-7 (increased safety "ec"):

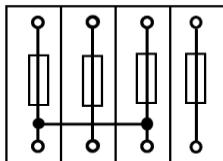
	Rated Voltage	
	Separate arrangement	Compound arrangement
WFS 4	250 V	250 V
WFS 4 10-36V	10-36 V	
WFS 4 30-70V	30-70 V	
WFS 4 60-150V	60-150 V	
WFS 4 100-250V	100-250 V	
- Rated current	6,3 A	
- Rated power dissipation Pvk		
Separate arrangement	4 W (6,3 A)	
Compound arrangement	2,5 W (6,3 A)	
- Rated conductor cross section	4 mm ²	
- Conductor cross section solid	0,5 - 6,0 mm ²	
- Conductor cross section flexible	0,5 - 4,0 mm ²	
- Conductor cross section flexible with ferrule	0,5 - 4,0 mm ²	
- Cross section, American Wire Gauge	22 - 10 AWG	
- torque range	0,5 – 0,6 Nm	
- Stripping length	13 mm	

IECEx / ATEX Terminal and Cross-Connection Arrangements:

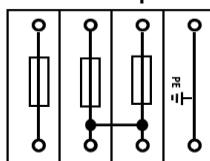
Max voltage data according to IEC/EN 60079-7 in conjunction with protective earth terminal blocks of the W-Series, (increased safety "ec"):

Application Case**A - Continuous no difference between one or two cross connections**

250V

D - Intermediate - bridging one or more unconnected terminals

250V

E - Next to a protective conductor terminal (earth) WPE 4 without a partition plate

250V

Information for further cross-connector arrangements will be provided on request.

CONDITIONS FOR SAFE USE:

This document should be read carefully before starting installation. Respect the information stated on the certification label of the terminal, e.g. Type/s of protection, gas group and temperature class. The installation of these terminals should only be carried out by authorized and qualified personnel whose training has included instruction on the various types of protection and installation practices, the relevant rules and regulations, and on the general principles of area classification.

The fuse holder shall be fully closed all times. Do not remove or replace the fuse when energized.

The fuse link shall not be replaced in the presence of a hazardous area and the associated enclosure shall be marked "Switch off supply and discharge any stored energy safely before removing fuse(s)".

The "stored energy" statement may be replaced by a statement declaring a de-energizing time before opening.

The fuse terminal is safe under the following conditions:

- Use only fuse links according to the Table 1.
- The temperature class must be verified in the final customers specific application.
- T4 based on 120 °C of the insulating material and 85 °C for the fuse carrier.

The informativ temperatures of Table 2 were determined with a nominal current of 100 % according to the IEC 90647-7-3.

The fuse terminal blocks maybe used only for short circuit protecting applications based on the operational self heating at nominal current in combination with the specified fuse links at ambient temperatures according to the following table:

Table 1
Cartrige fuse-links (5 x 20 mm) **

** only permissible for sandfilled fuse link	EN 60127-2 Spec. Sheet	Rated current	Breaking capacity	
			1	2
	1	50 mA ... 10 A	1,5 kA	
	2	32 mA ... 10 A	35 A resp. 10 x I_N	
	3	32 mA ... 10 A	35 A resp. 10 x I_N	
	5	100 mA ... 10 A	1,5 kA	
	6	32 mA ... 10 A	150 A	

Table 2:
WFS 4:

Separate arrangement:	Cartrige fuse-link 4 W/ 6,3A	T4 (120 °C)	Temperature class:	
			T5 (100 °C)	T6 (85 °C)
		72	max. ambient temperature (°C) 47	32
Compound arrangement:	Cartrige fuse-link 2,5 W/ 6,3A	27	max. ambient temperature (°C) -	-

Mounting instructions:

The fuse terminal blocks are suitable for application in enclosures in atmospheres with flammable gases or combustible dust. For use in flammable gases these enclosures must satisfy the requirements according to IEC/EN60079-0 and IEC/EN60079-7. For use in combustible dust these enclosures must satisfy the requirements according to IEC/EN60079-0 and IEC/EN60079-31.

In combination with other terminal block series and sizes and if other accessories are used, the applicable creepage and clearance distances shall be met.

Regarding the use of accessories the instructions of the manufacturer must be followed.

Schedule of Limitations:

The fuse terminal blocks are suitable for use in enclosures in atmospheres with flammable gases or combustible dust. For flammable gases these enclosures must satisfy the requirements according to IEC/EN 60079-0 and 60079-7. For combustible dust these enclosures must satisfy the requirements according to IEC/EN 60079-31.

In combination with other terminal block series and sizes and if other accessories are used, the applicable creepage and clearance distances shall be met.

Regarding the use of accessories the instructions of the manufacturer must be followed.

The terminal blocks shall be placed inside a suitable IECEx/ATEX certified IP54 enclosure for gas atmosphere. For dust atmosphere the terminal blocks shall be mounted inside a suitable IECEx/ATEX certified 't' enclosure (IEC/EN60079-31).

The enclosure shall be constructed to block all sun and UV light from affecting the terminal blocks.

WARNING – Do not remove or replace the fuse disconnect switch when energized!

When using the WFS 4... terminal blocks with other terminal blocks series or sizes or accessories, the requirements for clearance and creepages distances according to table 1 of IEC/EN 60079-7 has to be observed. Regarding the use of covers, cross-connectors and end brackets the instructions of the manufacturer must be followed.

For cross connection accessories current rating, resistance across the terminal please refer to the table under "Technical data" above.

No other wire sizes or types than the ones specified in instructions must be used. The terminal blocks must either be mounted next to another block of the same type and size or with an end plate.

Unused terminals shall be tightened.

If smaller conductor cross sections than the rated conductor cross sections are used, then the corresponding lower current shall be stated in the Certificate of the complete apparatus.



Manually cut cross connections and cross connections with blank ends ($ZQV's \geq 20$ poles) shall not be used.

Essential Health and Safety Requirements:

Concerning ESRs this Schedule verifies compliance with the Annex III of ATEX directive only. By placing the product on the market, the manufacturer declares compliance with other relevant Directives, and all other safety related requirements including those of Annex II of this Directive.