


Assembly instructions BVF 7.62HP shielding SH180 KIT

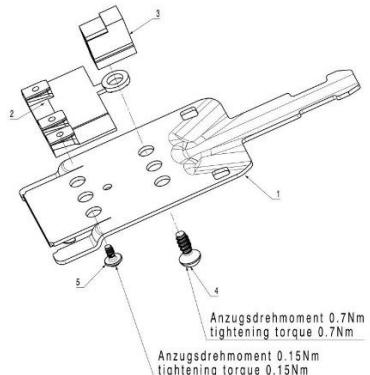

Recommended tool:

- Screwdriver TX 10
- Screwdriver TX 6

Fixing shielding plate:


1. Opening packaging unit



2. Shorten the plastic distance plate(2). The hole of the distance plate must center to the connector fixing hole(3).



3. Fix the distance plate(2) to the connector by the dovetails and center the hole of the distance plate to the connector fixing hole(3).

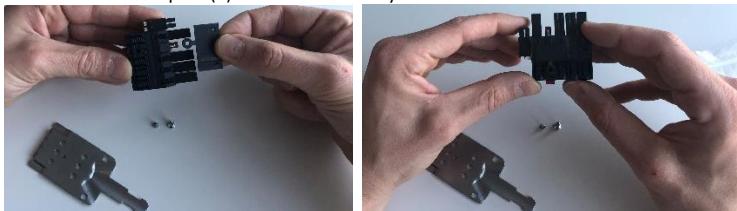




4. Position the shielding plate(1) on the fixed distance plate(2) at the connector.



5. Fix the screws:

1. Fix center screw(4) by screwdriver TX 10 tightening torque 0.7Nm
2. Fix position screw(5) by screwdriver TX 6 tightening torque 0.15Nm

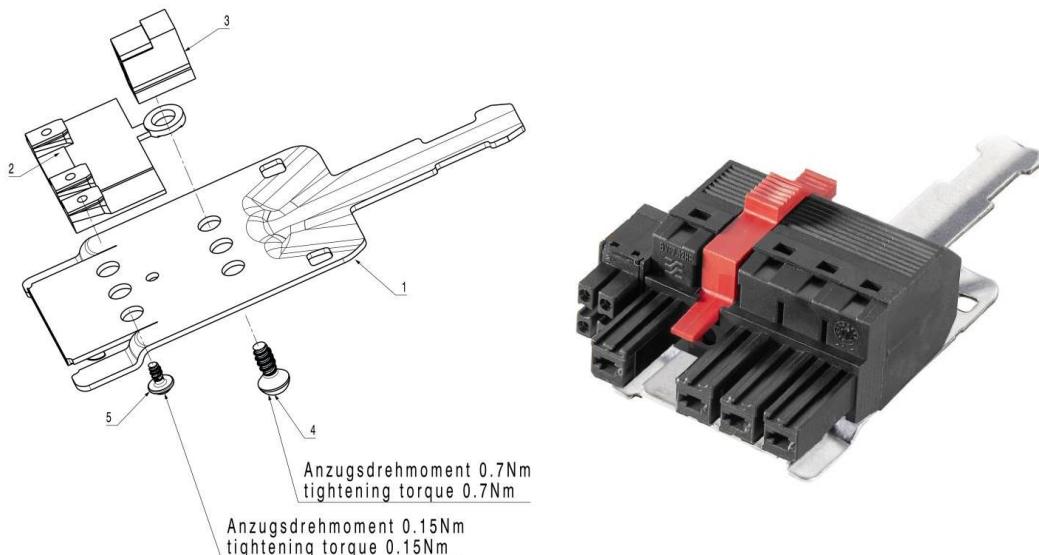

Weidmüller Interface GmbH & Co. KG
 Klingenbergstraße 26
 32758 Detmold, Germany
 Phone +49 5231 14-0
 Fax +49 5231 14-292083
 Email info@weidmueller.com
 Web www.weidmueller.com