


DURAmax DC UPS Manager

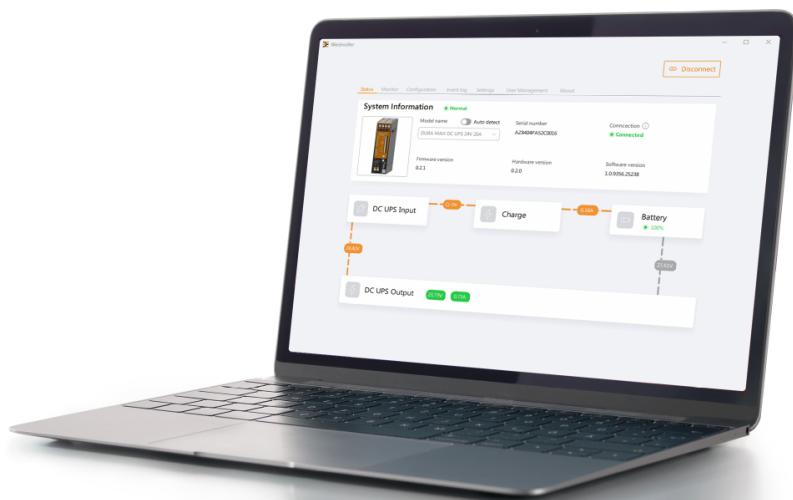

Operating Software for DURAmax DC UPS
Manual

Manufacturer
Weidmüller Interface GmbH & Co. KG
Klingenbergsstraße 26
32758 Detmold, Germany
T +49 (0) 5231 14-0
F +49 (0) 5231 14-292083
www.weidmueller.com

Importeur UK
Weidmüller LTD.
Centourion Court Office Park
Meridian East, Leicester, LE19 1TP

Document nr. 3184840000
Revision 00/11.2025

Table of contents

1	About the documentation	4			
1.1	Symbols used	4	7.4	Configuring a DURAmax DC UPS	26
1.2	Design elements	4	7.5	Resetting the latch	29
1.3	Described versions	4			
1.4	Complete Documentation	5			
2	Cybersecurity	6			
2.1	Intended use	7			
3	Installing the software	8			
3.1	System requirements	8			
3.2	Downloading the software installer	8			
3.3	Installing the DURAmax DC UPS Manager	8			
4	Starting the software for the first time	9			
5	Getting to know the software	10			
5.1	Software overview	10			
5.2	Tasks and user roles	11			
5.3	System information overview	11			
5.4	Monitoring overview	12			
5.5	Configuration overview	13			
5.6	Event log overview	16			
5.7	Settings overview	17			
5.8	User management overview	18			
5.9	About overview	19			
6	Setting up the DURAmax DC UPS Manager	20			
6.1	Changing the language	20			
6.2	Changing the temperature unit	20			
6.3	Changing your user password	21			
6.4	Managing users	21			
7	Working with the DURAmax DC UPS Manager	23			
7.1	Connecting a DURAmax DC UPS	23			
7.2	Updating the firmware	24			
7.3	Working with logs	25			
			Glossary		30

1 About the documentation

The documentation is part of the product. The documentation is intended for the operator of the product and for all persons who interact with the product during its life cycle.

- ▶ Read the documentation completely before handling the product.
- ▶ Keep the documentation after reading.
- ▶ Ensure that all persons who handle the product have access to the documentation.
- ▶ If you forward the product to third parties, please also forward the documentation and all applicable documents.

1.1 Symbols used

Symbol	Meaning
	Note on documentation or reference to additional documents
	The work described may only be performed by a qualified electrician.
	Information next to this symbol is not safety-relevant, but it supports correct and effective working practices.

1.2 Design elements

- The dash indicates a listing that does not include any action steps.
- ◊ The rhombus indicates a prerequisite that must be met before the next action step.
- ▶ The black triangle indicates an action step.
- The checkbox symbol indicates a result or a intermediate result.

[▶ Page 4] Square brackets enclosing a grey triangle and a reference target indicate a cross-reference within the document.

1.3 Described versions

This documentation describes the DURAmax DC UPS Manager with the following versions of hardware (HVN) and software (SVN):

Order No.	UPS	HVN	SVN
2934940000	DURAmax DC UPS 24V 5A	1.0.0	1.0.0
2934950000	DURAmax DC UPS 24V 10A	1.0.0	1.0.0
2934960000	DURAmax DC UPS 24V 20A	1.0.0	1.0.0
2934970000	DURAmax DC UPS 24V 40A	1.0.0	1.0.0

1.4 Complete Documentation



Please also observe the following documents. You can find all documents in the Weidmüller Support Center or in the product catalogue.

- DURAmax DC UPS manual (3184830000)
- CP DC UPS TF installation instructions (1477620000)
- DURAeco LA-BAT operating instructions (2814330000)
- DURAmax DC UPS operating instructions (3075410000)

2 Cybersecurity

General Notes	<p>In order to achieve an effective protection against cyberattacks, every operator of industrial plants must develop a comprehensive security strategy and implement a cybersecurity concept in practice. It is also the operator's responsibility to continuously adapt the implemented cybersecurity measures to technological developments. Weidmüller products and solutions are designed to be part of such a security strategy and help ensure a secure infrastructure.</p> <p>Devices, systems, machines and networks must be protected against unauthorised access. Components should only be connected to a company network or the internet if necessary and only if appropriate security measures such as firewalls and network segmentation have been implemented.</p> <p>Further information about the topic of cybersecurity can be found on the Weidmüller industrial security website. Please observe the following documents:</p> <ul style="list-style-type: none">– Industrial Product Security Guideline– Security Data Sheets <p>For information on known vulnerabilities and current security advisories related to Weidmüller products, please visit the Weidmüller Security Advisory Board.</p> <p>If you have identified a potential security vulnerability related to a Weidmüller product, please report it via the Coordinated Vulnerability Disclosure process.</p>
Productspecific notes	<p>Please observe the following notes to minimise risks such as data loss, unauthorised access or system compromise.</p> <ul style="list-style-type: none">– Install updates immediately to ensure that you are always using the latest supported version. Using outdated or unsupported versions can increase the risk of cyber attacks. You can download the latest software and firmware files from the product catalog.– Updates for the DURAmax DC UPS and for the DURAmax DC UPS Manager will be provided for a period of five years. Observe the information about the firmware update process [► Page 24].– Ensure that the PC operating the UPS Manager software has the latest Windows update installed, that up-to-date virus protection is active, and that the PC is connected to a secure network. Please note that the data exchanged between the UPS control unit and the software is neither signed nor encrypted.– Administrator rights are required to install the DURAmax DC UPS Manager. It is the operator's responsibility to revoke these rights after installation. Using the software with administrator rights poses significant cyberisks.– After the first login to the DURAmax DC UPS Manager, you will be prompted to change the password. Choose a secure password in accordance with the Industrial Product Security Guideline. Always treat your login credentials as confidential. Never share your login credentials.– The DURAmax DC UPS Manager is locked after 5 minutes of inactivity. You can log in again with your password.– Lock the PC on which the DURAmax DC UPS Manager is installed when leaving your workplace.

- The operator is responsible for preventing unauthorised access to the USB port of the UPS control unit.

2.1 Intended use

Hardware The **DURAmax DC UPS** product family is used for a secure and reliable 24 V DC power supply in industrial applications. The DURAmax DC UPS is part of a system that includes a UPS, one or two batteries and a power supply. The connection between the DURAmax DC UPS, the power supply and the battery is a single electrical connection without any data communication. The system protects electrical loads from uncontrolled failures. The DURAmax DC UPS is intended to be installed only in locked areas (e.g. lockable cabinet).

The DURAmax DC UPS is intended for use by qualified and trained personnel only and is built for continuous operation.

Software The **DURAmax DC UPS Manager** is a Windows®-based software that is installed locally on a PC. The software can be downloaded from the Weidmüller product catalogue.

With the DURAmax DC UPS Manager you can configure the parameter and monitor the status of a DURAmax DC UPS. During the configuration, the device must be connected to the PC via the integrated USB-C port. Only connect DURAmax DC variants that are compatible with the software. The use of the DURAmax DC UPS Manager in combination with other hardware products is not intended.

The DURAmax DC UPS Manager includes a user management that allows controlled access to software features. The administrator is responsible for implementing a secure user and role management.

3 Installing the software

3.1 System requirements

The following system requirements are recommended for the installation and operation of the DURAmax DC UPS Manager.

System component	Requirement
Operating System	Windows 10 or later (64-bit)
.NET Framework	Version 4.7.2 or later
CPU	Dual-core CPU, 2.0 GHz or higher
Hard disk storage	minimum 500 MB free disk space
Memory (RAM)	4 GB or more
Interfaces	USB-C port required for device connection and configuration.

3.2 Downloading the software installer

The free software is accessible in the Weidmüller product catalogue with each UPS device.


- ▶ Download the software installer of the DURAmax DC UPS Manager.

3.3 Installing the DURAmax DC UPS Manager

◊ You have administrator rights for your PC.

- ▶ Navigate to the storage location of the software installer.
- ▶ Open the file **setup.exe**.

A dialogue box is opened.

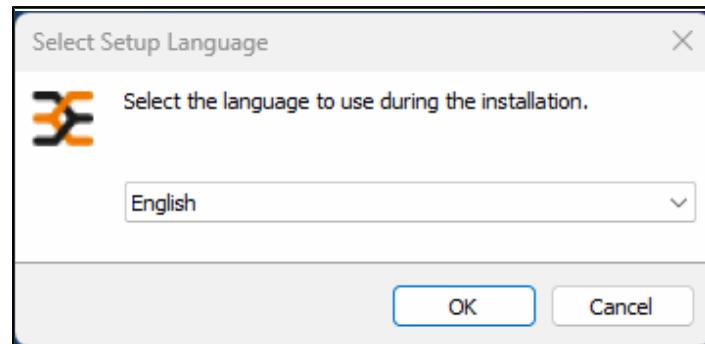

- ▶ In the drop-down list, select the desired language for the installation wizard.
- ▶ Click **OK**.
- ▶ Follow the instructions of the installation wizard.

The software will start up.



If you want to start the software later, remove the tick next to **Launch DURAmax DC UPS**.

4 Starting the software for the first time

The first start-up must be done by the administrator. Only the administrator is authorised to create, delete or modify users.

The default login credentials for the first login are:

- Username: Admin
- Password: Detmold




Change the default login credentials immediately after installation of the Software. Choose a password with at least 8 characters. Use a combination of uppercase and lowercase letters, numbers, and special characters. Always keep your credentials confidential. Never share or publish your login details.

- Start the DURAmax DC UPS Manager.
- A dialogue box is opened.
- Enter the default username.
- Enter the default password.
- A dialogue box is opened.
- Enter the new password twice.
- Click **Save**.
- A dialogue box confirms that the password has been successfully changed.
- Click **OK**.

5 Getting to know the software

5.1 Software overview

System Information You can display the general status and system information of the DURAmax DC UPS via the **Status** tab. The connected UPS model can either be selected manually from the drop-down list or automatically detected if the **auto-detect** function is enabled.

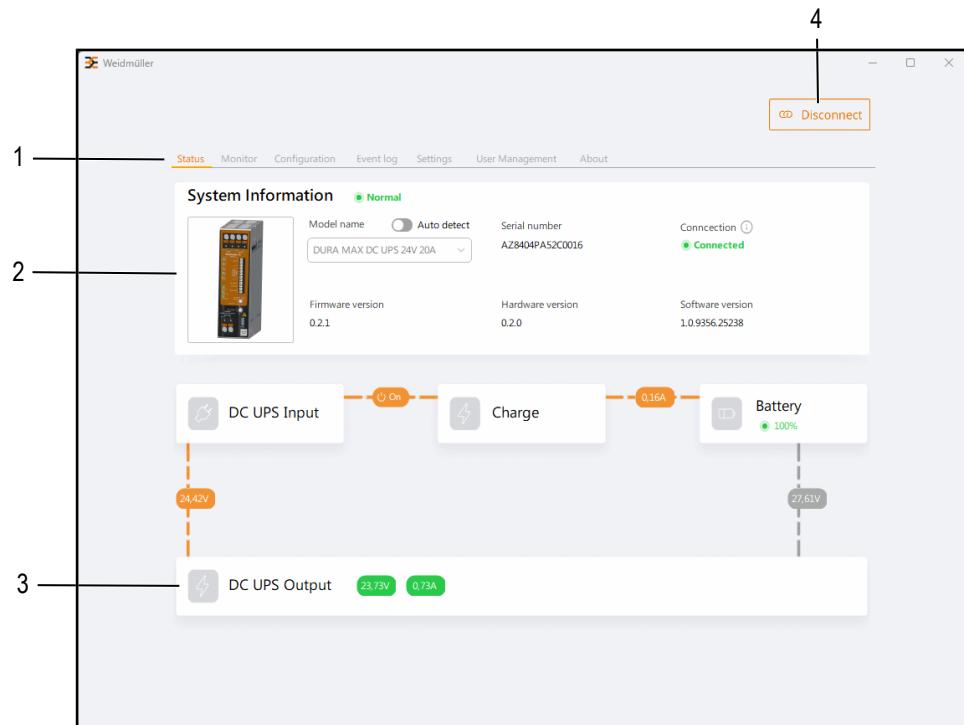

- 1 Menu bar
- 2 Displaying the system information
- 3 Displaying the system status
- 4 Connecting or disconnecting the UPS

Menu bar The menu bar includes the following seven tabs for accessing different functions and information.

Tab	Description
Status	Displaying an overall status and system information of the DURAmax DC UPS.
Monitor	Displaying system values for the connected DURAmax DC UPS, the battery and the power supply.
Configuration	Configuring the connected DURAmax DC UPS, the battery and the PC.
Event log	Displaying, downloading and deleting system logs.
Settings	Changing general software settings and updating the firmware.
User Management	Managing users and access rights.
About	Displaying legal and company information.


5.2 Tasks and user roles

The user management includes three user roles with the permissions described in the following table. The administrator role cannot be assigned and is intended for the initial user. The following table displays which roles are allowed to perform which tasks.

Task	Administrator	Service	User
Managing users	X	-	-
Changing software settings	X	X	-
Updating the firmware	X	X	-
Configuring the UPS	X	X	-
Displaying system status	X	X	X
Monitoring system values	X	X	X
Displaying event logs and downloading log files	X	X	X
Changing the personal password	X	X	X

5.3 System information overview


System information

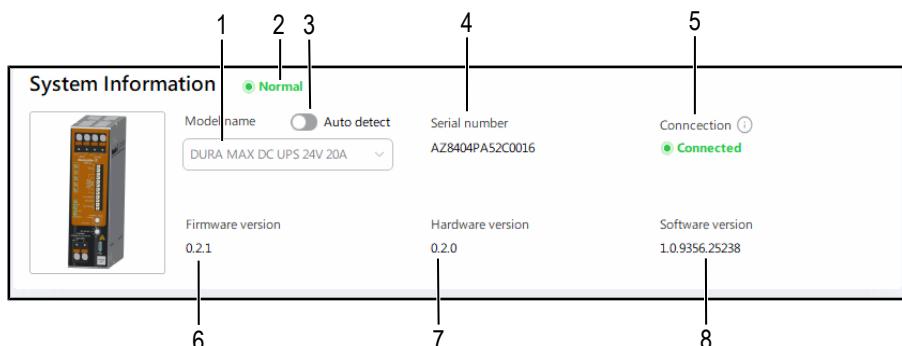

- 1 Selecting the DURAmax model
- 2 Displaying the operation mode
- 3 Switching **Auto detect** on/off
- 4 Displaying the product serial number
- 5 Displaying the connection status of the UPS
- 6 Displaying the firmware version of the connected UPS
- 7 Displaying the hardware version of the connected UPS
- 8 Displaying the software version of the DURAmax DC UPS Manager

5.4 Monitoring overview


You can monitor the status of the UPS, the battery and the power supply via the **Monitor** tab. You can display any active system alarms, allowing users to identify and respond to potential issues.

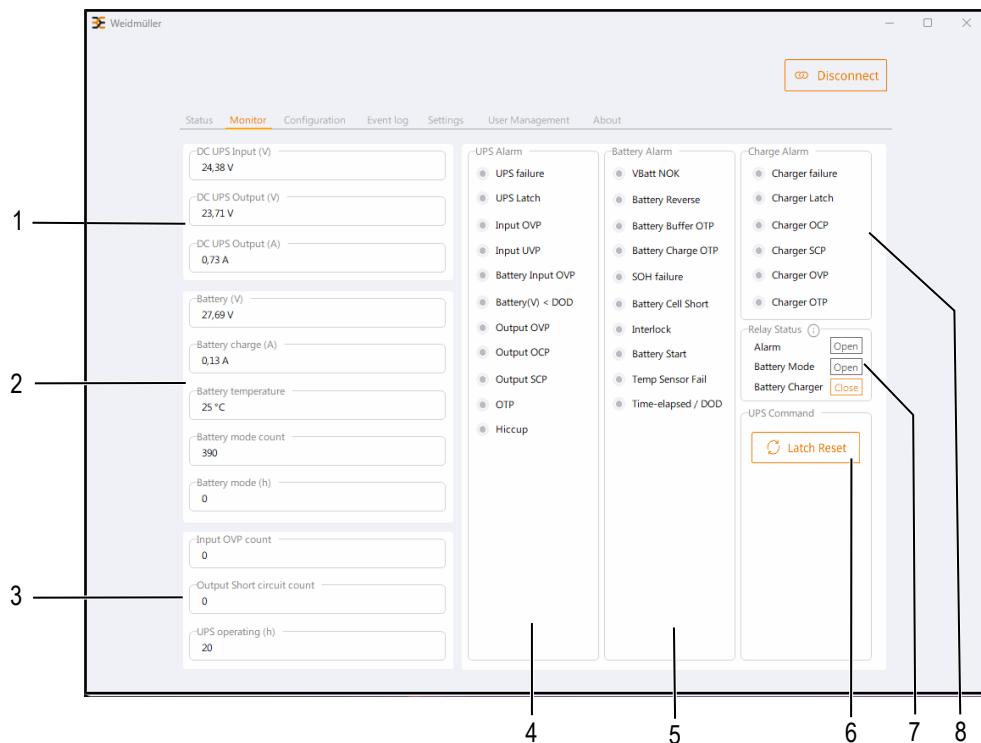

- 1 Displaying UPS DC process data
- 2 Displaying battery process data
- 3 Displaying operating data
- 4 Displaying UPS alarm status
- 5 Displaying battery alarm status
- 6 Resetting the latch
- 7 Displaying the relay status
- 8 Displaying charge alarm status


5.5 Configuration overview

You can adjust settings for the UPS, the battery, and the PC via the **Configuration** tab. You can read and write configuration data, depending on the current mode of the device. Configuration settings can be exported to a file or imported from a file (.ini). If the DURAmax DC UPS is connected to the PC, the software will automatically read its configuration settings when you access the configuration tab.

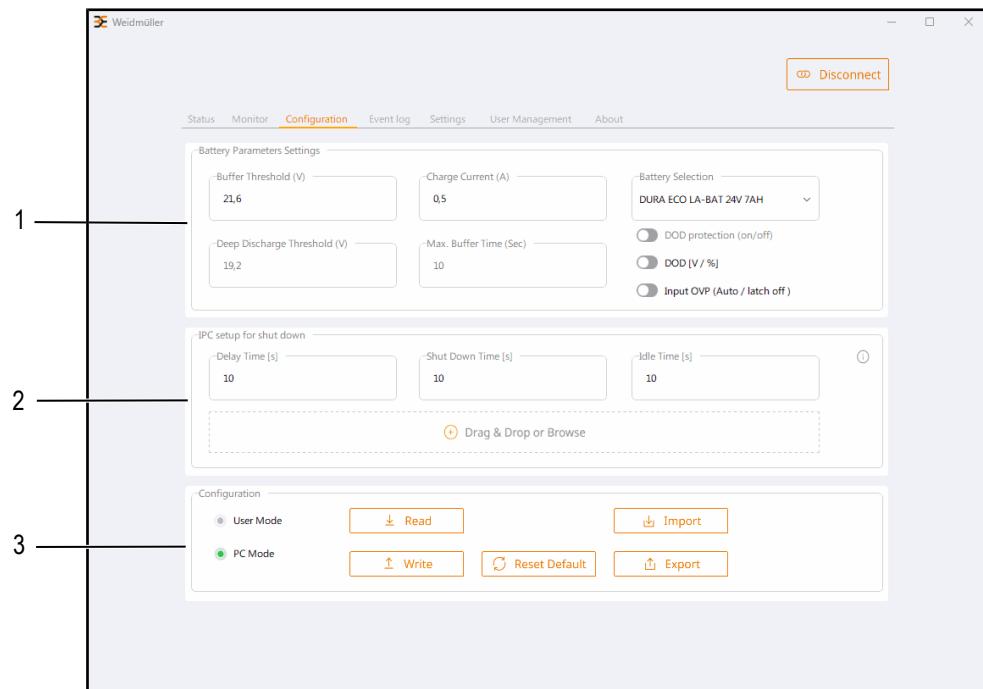


- 1 Setting the battery parameters
- 2 Setting the PC parameters
- 3 Displaying the active battery operating mode
Processing the parameters

Battery parameter settings

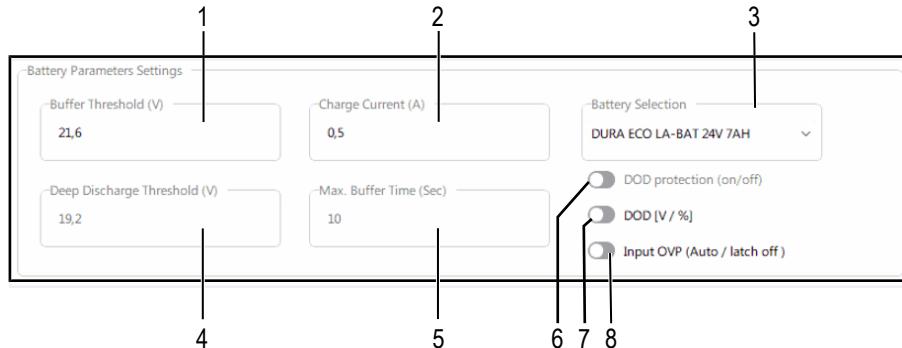


- 1 Setting the voltage threshold at which the system switches to buffer mode
- 2 Setting the maximum current used to charge the battery
- 3 Selecting the connected Battery
- 4 Setting the minimum battery voltage (V) or state of charge (%) before disconnecting the battery. The format depends on the selected setting (DOD [V / %])
- 5 Setting the maximum duration of battery operation during buffering
- 6 Enabling/disabling protection against deep discharge
- 7 Enabling/disabling the discharge limit as voltage or percentage
- 8 Switching between **Auto recovery** mode and **Latch off** mode.

PC configuration

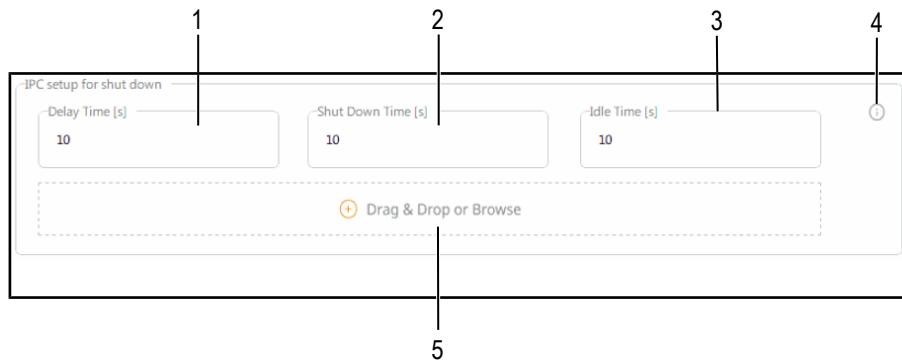

- 1 Setting the time the UPS waits after a power failure before initiating shutdown.
- 2 Setting the time the UPS maintains power to allow the PC to shut down safely.
- 3 Setting the duration the UPS waits to ensure that the input voltage has stabilized before switching back on.
- 4 Displaying a **PC Mode** parameter graph
- 5 Importing a file for PC configuration (.ini)


Configuration modes

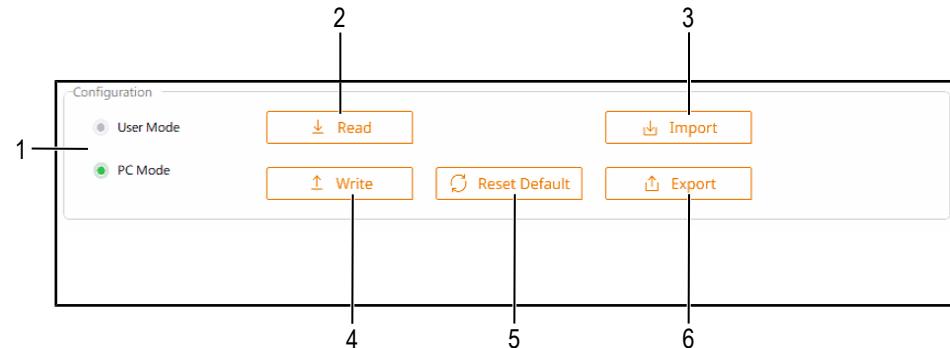

- 1 Displaying active configuration mode
- 2 Reading the configuration values from the UPS
- 3 Importing configuration values (.ini)
- 4 Writing changed or imported configuration values to the UPS
- 5 Resetting all configuration values
- 6 Exporting configuration values (.ini)

5.6 Event log overview


You can display log events and export them via the **Event log** tab. You can delete all log events and customise the sorting.

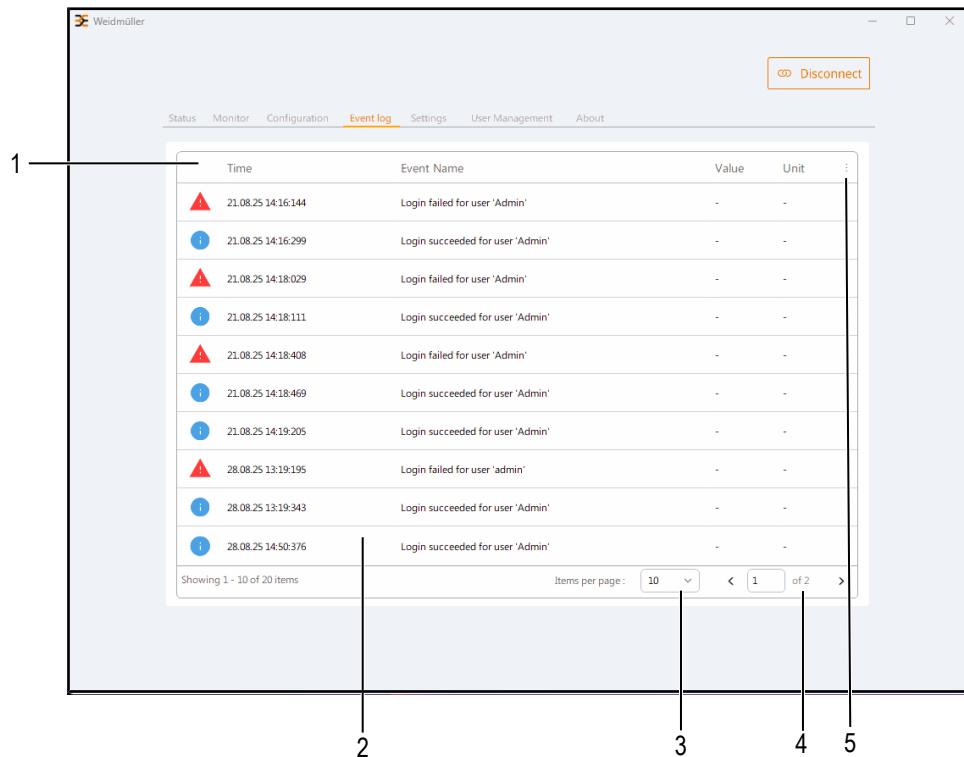

- 1 Changing the order of displayed log events by time
- 2 Displaying the log events
- 3 Setting the number of items per page
- 4 Navigating to other pages
- 5 Downloading a log file (.csv) / Deleting all logs

5.7 Settings overview


You can change the interface language and temperature unit via the **Settings** tab. Firmware updates can be installed to keep the system up to date.

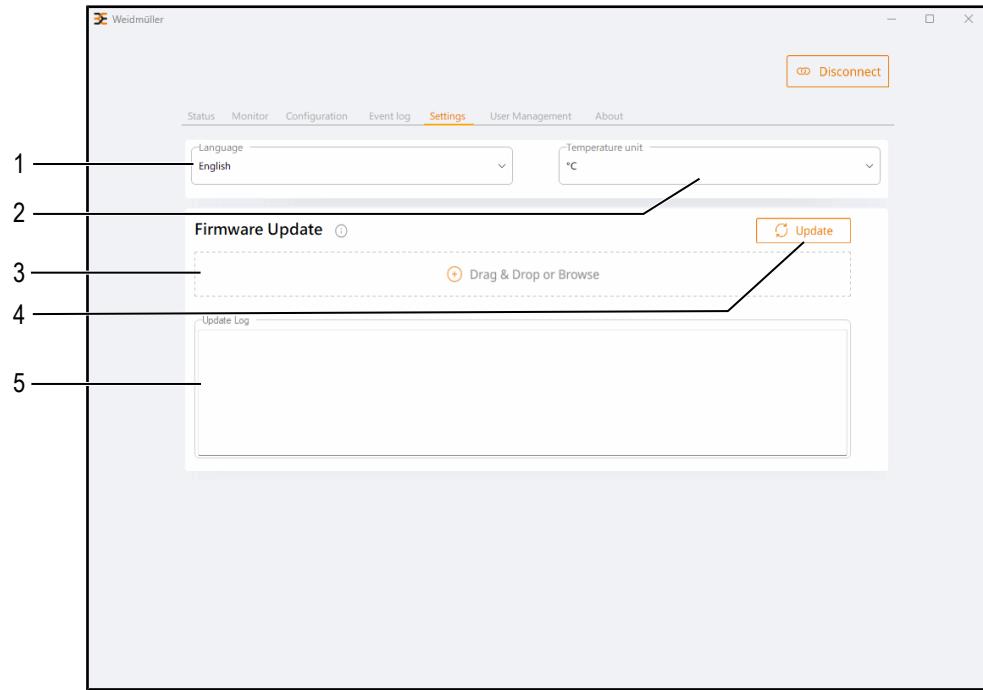

- 1 Selecting the graphical user interface language
- 2 Selecting the displayed temperature unit
- 3 Loading the update file
- 4 Starting the update
- 5 Displaying the update log


5.8 User management overview

You can edit, delete or create user via the **User Management** tab.

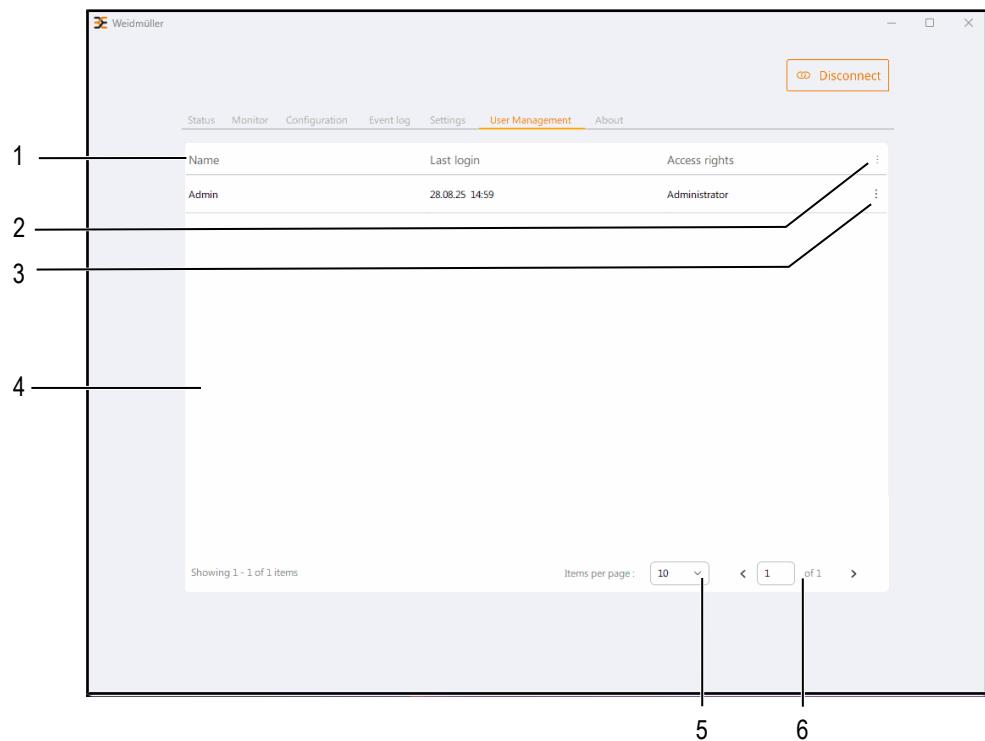

- 1 Changing the order of displayed users
- 2 Creating a new user / Saving changes
- 3 Editing / Deleting a user
- 4 Displaying all created users
- 5 Setting the number of displayed users per page
- 6 Navigating one page back or forward


5.9 About overview

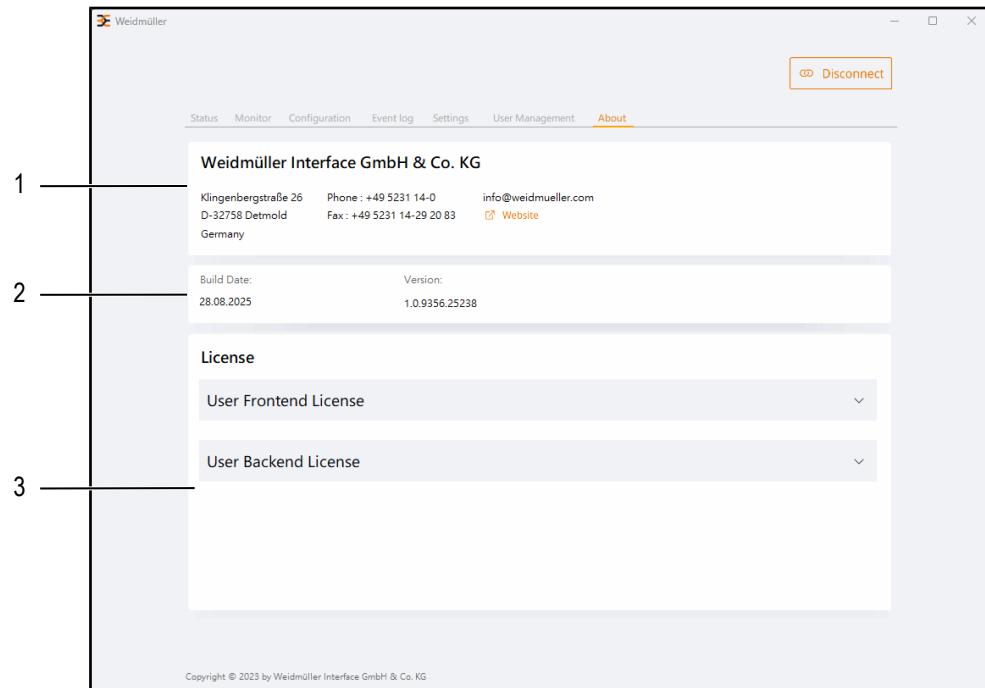

- 1 Displaying company information
- 2 Displaying software version information
- 3 Displaying licence information


6 Setting up the DURAmax DC UPS Manager

6.1 Changing the language

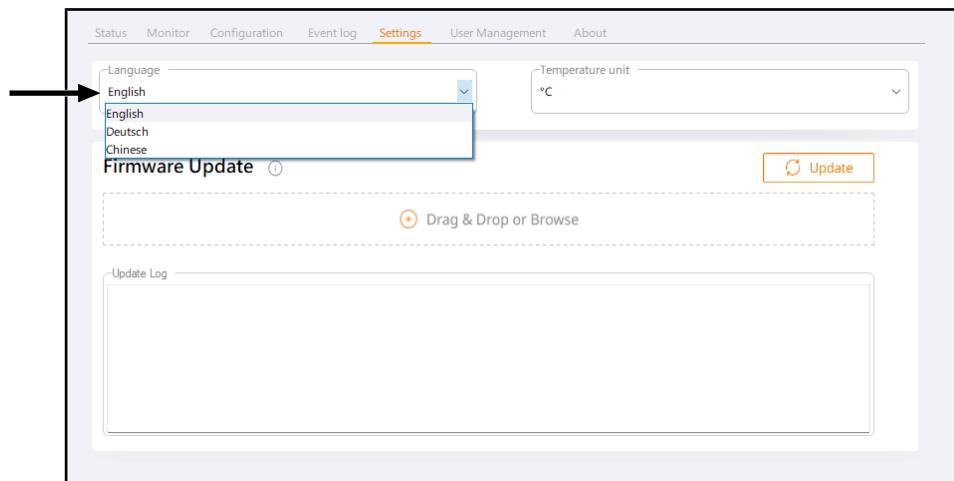

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ▶ In the **menu bar**, click **Settings**.
- ▶ In the **Language** drop-down list, select the desired user interface language.

6.2 Changing the temperature unit

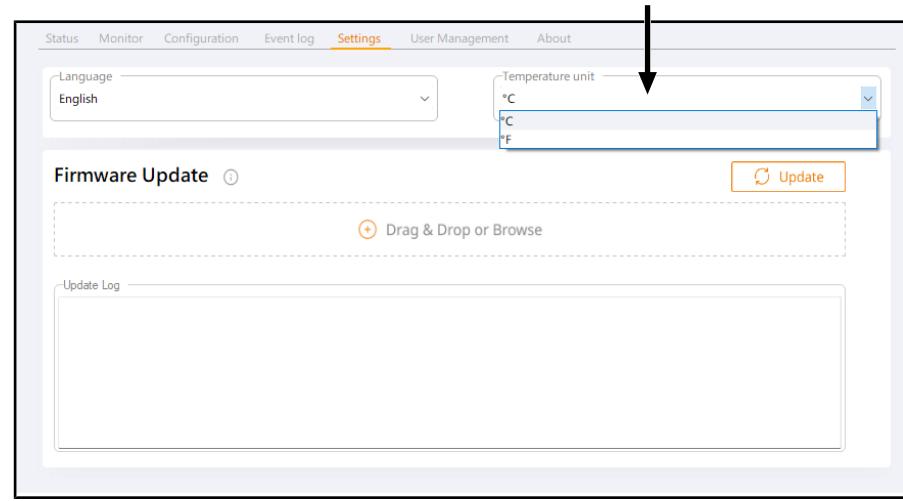

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ▶ In the **menu bar**, click **Settings**.
- ▶ In the **Temperature unit** drop-down list, select the desired temperature unit.

6.3 Changing your user password

◇ You are logged in with the following access rights: **Service** or **User**

- ▶ In the menu bar, click **User Management**.
- ▶ Enter the new password.
- ▶ Click **Apply**.
- ▶ Click **OK**.

6.4 Managing users



Only the administrator is authorised to manage user accounts.

Adding a user

◇ You are logged in as administrator.

- ▶ In the menu bar, click **User Management**.
- ▶ In the table header, click :

Name	Last login	Access rights	⋮
			↗

- ▶ Click **Add**.

Next steps A new user need to be assigned to a desired role.

Assigning the role of a user

You can assign roles with different permissions to a user. Note the information about tasks and target groups [▶ Page 11].

◇ You are logged in as administrator.

- ▶ In the menu bar, click **User Management**.
- ▶ Navigate to the user whose role you want to change.
- ▶ Click :

Test_User_1	15.09.25 13:17	User	⋮
			↗

- ▶ Click **Edit**.
- ▶ In the drop-down menu, select the desired role.
- ▶ Click **Apply**.

Deleting a user

- ◊ You are logged in as administrator.
- ▶ In the menu bar, click **User Management**.
- ▶ Navigate to the user whose password you want to delete.
- ▶ Click :



- ▶ Click **Delete**.

- ▶ Click **Yes**.

Changing the password of a user

- ◊ You are logged in as administrator.
- ▶ In the menu bar, click **User Management**.
- ▶ Navigate to the user whose password you want to change.
- ▶ Click :



- ▶ Click **Edit**.
- ▶ Enter the new password.
- ▶ Click **Apply**.

7 Working with the DURAmax DC UPS Manager

7.1 Connecting a DURAmax DC UPS



The UPS may only be connected by a qualified electrician who is familiar with national and international laws, regulations and standards.




For a successful and safe connection of the DURAmax DC UPS to a PC, observe the information in the hardware manual.



For a successful connection of the DURAmax DC UPS use a compatible USB-C cable that supports data transfer at a minimum of USB 2.0.

- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.
- ◊ Only one DURAmax DC UPS is connected to the PC.
- ▶ Connect the USB-C cable to the USB-C interface of the DURAmax DC UPS.
- ▶ Connect the USB-C cable to the interface of your PC.
- ▶ Open the DURAmax DC UPS Manager.
- ▶ In the **Model name** list box, select the connected DURAmax DC UPS model or use the **Auto detect** function.
- ▶ Click **Connect**.

7.2 Updating the firmware

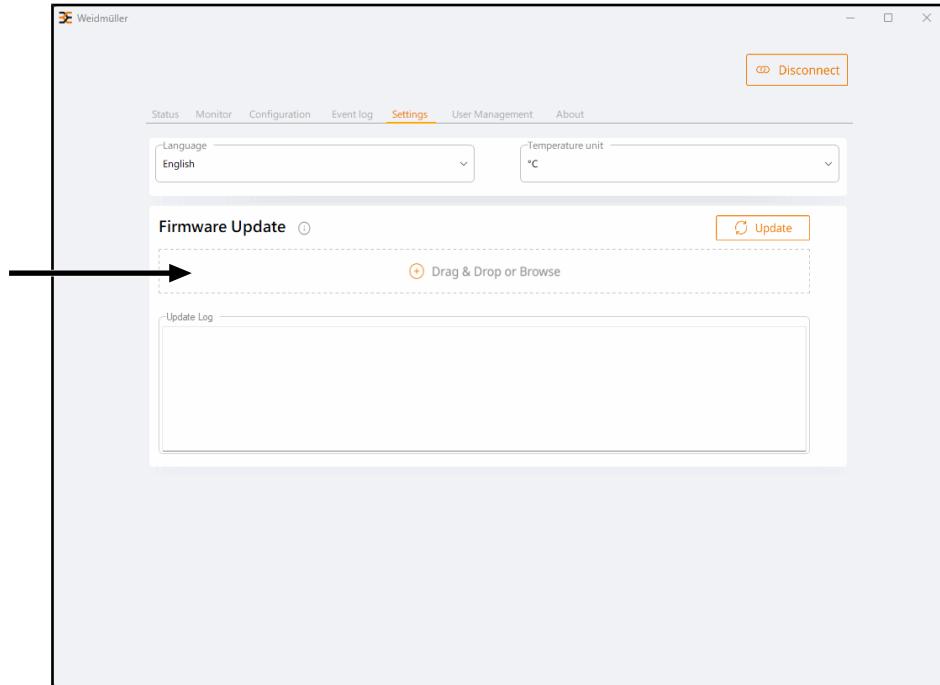

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ You have downloaded the latest software update file from the Weidmüller Product Catalogue.
- ◊ The DURAmax DC UPS is connected to the PC via a USB-C cable [▶ Page 23].
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.
- ◊ The DURAmax DC UPS operates in **normal mode**.
 - ▶ In the **menu bar**, click **Settings**.
 - ▶ Import the software update file into the dialogue box.
 - ▶ Click **Update**.
 - A dialogue box confirms that the update has been completed.
 - ▶ Click **OK**.
 - ▶ Restart the DURAmax DC UPS and wait for 20 seconds.

Next steps Examine the **Update log** to see whether the firmware update was successful.

7.3 Working with logs

The DURAmax DC UPS Manager records system events when a USB connection to the PC is active

Downloading a log file

You can export all events as a CSV file.

- ▶ In the **menu bar**, click **Event log**.
- ▶ In the table header, click :
- ▶ Click **Log Download**.
- A file dialogue is opened.
- ▶ Select a storage location.
- ▶ Enter a file name.
- ▶ Click **Save**.

Deleting log events

- ▶ In the **menu bar**, click **Event log**.
- ▶ In the table header, click :
- ▶ Click **Log Delete**.

7.4 Configuring a DURAmax DC UPS



If the DURAmax DC UPS is connected to the PC, the software will automatically read its configuration settings when you access the configuration tab.

Configuration Settings

Battery Settings	Description
Buffer Threshold (V)	Defines the voltage level at which the UPS switches from mains power to battery operation (buffer mode). This threshold ensures that connected devices continue to receive power when the input voltage drops below a set value.
Charge Current (A)	Defines the maximum current used to charge the battery. A higher value can reduce charging time but may stress the battery.
Battery Selection	Allows the user to select the size of battery that is connected to the UPS.
Deep Discharge Threshold (V)	This setting can only be changed in User Mode . Sets the minimum voltage level or the state of charge (%) at which the battery is considered deeply discharged. This protects the battery from damage caused by over-discharge.
Max. Buffer Time (Sec)	This setting can only be changed in User Mode . Limits the maximum duration the UPS will supply power from the battery.
DOD protection (on/off)	Enables or disables depth of discharge protection (DOD). When activated, it prevents the battery from discharging beyond a defined limit to extend battery life. If this setting is disabled and the battery is deeply discharged, the battery must be replaced. Note that deep discharge is still possible if the cause of the error is not resolved.
DOD [V / %]	Defines the allowable depth of discharge either as a voltage value or a percentage of total capacity.
Input OVP (Auto / latch off)	Defines the behaviour of the overvoltage protection. The UPS overvoltage protection is activated when the input voltage exceeds 32 V DC. In Auto mode , the UPS is automatically reset after an overvoltage event. In Latch off mode , a manual action is required to continue operation [▶ Page 29].
PC Settings	Description
Delay Time (s)	Defines the time delay before the shutdown sequence begins after a power failure.
Shut Down Time (s)	Defines how long the PC is allowed to remain powered during the shutdown process. This setting ensures that the system has enough time to close applications and save data properly.
Idle Time (s)	Defines the duration the UPS waits to ensure that the input voltage has stabilised before switching back on. Note that the battery capacity is the maximum limit. This setting can be used for managing power consumption during periods of inactivity.

Reading configuration settings

You can read the configuration settings from the DURAmax DC UPS and display them in the configuration overview. If the DURAmax DC UPS is connected to the PC, the software will automatically read its configuration settings when you access the configuration tab.

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected to the PC via a USB-C cable [► Page 23].
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.
 - ▶ In the **menu bar**, click **Configuration**.
 - ▶ Click **Read**.
 - A dialogue box confirms that the configuration settings have been read.
 - ▶ Click **OK**.

Writing configuration settings

You can write your configuration settings to the DURAmax DC UPS and the PC.

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected to the PC via a USB-C cable [► Page 23].
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.
 - ▶ In the **menu bar**, click **Configuration**.
 - ▶ Change the desired parameters for the DURAmax DC UPS and the PC.
 - ▶ Click **Write**.
 - A dialogue box is opened.
 - ▶ Enter your password to confirm the changes.
 - A dialogue box confirms that the configuration settings have been written to the device.
 - ▶ Click **OK**.

Resetting configuration settings to default

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected to the PC via a USB-C cable [► Page 23].
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.

► In the **menu bar**, click **Configuration**.

► Click **Reset Default**.

Next steps The reset configuration settings are displayed in the configuration overview. You can write the reset values to the The DURAmax DC UPS and the PC.

Importing configuration settings

You can import the configuration settings via a file upload and display them in the configuration overview (.ini).

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected.
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.

► In the **menu bar**, click **Configuration**.

► Click **Import**.

A dialogue box is opened.

► Select the configuration file from your file system (.ini).

► Click **Open**.

A dialogue box confirms that the configuration settings have been imported.

► Click **OK**.

Next steps The imported configuration settings are displayed in the configuration overview. You can write the imported values to the The DURAmax DC UPS and the PC.

Exporting configuration settings to a file

You can export the configuration settings via a file export (.ini).

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected.
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.

► In the **menu bar**, click **Configuration**.

► Set the desired parameters for the DURAmax DC UPS and the PC.

► Click **Export**.

A file dialogue is opened.

► Select a storage location.

► Enter a file name.

► Click **Save**.

A dialogue box confirms that the configuration settings have been exported.

► Click **OK**.

7.5 Resetting the latch

The **Latch Reset** function can be used if the power supply of the UPS is switched off because of an overvoltage or overtemperature event. The latch can only be reset after the fault has been resolved.

- ◊ You are logged in as administrator or the service role has been assigned to your account.
- ◊ The DURAmax DC UPS is connected to the PC via a USB-C cable [► Page 23].
- ◊ The rotary coding switch **battery operating modes** of the DURAmax DC UPS is set to **User-Mode** or **PC-Mode**.

► In the **menu bar**, click **Monitor**.

► Click **Latch Reset**.

Glossary

PC-Mode

The PC Mode is a battery operating mode of the DURAmax DC UPS. It can be selected via the rotary coding switch on the UPS. This mode requires a permanent USB connection between the UPS and the PC. It supports configuration, event logging and controlled system shutdowns. The system will send a shutdown signal to the PC based on the configured buffer time and the requirements of the customer's application.

User-Mode

The User-Mode is a battery operating mode of the DURAmax DC UPS. It can be selected via the rotary coding switch on the UPS. This mode works with fixed parameters than can be set by the DURAmax DC UPS Manager. It does not support continuous communication with the UPS and is not meant for PC use. Changing the configuration settings or logging system events is only possible when the UPS is connected to the PC.

Weidmüller Interface GmbH & Co. KG
Klingenbergsstraße 26
32758 Detmold, Germany
T +49 (0)5231 14-0
F +49 (0)5231 14-292083
www.weidmueller.com

Dokument-Nr. 3184840000
Revision 00/11.2025