

Hardware installation guide

Managed Gigabit Ethernet PoE Switch

IE-SW-AL12M-8GTPOE-4GESFP-120W (3109760000)
IE-SW-AL12M-8GTPOE-4GESFP-240W (3109770000)

1. Introduction

Weidmüller Ethernet switches are designed for industrial applications and fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

2. Safety notes

 The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.

 The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device.

The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU and 2014/30/EU.

 Installation, commissioning and maintenance may only be performed by qualified electricians.

 Observe the operating instructions.

-  – Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label.
- Do not block air ventilation holes.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- Shall be mounted in the industrial control panel and ambient temperature is not exceed 75 °C.
- Utilisation en intérieur et degré de pollution II, il faut l'essuyer avec un chiffon sec pour nettoyer l'appareil et son étiquette.
- Ne bouchez pas les orifices de ventilation.
- Si l'appareil est utilisé d'une manière non spécifiée par le fabricant, la protection qu'il apporte peut se voir diminuée.
- Doit être monté dans le panneau de commande industriel et la température ambiante ne doit pas dépasser 75 °C.

Intended use

The device is intended for the realisation of communication networks within an industrial environment. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

Environmental conditions

This equipment is intended to be used in a restricted access location.

When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data. Also make sure that the air flow will not be compromised by other devices. Ensure that the mounted and wired device is not exposed to any mechanical stress.

Cyber security

 Please observe the Weidmüller Industrial Cyber Security website. Please also observe the following documentation on the website:

- Industrial Product Security Guideline
- Security Data Sheet Full Gigabit Ethernet Advanced Line Switches

FCC compliance

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3. Package checklist

The Ethernet switch is delivered with a 6-pin terminal connector and protective caps for RJ45 ports and SFP ports. Additionally, each Ethernet switch is shipped with the following items:


- Hardware installation guide (printed)
- Serial console cable
- Leaflet for China RoHS Declaration (printed)

4. Panel layout

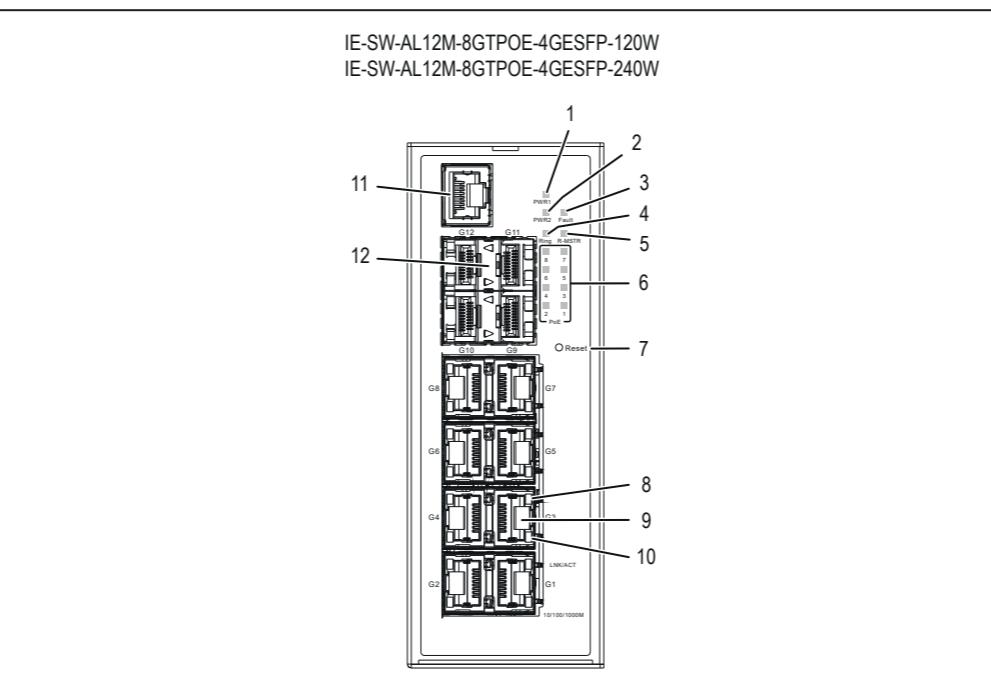

- 1 Power input 1 LED (PWR1)
- 2 Power input 2 LED (PWR2)
- 3 Fault LED (PWR1/PWR2 fault or port link loss)
- 4 Ring status LED
- 5 Ring master status LED
- 6 RJ45 port PoE indicators
- 7 Reset button
- 8 RJ45 port Link/Activity LEDs
- 9 10/100/1000 Base-T(X) Ports
- 10 LED for speed indication (Green=1000 Mbps, Amber=100 Mbps, Off=10 Mbps)
- 11 Serial console port (115200 Baud, 8 Data bit, No Parity, 1 Stop bit, No Flow Control)
- 12 100/1000Base-X ports (SFP slots)


5. DIN rail mounting

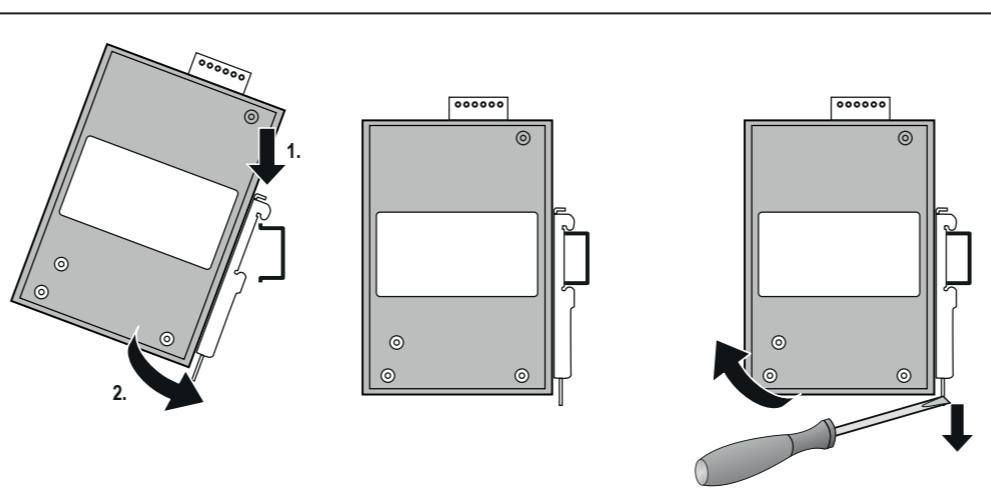

1. Place the mounting clip from above onto the DIN rail.
2. Press the device against the DIN rail until the mounting clip engages on the DIN rail with a click.

► To remove the Ethernet switch from the DIN rail pull down the latch with a screwdriver then move the device away from the DIN rail and lift it up.

6. Mounting dimensions [mm]

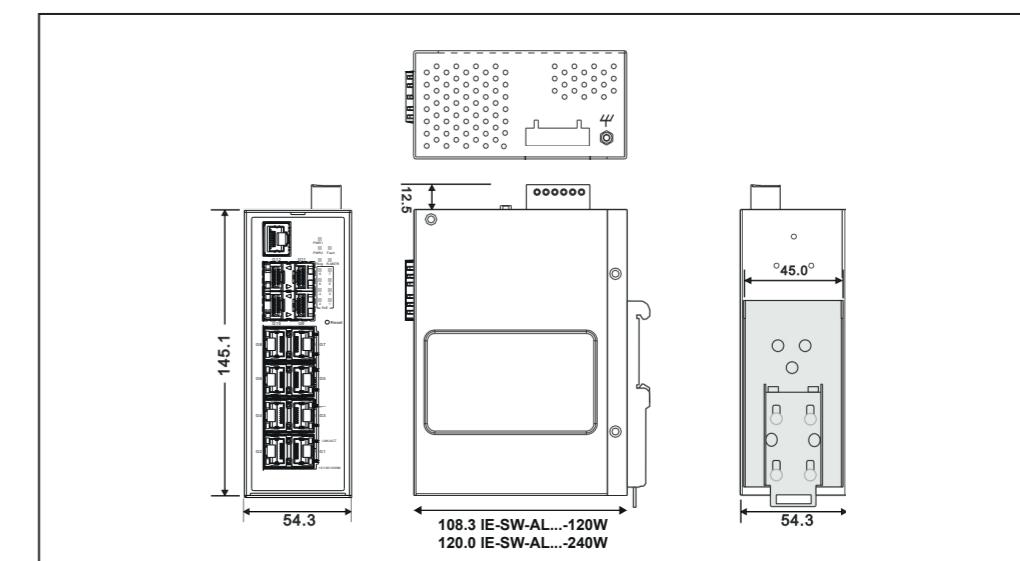

7. Grounding



ATTENTION

- Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).
- Run the ground connection from the ground screw to the grounding surface prior to connecting devices.
- This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.
- The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).

8. Wiring redundant power inputs and fault alarm relay

The switch has redundant power supply inputs and provides a fault alarm relay for detecting the user-configurable failure events

- Interruption of Power 1 or Power 2 (power failure)
- Link loss of Ethernet ports (port link down)




Take into consideration the following guidelines before wiring the device:

- Terminal block is suitable for 12-24AWG, torque value 4.5 lb-in.
- The temperature rating of the input connection cable should be higher than 105 °C.
- Supplied by SELV source evaluated by UL 61010-1 or 61010-2-201 power supply only.

Avertissement

Tenez compte des directives suivantes avant de câbler l'appareil:

- Le bornier est convient pour 12-24AWG, valeur de couple 4.5 lb-in.
- La température de service nominale du câble d'entrée doit être supérieure à 105 °C.
- Fourni par la source SELV évaluée uniquement par l'alimentation UL 61010-1 or 61010-2-201.

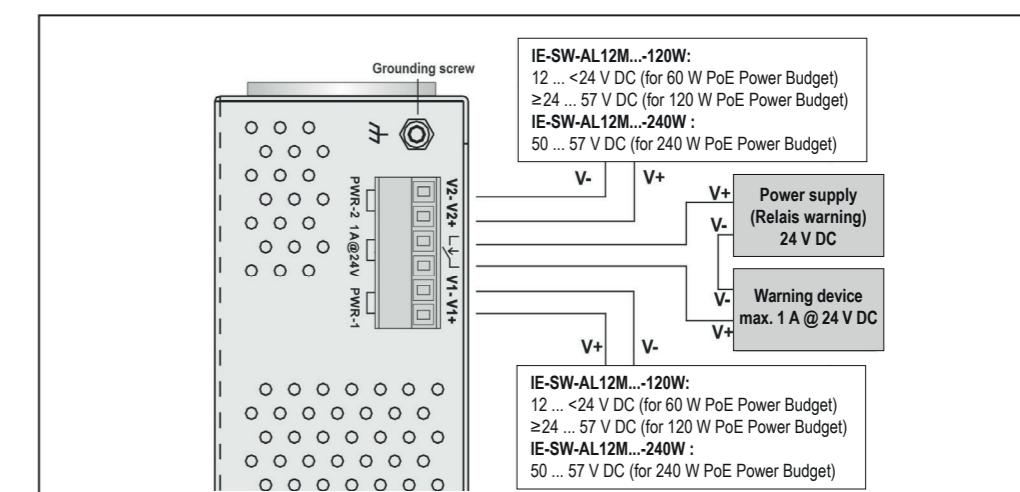

Behaviour of the failure relay

- Relay contact is closed if the device is powered off.
- Relay contact is open if the device is powered on and no alarm conditions exist. Neither power failure alarms nor port link loss alarms are activated (Web menu/ Warnings/Fault Relay Alarm).
- Relay contact closes if any of the activated alarm condition happens.

9. Communication connections

The Ethernet switch is equipped with following communication interfaces:


- 8 x 10/100/1000BASE-T(X) PoE ports (P.S.E.)
- 4 x 100/1000BASE-X ports (SFP slots)

 Please only use cables suitable for the respective type of communication and ensure that signals are protected from possible interference.

9.1 10/100/1000BASE-T(X) RJ45 PoE ports (P. S. E.)


For communication without PoE sourcing the switch supports auto negotiation speed, Full/Half duplex mode and auto MDI/MDI-X connection, means automatic setting of pinouts for both MDI ports (NIC-type) or MDI-X ports (HUB/Switch-type). In case of active PoE sourcing the switch uses the pinout of "Alternative A, MDI mode" of 802.3af/802.3at standards. The following table describes the pinouts.

10/100/1000BASE-T(X) RJ45 Ports

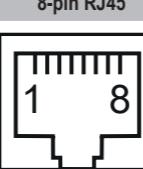10/100BASE-T(X) MDI/MDI-X			1000BASE-T(X) MDI/MDI-X			8-pin RJ45
Pin	MDI port	MDI-X port	Pin	MDI port	MDI-X port	
1	TD+ (transmit) with PoE Power +	RD+ (receive)	1	BI_DA+ with PoE Power +	BI_DB+	
2	TD- (transmit) with PoE Power +	RD- (receive)	2	BI_DA- with PoE Power +	BI_DB-	
3	RD+ (receive) with PoE Power -	TD+ (transmit)	3	BI_DB+ with PoE Power -	BI_DA+	
4	not used	not used	4	BI_DC+	BI_DD+	
5	not used	not used	5	BI_DC-	BI_DD-	
6	RD- (receive) with PoE Power -	TD- (transmit)	6	BI_DB- with PoE Power -	BI_DA-	
7	not used	not used	7	BI_DD+	BI_DC+	
8	not used	not used	8	BI_DD-	BI_DC-	

9.2 100/1000BASE-X SFP fiber optic port


The 100/1000BaseSFP type slots require either a 100BaseSFP or a 1000BaseSFP fiber transceiver (mini-GBIC) to work properly. Please only use SFP modules and cables that are compatible with each other to establish an optical connection.

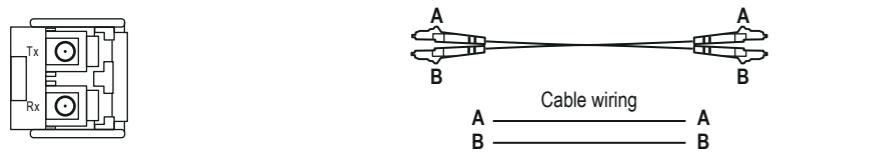

For a LC-Port with separate transmit and receive ports please remember to connect the Tx (transmit) port of device 1 to the Rx (receive) port of device 2, and the Rx (receive) port of device 1 to the Tx (transmit) port of device 2.

9.3 RS232 console port

The RS232 interface with RJ45 connector can be used to access the switch console for configuration.

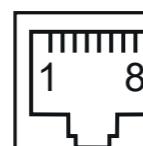Pin	Pin assignment	Communication parameters	8-pin RJ45
1	not assigned	Baud rate: 115200 bps	
2	RxD	Data bit: 8	
3	TxD	Parity: No	
5	GND	Stop bit: 1	
4, 6 ... 8	not assigned	Flow control: No	

10. Commissioning the device

Before commissioning the device for the first time, we strongly recommend checking the installed firmware version and updating to the latest version, if a newer one is available. Please check and download the newest version from the Weidmüller website.

After updating the device to the latest firmware at first commissioning, we strongly recommend performing a reset to factory defaults additionally after the new firmware is running.

11. User management

11.1 Device access (login to web interface)

The web interface of the switch can be accessed via following factory default settings:

IP address / Netmask: 192.168.1.110 / 255.255.255.0

User name: admin

Password: Detmold

► Connect the PC to any Ethernet port of the managed switch and set the PC's IP address to a free one of range 192.168.1.0 / 255.255.255.0.

► Start a web browser and enter the IP address of the connected switch into the browser's address line (<http://192.168.1.110>).

► After the appearance of prompt (login) enter the login credentials.

► Confirm your input with **OK**.

The home page of the switch will be displayed.

 For detailed information about configuration and use of the device features please regard the manual.

The manual is available to download from the Weidmüller website: Product catalogue/Automation & Software/Industrial Ethernet/Advanced Line managed Switches>Select Product/Click and expand section „Downloads“/Download needed software or documentation.

11.2 Rebooting or resetting the switch

 The behaviour of the reset button can be configured in the web interface (menu **Factory Default**). The default setting acts as described here.

► To reboot the switch (warm start) and set the IP to factory default IP, press the reset button for less than 5 seconds.

► To reset the switch configuration to factory default settings, press the reset button for more than 5 seconds.

12. LED indicators

The following table describes the functions of the LED indicators at the front panel.

LED	Color	Status	Description
PWR1	Green	On	Power supplied to power input PWR1.
PWR2	Green	On	Power supplied to power input PWR2.
R-MSTR (ring master)	Green	On	Is ring master of an enabled O-Ring.
RING	Green	On	O-Ring redundancy is enabled.
		Blinking	Ring structure is broken (no redundancy).
FAULT	Amber	On	Fault relay indication for power failure and port link loss.
PoE	Green	On	Power supplied over Ethernet
LINK/ACT RJ45 ports G1 – G8	Green	On	Port link is active.
		Off	Port link is inactive.
		Blinking	Data is transmitted.
10/100/1000M RJ45 ports G1 – G8	Green/Amber	Green	Port speed is set to 1000 Mbps
		Amber	Port speed is set to 100 Mbps
		Blinking	Port speed is set to 10 Mbps
LINK/ACT SFP ports G9 – G12	Green	On	Port link is active.
		Blinking	Data is transmitted.

13. Disposal

 Observe the notes for proper disposal of the product. You can find the notes here: www.weidmueller.com/disposal.



14. Specifications

Technology	IEEE 802.3 for 10BASE-T IEEE 802.3u for 100BASE-TX and 100BASE-FX IEEE 802.3ab for 1000BASE-T IEEE 802.3z for 1000BASE-X IEEE 802.3x for flow control IEEE 802.3af/at for Power over Ethernet IEEE 802.3ad for port trunk with LACP IEEE 802.1D for STP (Spanning Tree protocol) IEEE 802.1w for RSTP (Rapid Spanning Tree protocol) IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol) IEEE 802.1p for Class of Service IEEE 802.1Q for VLAN Tagging IEEE 802.1X for Authentication IEEE 802.1AB for LLDP (Link Layer Discovery Protocol)
Processing type	Store-and-forward
MAC address table size	8K
Backplane bandwidth	20 Gbps
Interfaces	
RJ45 ports	8 x 10/100/1000BASE-T(X) PoE ports (P.S.E.) compliant to PoE standard IEEE 802.3af/at
Fibre optic ports	4 x 100/1000BASE-X SFP slots
RS232 console port	RS232 Interface with RJ45 connector for console access
LED indicators	PWR1, PWR2 (Power), Fault (Relay), Ring Master, Ring Status, Port Link/Activity/Speed, PoE
Relay contact	Max. 1A at 24 V DC for Power Failure and Port Link Loss
Power supply	IE-SW-AL12M-8GTPOE-4GESFP-120W IE-SW-AL12M-8GTPOE-4GESFP-240W
Input voltage	12 ... 57 V DC 50 ... 57 V DC
Power consumption (max., no PoE)	12 W
Connection	Removable 6-pin terminal block, Wiring cable 12 ... 24AWG
Overload current protection	Yes
Reverse polarity protection	Yes
PoE	IE-SW-AL12M-8GTPOE-4GESFP-120W IE-SW-AL12M-8GTPOE-4GESFP-240W
Total power budget	60 W at 12 < 24 V DC 240 W at 50 ... 57 V DC 120 W at 24 ... 57 V DC
PoE pinout	Mode A: Pin 1, 2 (V+); Pin 3, 6 (V-); Alternative A; MDI IE-SW-AL12M-8GTPOE-4GESFP-120W IE-SW-AL12M-8GTPOE-4GESFP-240W
Physical characteristics	
Housing	IP30 protection, metal
Dimensions (W x H x D)	54.3 x 145.1 x 108.3 mm (2.14 x 5.71 x 4.26 inch) 54.3 x 145.1 x 120 mm (2.14 x 5.71 x 4.72 inch)
Weight	924 g 779 g
Installation	DIN-rail
Environmental conditions	
Operating temperature	-40 ... 75 °C (-40 ... 167 °F)
Storage temperature	-40 ... 85 °C (-40 ... 185 °F)
Ambient relative humidity	5 ... 95 % (non-condensing)
Operating altitude	Up to 2000 m
Regulatory approvals	
Safety	UL 61010-1, UL 61010-2-201
EMC	EN 55032, EN 55024, FCC Part 15 Subpart B Class A, IEC 61000-4-2 ESD: Contact: 4 kV; Air: 8 kV, IEC 61000-4-3 RS: 80 MHz to 1 Ghz: 3 V/m, IEC 61000-4-4 EFT: Power: 0.5 kV; Signal: 0.5 kV, IEC 61000-4-5 Surge: Power: 0.5 kV; Signal: 1 kV, IEC 61000-4-6 CS: 3 V
Shock	IEC 60068-2-27
Free fall	IEC 60068-2-31
Vibration	IEC 60068-2-6
MTBF	IE-SW-AL12M-8GTPOE-4GESFP-120W IE-SW-AL12M-8GTPOE-4GESFP-240W
Time	487,579 hrs 516,416 hrs
Database	Telcordia SR332
Warranty	
Time period	5 years

Weidmüller Interface GmbH & Co. KG
Klingenbergsstraße 26
32758 Detmold, Germany
T +49 5231 14-0
F +49 5231 14-292083
www.weidmueller.com

3151960000/00.04.2025

Weidmüller 