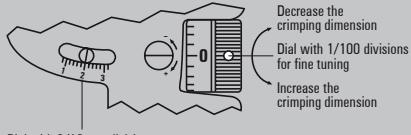


## Crimping settings

### Adjustment mechanism to set the crimping and locator position

**Weidmüller Interface GmbH & Co. KG**  
 Klingenbergsstraße 16  
 D-32758 Detmold  
 Germany  
 Fon: +49 5231 14-0  
 Fax: +49 5231 14-292083  
[www.weidmueller.com](http://www.weidmueller.com)

Adjusting the crimping dimensions				
The adjustment mechanism is used to set the crimping depth of the crimping mandrel as described below.				
The adjusting dial is used to prepare the infed; the dial can be turned clockwise (for decreasing the dimension) or counter-clockwise (for increasing the dimension).				
Adjustment precision				
<ul style="list-style-type: none"> <li>1 division mark on the dial v 1/100 mm adjustment</li> <li>1 complete revolution of the dial v 0.2 mm adjustment read from scale</li> <li>5 revolutions of the dial v 1 mm adjustment read from scale</li> </ul>				
 <p>Dial with 2/10 mm divisions</p> <p>Decrease the crimping dimension</p> <p>Dial with 1/100 divisions for fine tuning</p> <p>Increase the crimping dimension</p>				
Verifying the crimping dimension				
<p>The four-mandrel crimping tool is pre-set at the factory. The actual crimping size should still be checked periodically. It should be checked using the plug gauge (<math>\varnothing</math> 1.0 mm) that is included with the crimping tool as described below. Use the dial on the stationary tool shank to set the size to 1.0 mm on the scale. Set to the zero-point tick mark on the dial and close the tool. (Refer to the diagram showing the crimping size adjustment.) At this setting, it should be possible to move the 1.00-mm-<math>\varnothing</math> plug gauge without any play or extra room. If this is not possible, then the size deviation (+/-) can be determined using the dial's fine-adjustment mechanism. If this size check reveals that the tool is not within the tolerance range specified by the manufacturer of the contacts, then you should contact the manufacturer of the tool for further inspection.</p>				
Servicing and maintenance				
<p>Before you start to use the hand crimping tool, it must be clean and in proper working condition. Crimp residue or fragments must be removed from the crimping jaws and locator. The joints should be regularly lubricated using machine oil to protect them from dirt. Make sure that all bolts are secured with locking rings.</p>				

### Technical data

Crimp contact	Wire cross-section (mm <sup>2</sup> )	Crimping mandrel adjustment	Locator position	Order No.		
Crimp male 1 mm	0.14	0.86	1	<b>1170150000</b>		
	0.25	0.90				
	0.34	0.95				
	0.56	0.98				
	0.75	1.03				
	1.00	1.08				
Crimp female 1 mm (0.08-0.56 mm <sup>2</sup> )	0.08	0.75	2	<b>1995860000</b>		
	0.14	0.78				
	0.25	0.82				
	0.34	0.86				
	0.56	0.90				
	0.34 (0.34-1.00 mm <sup>2</sup> )	0.77				
Crimp female 1 mm (0.34-1.00 mm <sup>2</sup> )	0.56	0.82	2	<b>1170180000</b>		
	0.75	0.88				
	1.00	0.95				
	0.14	0.65	3	<b>1170220000</b>		
	0.25	0.68				
	0.34	0.72				
Crimp male 1.5 mm	0.56	0.81				
	0.75	0.95				
	1.00	1.07				
	0.14 (0.14-0.75 mm <sup>2</sup> )	0.70	2	<b>1170230000</b>		
	0.25	0.73				
	0.34	0.77				
Crimp female 1.5 mm (0.34-1.00 mm <sup>2</sup> )	0.56	0.85				
	0.75	1.05				
	1.00	1.13				
	0.75	1.20	2	<b>1170240000</b>		
	1.00	1.35				
	1.50	1.45				
Crimp male 2.0 mm	2.50	1.60				
	0.75	1.25	2	<b>1170250000</b>		
	1.00	1.35				
	1.50	1.45				
	2.50	1.60				
	0.75 Crimp female 2.0 mm	1.25				

### Ordering data

Type	Order No.
SAI M23 CRIMPING TOOL 2	<b>1203960000</b>