



# Energy Analyser D550/D550-24

Manual



#### Revision history

Version	Date	Change
0.0	02/2016	First edition
1.0	01/2017	Expansion of the product family (D550-24)

#### Contact address



Weidmüller Interface GmbH & Co. KG  
Klingenbergstraße 16  
D-32758 Detmold  
Phone +49 (0) 5231 14-0  
Fax +49 (0) 5231 14-292083  
[info@weidmueller.com](mailto:info@weidmueller.com)  
[www.weidmueller.com](http://www.weidmueller.com)

## Table of contents

<b>General information .....</b>	<b>5</b>
<b>Inspection on receipt .....</b>	<b>6</b>
Scope of supply .....	6
Notes on use .....	7
<b>Product Description .....</b>	<b>7</b>
Intended use .....	7
Energy Analyser D550/D550-24 features .....	8
Methods of measurement .....	8
Operating concept .....	8
ecoExplorer go programming software .....	9
Three-phase 4-wire systems .....	9
Three-phase 3-wire systems .....	10
<b>Use .....</b>	<b>11</b>
Key functions .....	11
Concealed key (service) .....	11
Display mode .....	11
Programming mode .....	12
Display password .....	12
Homepage password .....	12
<b>Installation .....</b>	<b>13</b>
Installed position .....	13
Power supply voltage .....	13
Current measurement .....	14
Ammeter .....	15
Direct measurement .....	16
Voltage measurement .....	16
Interfaces .....	18
Digital inputs and outputs .....	21
Temperature measurement input .....	23
<b>Putting into service .....</b>	<b>23</b>
Applying the power supply voltage .....	23
Frequency measurement .....	23
Applying the measuring-circuit voltage .....	24
Phase sequence .....	24
Applying the measuring-circuit current .....	24
Checking the energy measurement .....	24
<b>Configuration .....</b>	<b>25</b>
Current transformer ratio .....	25
Current measurement connection options .....	25
Voltage transformer ratio .....	26
Voltage measurement connection options .....	26
Interfaces .....	27
RS232 .....	27
RS485 .....	27
Ethernet .....	27
Recordings .....	29
<b>System information .....</b>	<b>29</b>
Overrange .....	29
Serial number .....	29
Date .....	30
Firmware release .....	30
Time .....	30
<b>Service and maintenance .....</b>	<b>30</b>
Repair and calibration .....	30
Front film .....	30
Battery .....	30
Disposal .....	30
Firmware update .....	30
Service .....	30
Trouble shooting .....	31

<b>Technical specifications .....</b>	<b>32</b>
General information .....	32
Ambient conditions during operation .....	32
Transport and storage .....	32
Power supply voltage .....	32
Protection class .....	32
Digital inputs .....	32
Digital outputs .....	32
Temperature measurement input .....	32
Interfaces .....	33
Measurement uncertainty .....	33
Measuring inputs .....	33
Parameter list .....	34
Measured value displays .....	36
Declaration of conformity .....	36
Dimensioned drawings .....	37
Energy Analyser D550/D550-24 connection example .....	38
<b>Quick Reference Instructions .....</b>	<b>39</b>

## General information

### Copyright

This manual is subject to the statutory provisions of copyright law and may not be photocopied, reprinted, or reproduced - in whole or in part, by mechanical or electronic means - nor otherwise duplicated or republished, without the binding written permission of:

Weidmüller Interface GmbH & Co. KG  
Klingenbergstraße 16  
32758 Detmold  
Germany

### Trademarks

All trademarks and the resulting rights are the property of their respective owners.

### Disclaimer

Weidmüller accepts no responsibility for errors or deficiencies within this manual, and makes no commitment to keep the contents of this functional description up to date.

### Comments on the manual

We welcome your comments. If anything in this manual seems unclear, please let us know by sending an e-mail to: [info@weidmueller.com](mailto:info@weidmueller.com)

### Meaning of symbols

This manual uses the following pictograms:



#### **Dangerous voltage!**

Risk to life or serious injury. Before commencing work on the system and the device, they must first be de-energised.



#### **Please note!**

Please pay attention to the documentation. This symbol is intended to warn you of potential dangers, which could occur during installation, commissioning and use.



#### **Note!**



Ground wire connection

### Inspection on receipt

Fault free and safe use of this device requires appropriate transport, proper storage, erection and assembly as well as careful operation and maintenance. If it can be assumed that safe operation is no longer possible, the device must be immediately taken out of service and secured against being accidentally started up.

The device must be unpacked and packed with the usual care, without the use of force and only using suitable tools. The devices must be visually inspected for perfect mechanical condition. Please also note and follow the installation instructions enclosed with the device.

It can be assumed that safe operation is no longer possible if the device, e.g.

- has visible damage,
- no longer works, despite intact mains power supply,
- has been exposed to unfavourable conditions (e.g. storage outside the permissible climatic limits without adjustment to the ambient climate, condensation, or similar) for a lengthy period or was exposed to unfavourable effects or loads during transport (e.g. fall from a large height even if there is no visible external damage, or similar).

Please check the scope of supply for completeness before you start installing the device.



All screw-type terminals belonging to the scope of supply are plugged into the device.



The installation and start-up instructions also describe options which do not belong to the scope of supply.



All supplied options and design versions are described on the delivery note.

### Scope of supply

Quantity	Description
1	Energy Analyser D550/D550-24
1	Quick guide
1	Screw-type terminal, plug-in, 2 pin
1	Screw-type terminal, plug-in, 3 pin
1	Screw-type terminal, plug-in, 5 pin
1	Screw-type terminal, plug-in, 6 pin

The programming software is available online at <http://wmqr.eu/242551>.

## Notes on use

Please read these operating instructions and all other publications which have to be used to work with this product (in particular for installation, operation or maintenance).

Note and follow all safety instructions as well as any warnings. If you do not follow the instructions, personal injuries and/or damage to the product could be the result.

Any unauthorised change or use of this device which extends beyond the given mechanical, electrical or other operating limits can cause personal injuries and/or damage to the product.

Any such unauthorised change is "misuse" and/or "negligence" under the product's warranty and therefore excludes the warranty for cover of possible resulting injuries or damage.

This device may be solely operated and maintained by skilled persons.

Skilled persons are people who, on the basis of their relevant training and experience, are capable of identifying risks and avoiding possible hazards which operation or maintenance of the device can cause.

When using the device, any additional legal and safety regulations required for the respective use must be observed.

	<p><b>Important!</b> If the device is not operated according to the instruction manual, protection is no longer ensured and the device can cause hazards.</p>
--	---

	<p>Conductors made of individual wires must be fitted with wire end ferrules.</p>
--	---

	<p>Only pluggable screw terminals with the same number of poles (pins) and of the same type may be plugged together.</p>
--	--

## Product Description

### Intended use

The Energy Analyser D550/D550-24 is intended to be used for the measurement and calculation of electrical variables such as voltage, current, energy, work, harmonic components, etc. in building installations, at distribution boards, circuit-breakers and busbar trunking systems.

Measuring-circuit voltages and currents must originate from the same system.

The Energy Analyser D550/D550-24 is permanently installed in control cabinets or small distribution boards. It can be installed in any position.

The measurement results can be displayed, stored and read out via serial interfaces and further processed.

The voltage measurement inputs are designed for measurements in low-voltage systems in which rated voltages up to 300 V conductor to earth and surge voltages of overvoltage category III can occur.

The current measurement inputs of the Energy Analyser D550/D550-24 are connected via external  $\dots/1A$  or  $\dots/5A$  current transformers.

Measurement in medium and high-voltage systems takes place with current and voltage transformers. Special safety requirements must be complied, which are not dealt with in any greater detail here.

The Energy Analyser D550/D550-24 fulfils the test requirements for use in industrial areas.

### Mains failure detection

The mains failure detection takes place via the voltage measurement inputs. The selection of voltage measurement inputs can be configured using the ecoExplorer go software.

### Mains failure stored energy time

The Energy Analyser D550/D550-24 bridges the following mains failures at the auxiliary voltage input:

Mains voltage	230 V AC
Stored energy time	max. 80 ms

### Energy Analyser D550/D550-24 features

- Measurement in IT, TN and TT systems,
- 4 voltage measurement inputs
- 4 current measurement inputs,
- Continuous scanning of the voltage and current measurement inputs,
- Energy measurement, measurement uncertainty class 0.5 for  $\leq 5A$  current transformers,
- Energy measurement, measurement uncertainty class 1 for  $\leq 1A$  current transformers,
- Registers more than 800 measured values (readings),
- Fourier analysis 1st to 40th harmonic component for U, I, P (consumption/supply) and Q (inductive/capacitive),
- Registering and storage of transients ( $> 50 \mu s$ ),
- 2 digital inputs,
- 2 digital outputs,
- Temperature measurement input,
- LC display, backlight,
- 2 keys,
- RS485 (modbus RTU, modbus master),
- RS232,
- Ethernet (web server, EMAIL),
- Programming own applications,
- Operating temperature range  $-10...+55^{\circ}C$ ,
- Mounting on top hat rails 35 mm,
- Suitable for installation in distribution boards,
- Suitable for measurements in networks with frequency inverters.

### Methods of measurement

The Energy Analyser D550/D550-24 measures continuously and calculates all effective values over a 200 ms interval.

### Operating concept

You can program the Energy Analyser D550/D550-24 and call up measured values in several ways.

- **Directly** at the device using 2 keys and the display. You can change the values in the parameter list (see Appendix) and call up the measured values from the measured value displays.
- Via the **ecoExplorer go** programming software.
- In devices with an ethernet interface, via the **homepage** of the Energy Analyser D550/D550-24.
- Via the RS485 with the **modbus** protocol. You can change and call up data with the help of the modbus address list.

Operation of the Energy Analyser D550/D550-24 via the integrated display and the two keys only is described in these operating instructions.

The ecoExplorer go programming software and the homepage have their own documentation.



Use the **parameter list** in the appendix to these instructions for programming at the Energy Analyser D550/D550-24.



### ecoExplorer go programming software

The Energy Analyser D550/D550-24 can be programmed and read out using the ecoExplorer go® programming software included in the scope of supply. This requires a PC to be connected to the Energy Analyser D550/D550-24 via a serial interface/ethernet.

### ecoExplorer go features

- Programming the Energy Analyser D550/D550-24
- Configuring recordings
- Reading out recordings.
- Storing data in a database
- Graphic display of measured values
- Programming customer-specific applications




Fig.: Connection of a Energy Analyser D550/D550-24 to a PC via an RS232 cable

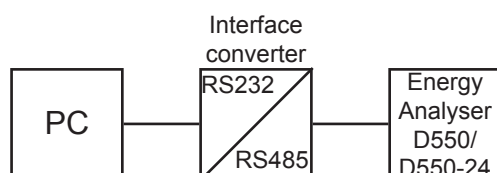


Fig.: Connection of a Energy Analyser D550/D550-24 to a PC via an interface converter




Fig.: Connection of a Energy Analyser D550/D550-24 (with the ethernet option) to a PC via the ethernet

### Three-phase 4-wire systems

The Energy Analyser D550/D550-24 can be used in three-phase 4 conductor systems (TN, TT system) (50 Hz, 60 Hz) with earthed PEN conductor. The bodies of the electrical system are earthed. The conductor to neutral conductor voltage may not exceed 300 V AC.

The Energy Analyser D550/D550-24 is only suitable for environments in which the impulse voltage withstand level of 4 kV (over-voltage category III) is not exceeded.

$U_{L-N} / U_{L-L}$
66V / 115V
120V / 208V
127V / 220V
220V / 380V
230V / 400V
240V / 415V
260V / 440V
277V / 480V

Fig.: Table of rated voltages of the grid suitable for the voltage inputs

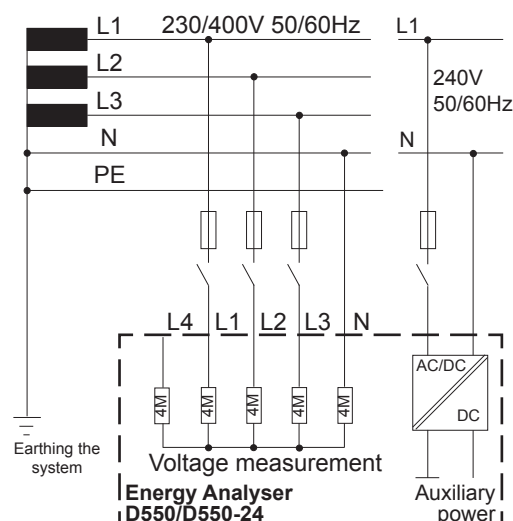


Fig.: Block diagram, Energy Analyser D550/D550-24 in TN system

### Three-phase 3-wire systems

The Energy Analyser D550/D550-24 can be used in unearthed three-phase 3 wire systems (IT system). The conductor to conductor voltage may not exceed 480 V AC (50 Hz, 60 Hz).

The Energy Analyser D550/D550-24 is only suitable for environments in which the impulse voltage withstand level of 4 kV (over-voltage category III) is not exceeded.

In the IT system the neutral point (star point) of the voltage generator is not earthed. The bodies of the electrical system are earthed. Earthing via high-resistance impedance is allowed. IT systems are only allowed in certain systems with their own transformer or generator.

$U_{L-L}$	
66V	
115V	
120V	
127V	
200V	
220V	
230V	
240V	
260V	
277V	
347V	
380V	
400V	
415V	
440V	
480V	Maximum system rated voltage

Fig.: Table of rated voltages of the grid suitable for the voltage inputs

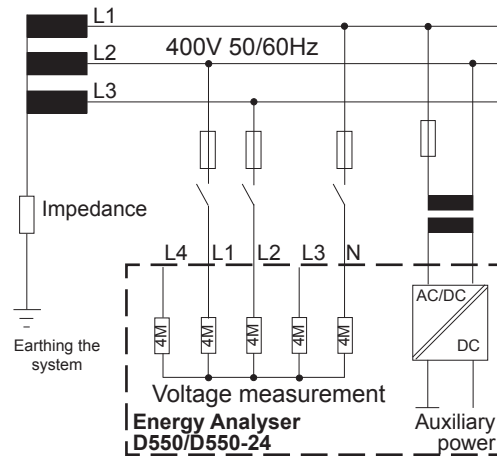


Fig.: Block diagram, Energy Analyser D550/D550-24 in IT system without N

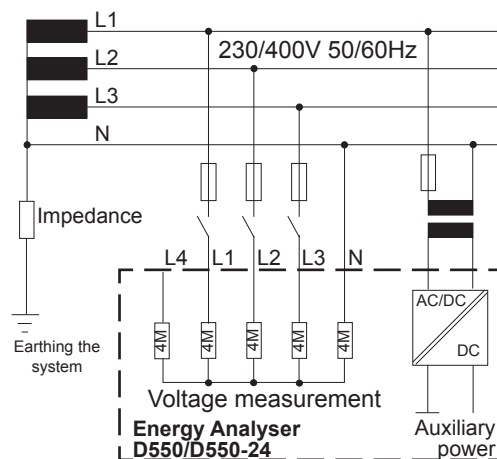


Fig.: Block diagram, Energy Analyser D550/D550-24 in IT system with N

## Use

The Energy Analyser D550/D550-24 has a display, keys 1 and 2 and the Service key to make it easier to install and start up the Energy Analyser D550/D550-24 without a PC.

Important parameters such as current transformers and device address are included in the parameter list (see appendix) and can be directly programmed at the device.

A differentiation is made between operation with the

- display mode and
- programming mode.

### Key functions

Press the key "briefly":


- page forwards
- Digit/value +1

Press the key for "long time":


- page backwards
- Digit/value -1

Simultaneously press both keys for around 1 second and keep them pressed:

- Switch between display mode and programming mode.

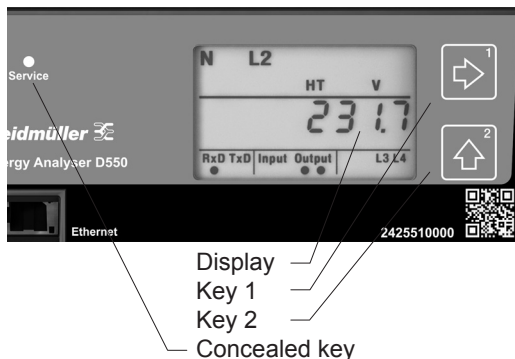

### Keys 1 and 2



The Energy Analyser D550/D550-24 is operated using keys 1 and 2.

### Concealed key (service)

The service key is intended for use by instructed service employees only.

## Display mode

After the power supply is resumed the device is in Display mode. In Display mode you can use Keys 1 and 2 to page between the measured value displays.



Use Key 1 to select the phase for the measured values.



Press Key 2 to page between the measured values for current, voltage, power output, etc.

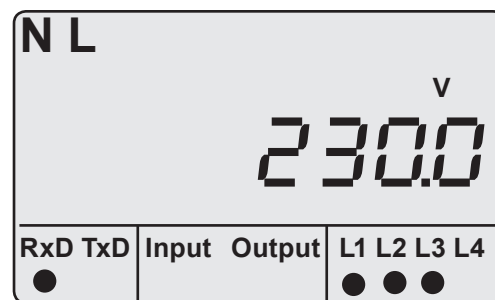


Fig.: "Display Mode" display example  
Displayed measured value:  $U_{L1-N} = 230.0 \text{ V}$

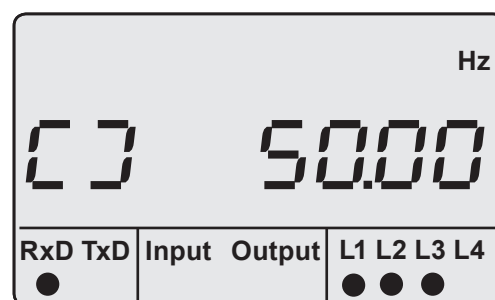


Fig.: Display example for rotating field and frequency



The user can use the ecoExplorer go/Jasic to reconfigure the function of the keys and selection of the values to be displayed.

Programming mode

The most important settings required for operation of the Energy Analyser D550/D550-24 can be displayed and changed in programming mode.

The parameter list in the Appendix contains the addresses for the most important settings. You can make further settings using the ecoExplorer go software included in the scope of supply.

If you simultaneously press Keys 1 and 2 for around 1 second, programming mode opens via a password query. If a display password has not been programmed, the first programming menu opens directly.

Programming mode is denoted in the display by the text "PRG". The digits of the address flash.

If you are in programming mode and have not pressed a key for approximately 60 seconds or simultaneously press Keys 1 and 2 for around 1 second, the device returns to display mode.

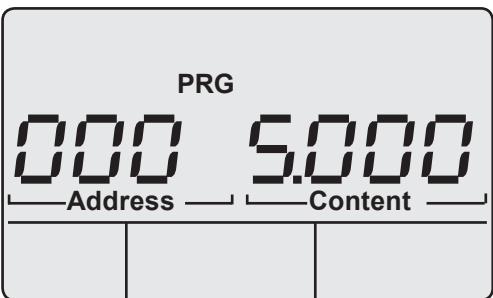


Fig.: "Programming Mode" display example, address 000 with content 5,000

Display password

You can program a 4-digit display password to make it difficult to accidentally change the programming data directly at the device. A display password is not set in the factory.

Homepage password

You can protect access to the Energy Analyser D550/D550-24's homepage via a password. A homepage password is not set in the factory.

Password mode

The Energy Analyser D550/D550-24 differentiates between 3 password modes for the homepage password:

- 0 = The homepage password is not queried.
- 2 = Changes to the configuration and the display of measured values require the password to be entered once.
- 128 = Each change to the configuration requires renewed input of the password.

Forgot password?

After a safe connection between the EnergyAnalyser D550/D550-24 and ecoExplorer go please clear the password via software.

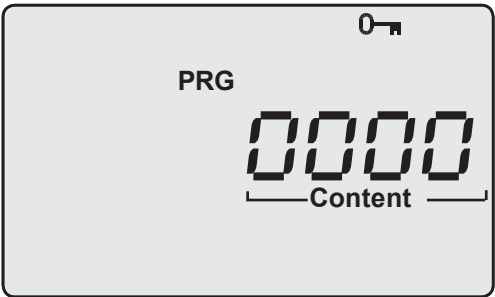


Fig.: Query window for the display password

Address	Content
500	Display password 0 = the password is not queried.
501	Homepage, password mode
502	Homepage, password

Fig.: Section of the parameter list for password programming

## Installation

### Installed position

The Energy Analyser D550/D550-24 can be installed in control cabinets or in small distribution boards according to DIN 43880. It is mounted on a 35 mm mounting rail according to DIN EN 60715. It can be installed in any position.

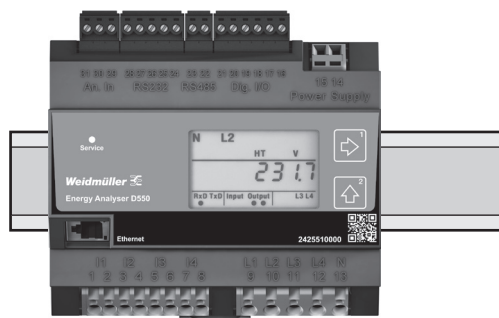


Fig.: Energy Analyser D550/D550-24 on mounting rail according to DIN EN 60715

### Power supply voltage

A power supply voltage is required for operation of the Energy Analyser D550/D550-24. The type and amount of power supply voltage required is noted on the rating plate.

Before applying the power supply voltage, ensure that the voltage and frequency match the information given on the rating plate!

The connection cables for the power supply voltage must be fused with a UL listed fuse or a circuit breaker.

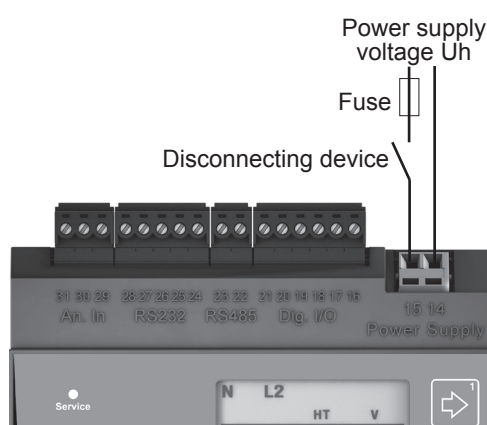


Fig.: Connection example for the power supply voltage Uh



- A disconnect or circuit-breaker must be provided for the power supply voltage in the building installation.
- The disconnect must be installed near the device and must be easy for the user to reach.
- The switch must be labelled as a disconnecting device for this device.
- Voltages which are above the allowable voltage range can destroy the device.



Devices driven with direct current are protected against polarity reversal.



**Important!**  
The inputs for the supply voltage are dangerous to touch!

## Current measurement

The Energy Analyser D550/D550-24 is designed for the connection of current transformers with secondary currents of  $\dots/1A$  and  $\dots/5A$ . Only alternating currents, not direct currents, can be measured.

Each current measurement input can be permanently loaded with 6 A or for 1 second with 100 A.



Fig.: Connection example, current measurement via current transformers



### Attention!

The current inputs are live.



### Important!

The Energy Analyser D550/D550-24 is not suitable for the measurement of direct voltages.



### Earthing current transformers

If a connection is provided for earthing the secondary winding, this must be connected with earth.



For the inputs L4 and I4 are no connection schemes required.

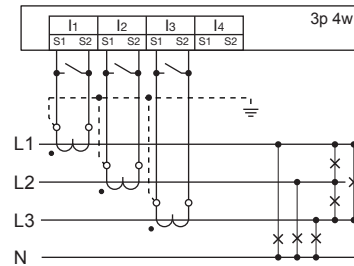


Fig.: Current measurement, connection example for connection option 0, see page 25

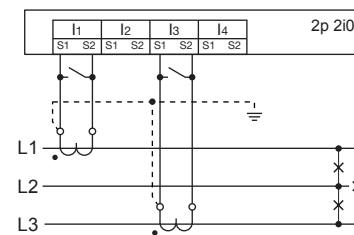


Fig.: Current measurement, connection example for connection option 1, see page 25

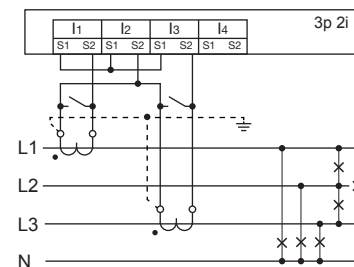


Fig.: Current measurement, connection example for connection option 0, see page 25

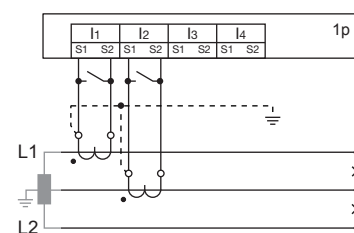


Fig.: Current measurement, connection example for connection option 0, see page 25

### Ammeter

If you not only want to measure the current with the Energy Analyser D550/D550-24 but with an ammeter also, the ammeter must be connected in series to the Energy Analyser D550/D550-24.

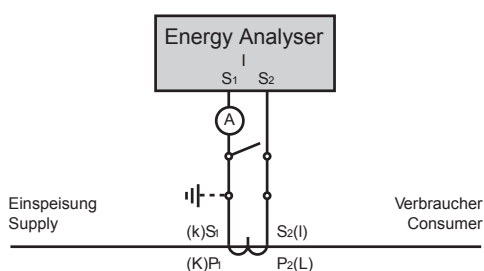


Fig.: Example, current measurement via additional ammeter



#### Short-circuit current transformer connections!

The secondary connections of the current transformer must be short-circuited to them first before the current supply leads to the Energy Analyser D550/D550-24 are disconnected!

If a testing switch is available, which automatically short circuits the current transformer's secondary leads, it is sufficient to place this in the "test" position, provided the short-circuiters have been tested first.



#### Open current transformer!

High hazardous live voltage peaks can occur at current transformers which are operated open on the secondary side!

The winding insulation in "safe open current transformers" is dimensioned so that the current transformers can be operated open. But these current transformers are also hazardous live if they are operated open.

### Summation current measurement

If the current is measured via two current transformers, the total transformation ratio of the current transformers must be programmed in the Energy Analyser D550/D550-24.

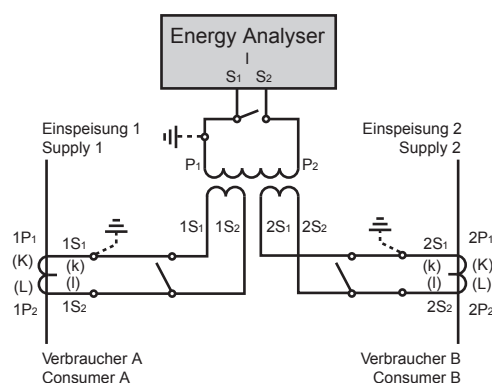


Fig.: Example, current measurement via summation current transformers

#### Example

The current is measured via two current transformers. Both current transformers have a transformation ratio of 1000/5A. The summation measurement is performed with a 5+5/5A summation current transformer.

The Energy Analyser D550/D550-24 must then be set as follows:

Primary current:	$1.000\text{ A} + 1.000\text{ A} = 2.000\text{ A}$
Secondary current:	5 A

## Direct measurement

Nominal currents up to 5 A can also be measured directly with the Energy Analyser D550/D550-24. In this case it must be noted that each current measurement input may be loaded continuously with 6 A or for 1 second with max 100 A.

As the Energy Analyser D550/D550-24 does not have any integrated protection for the current measurement, this protection must be provided for during installation.

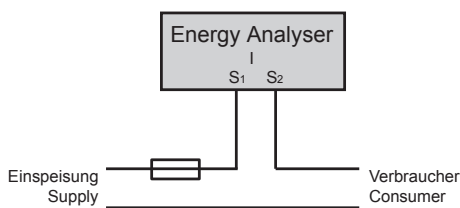


Fig.: Example, direct current measurement

## Voltage measurement

The Energy Analyser D550/D550-24 is designed for the measurement of alternating voltages in 300 V systems in which category III overvoltages can occur.

The Energy Analyser D550/D550-24 can only determine measured values if a measurement-current voltage greater than 10 Veff is applied to at least one voltage measurement input.

The following must be noted when selecting the instrument leads for the voltage measurement:

- The instrument leads required for the voltage measurement must be suitable for voltages up to 300 V AC to earth and 520 V AC conductor to conductor.
- Normal instrument leads must be fused by an overcurrent protective device and routed via disconnectors.
- Short-circuit proof instrument leads must be routed via disconnectors only.

Overcurrent protective devices and disconnectors must be positioned near the device and must be easy for the user to reach.

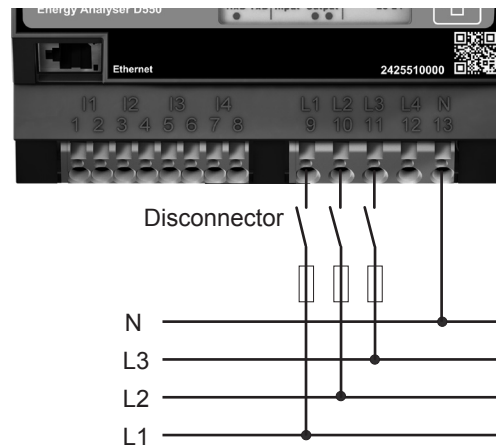


Fig.: Connection example: Voltage measurement via short-circuit proof instrument leads



### Important!

The voltage measurement inputs are hazardous live!



### Important!

The Energy Analyser D550/D550-24 can only determine measured values if a measurement-current voltage greater than 10 Veff is applied to at least one voltage measurement input.



For the inputs L4 and I4 are no connection schemes required.



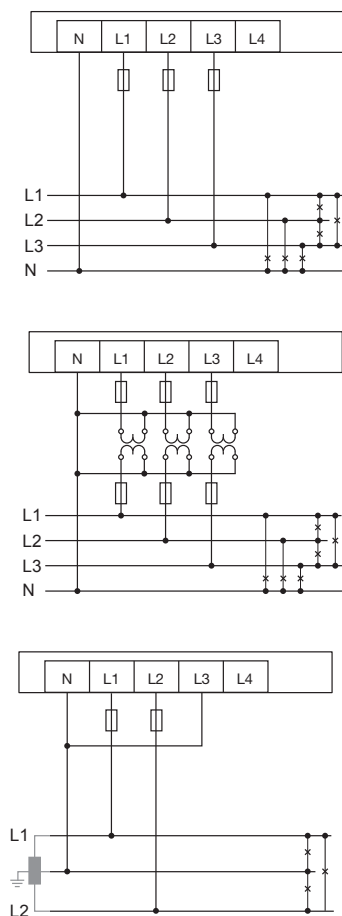


Fig.: Connection examples for voltage measurement in "three-phase 4-conductor systems". (Connection option 0, see page 26)

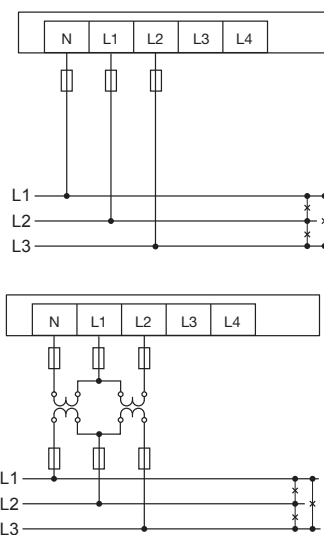


Fig.: Connection examples for voltage measurement in "three-phase 3-conductor systems". (Connection option 1, see page 26)



**Important!**

Voltages above 300 V AC to earth must be connected via voltage transformers.



Measuring-circuit voltages and currents must originate from the same system.

## Auxiliary measurement, input 4

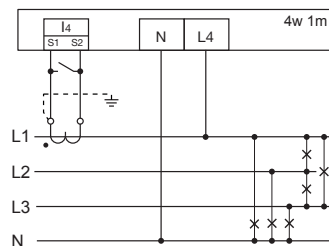


Fig.: Measurement using a three-phase 4 conductor network with symmetrical load.

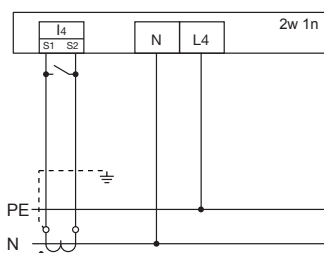


Fig.: Measurement of the voltage between N and PE. Measurement of the current in the neutral wire.

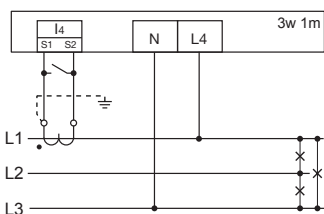




Fig.: Measurement in a three-phase 3 conductor network with symmetrical load.

 In case of a three wire main measurement (input V1-V3), the auxiliary measurement (input V4) cannot be used as measuring input.

 For measurement with the auxiliary measurement (V4), a voltage must be connected to the baseline measurement for frequency determination.

## Interfaces

### RS232

You can use a RS232 connection cable to connect the Energy Analyser D550/D550-24 to a PC.

The achievable distance between two devices with RS232 interface depends on the cable used and the baud rate. The maximum connectable cable length is 30 m.

As a guideline value, for a transmission rate of 9600 baud the distance should not exceed 15 m to 30 m.

The permissible ohmic load must be larger than 3 kohm and the capacitive load caused by the transmission cable must be smaller than 2500 pF.

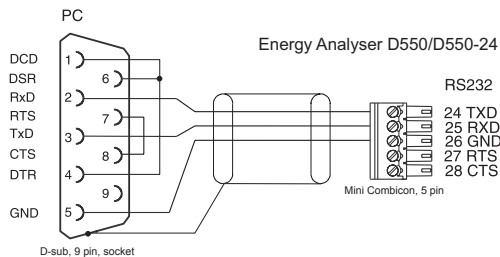


Fig.: Connector pin assignment for the PC connection cable

### Shielding

A twisted-conductor and shielded cable must be provided for connections via the RS232 interface. The shielding at both ends of the cable must be connected to a large area of the housing or cabinet parts in order to achieve an adequate shielding effect.

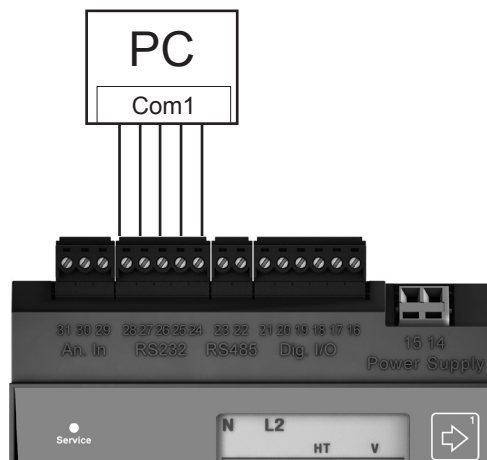


Fig.: Example, connecting a Energy Analyser D550/D550-24 to a PC via the RS232 interface

## RS485

The RS485 interface is designed as a 2-pole plug.

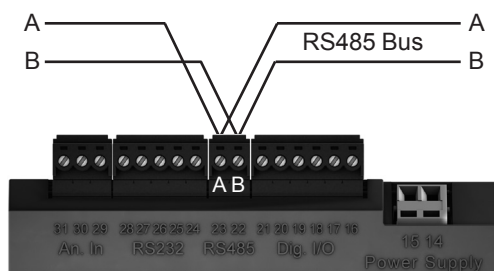


Fig.: RS485 interface, 2-pole plug contact

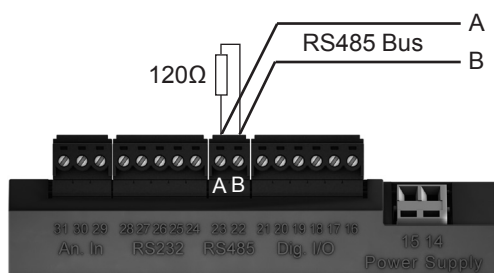
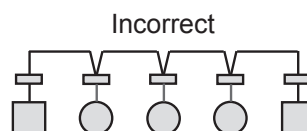
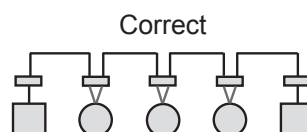





Fig.: RS485 interface, 2-pole plug contact with terminating resistor (Part no. 52.00.008)

## Terminating resistors

The cable at the start and end of a segment is terminated with resistors (120 ohm, 1/4 W).

The Energy Analyser D550/D550-24 does not contain any terminating resistors.



-  Terminal strip in the control cabinet.
-  Device with RS485 interface.  
(Without terminating resistor)
-  Device with RS485 interface.  
(With terminating resistor at the device)

## Installation

### Shields

A twisted, shielded cable is foreseen for connections using the RS485 interface.

- Ground the shields of all cables leading to the cabinet at the cabinet entry point.
- Connect the shield extensively and with good conductivity with a low external voltage ground.
- Intercept the cable mechanically above the ground clip in order to avoid damages caused by cable movements.
- Use suitable cable insert guides, such as PG glands, to guide the cable into the switch cabinet.

### Cable type

The cables used must be suitable for an environmental temperature of at least 80 °C.

Recommended cable types:

Unitronic Li2YCY(TP) 2x2x0.22 (Lapp cable)

Unitronic BUS L2/FIP 1x2x0.64 (Lapp cable)

### Maximum cable length

1200 m at a Baud rate of 38.4k.

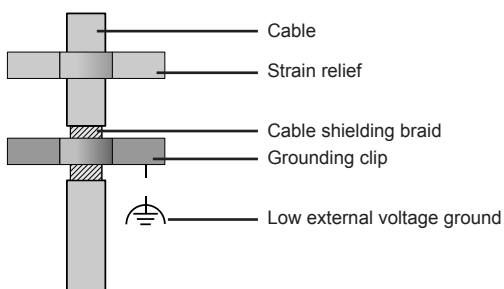


Fig.: Shielding arrangement at cabinet entry point



#### Important!

Profibus, RS232, RS485 and temperature measurement input are not metalically separated from each other.



All interfaces can be used simultaneously.



For the wiring of the Modbus connection, CAT cables are not suitable. Please use the recommended cables.

### Bus structure

- All devices are connected in a bus structure (line).
- In a segment, up to 32 participants are switched together
- The cable is terminated with resistors at the start and end of a segment.
- For more than 32 participants, repeaters (line amplifiers) are used to connect the individual segments.
- Devices with terminated resistor have to be supplied.
- We recommend to install the master UMG at the end of the segment.
- In case that the master UMG with terminated bus resistor will be removed, the bus is not under operation.
- In case that slave UMG with terminated bus resistor will be removed or is not switched on, the bus can be unstable.
- UMGs which have no termination can be replaced without any interruption of the bus.

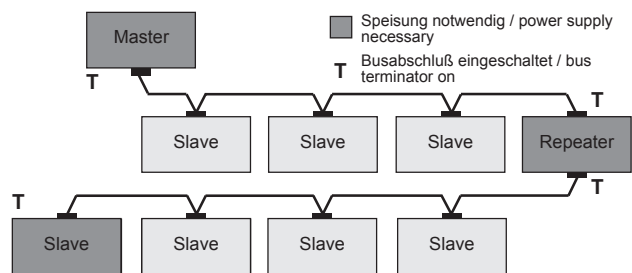


Fig.: Schema bus structure

## Digital inputs and outputs

### Digital outputs

The Energy Analyser D550/D550-24 has 2 transistor switching outputs. These outputs are metalically separated from the analysis electronics via optocouplers.

- The digital outputs can switch direct or alternating current load.
- The digital outputs can switch loads independant on the polarity of the feeding voltage.
- The digital outputs are not short-circuit-proof.
- Cables, which are longer but 30 m must be shielded.

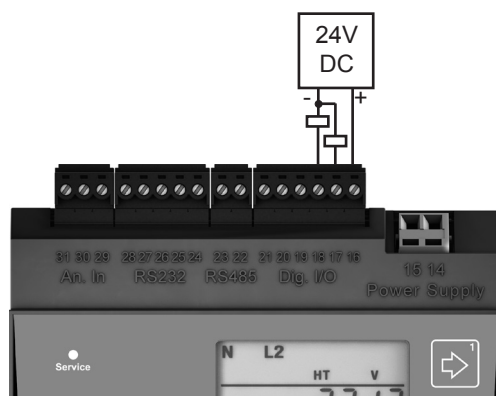


Fig.: Connection example



#### Attention!

The digital outputs are not short-circuit-proof.

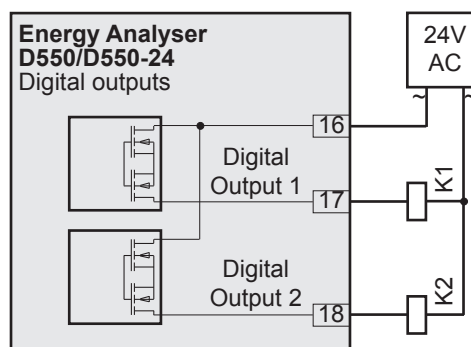


Fig.: Connection of alternating voltage relays to the digital outputs

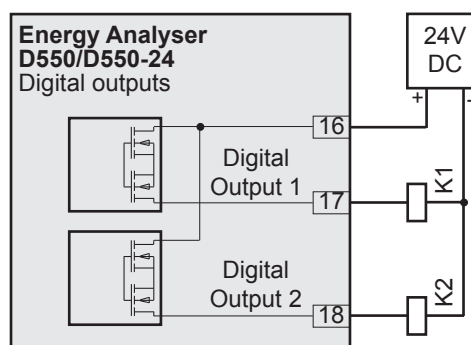


Fig.: Connection of direct current relays to the digital outputs

### Digital inputs

The Energy Analyser D550/D550-24 has 2 digital inputs to each of which you can connect one transducer.

An input signal is detected at a digital input if a voltage of at least 10 V and maximum 28 V is applied. In this case a current of at least 1 mA and maximum 6 mA flows. Cables longer than 30 m must be laid with shielding. Please mind the polarity of the feeding voltage.

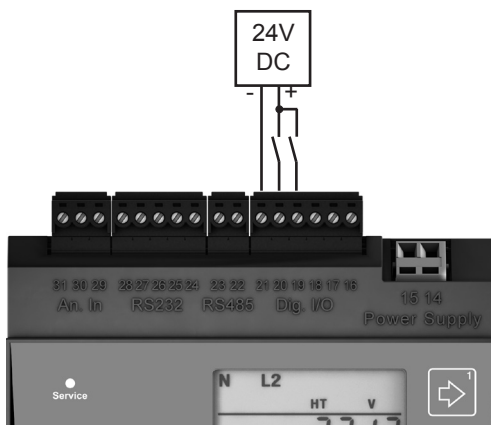


Fig.: Connection example

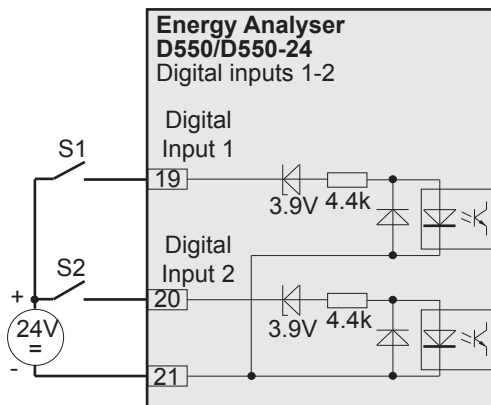


Fig.: Example for the connection of external switching contacts S1 and S2 to the digital inputs 1 and 2.



#### Attention!

The polarity of the feeding voltage must be respected for the digital inputs.

### S0 pulse input

At each Energy Analyser D550/D550-24 with inputs for 24 V you can also connect S0 pulse generators according to DIN EN 62053-31.

You require only one external auxiliary voltage of 20...28 V DC and one external 1.5 kohm resistor each.

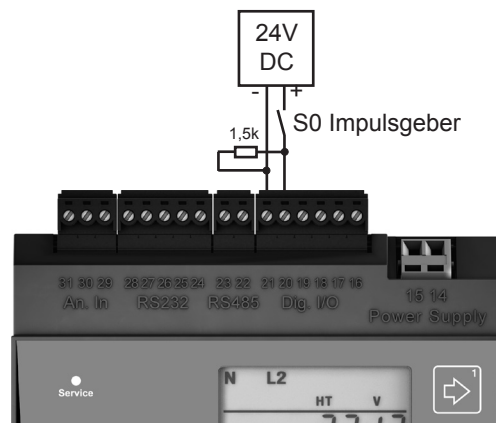


Fig.: Energy Analyser D550/D550-24 with inputs for 24 V. Example with S0 pulse generator.

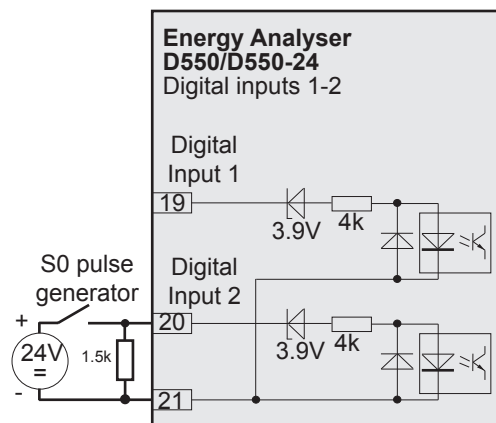


Fig.: Energy Analyser D550/D550-24 with inputs for 24 V. Example for connection of an S0 pulse generator at digital input 2.

### Temperature measurement input

Temperature sensors with a resistance range of 400 ohm to 4 kohm can be connected to the temperature measurement input. The total burden (sensor + cable) of 4 kohm may not be exceeded.


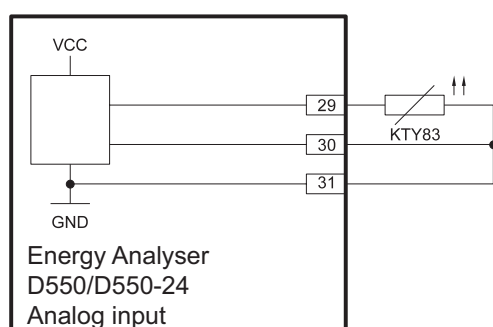


Fig.: Example, temperature measurement with a KTY83.



Use a shielded cable to connect the temperature sensor.

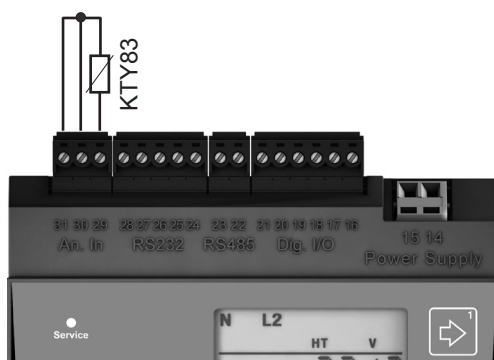

**Important!**  
Profibus, RS232, RS485 and temperature measurement input are not metalically separated from each other.


### Putting into service

#### Applying the power supply voltage

The power supply voltage level for the Energy Analyser D550/D550-24 is given on the rating plate. Supply voltages which do not correspond to those given on the rating plate can result in malfunctions and destruction of the device.

After applying the power supply voltage the text "Start up" appears in the display. Around 2 - 6 seconds later the Energy Analyser D550/D550-24 switches to the first measured value display.

If no display appears, check whether the power supply voltage is within the rated voltage range.

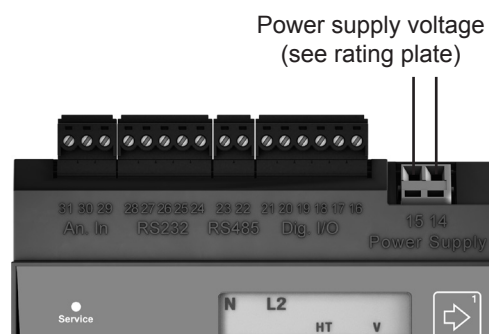

#### Frequency measurement

For the frequency measurement, the measured voltage must be greater than 10 V in at least one voltage measuring path (L-N). Only detected frequencies within the range 45 Hz to 65 Hz are used for measurement at the current and voltage measurement inputs.

### Applying the measuring-circuit voltage

The Energy Analyser D550/D550-24 is suitable for the measurement of voltages of up to 300 V AC to earth and 520 V AC conductor to conductor.


The Energy Analyser D550/D550-24 is not suitable for the measurement of direct voltages. Voltages above 300 V AC to earth must be connected via voltage transformers.

After connecting the measurement-current voltages, the measured values displayed by the Energy Analyser D550/D550-24 for the L-N and L-L voltages must correspond to those at the voltage measurement input.

If a voltage transformer factor is programmed, this must be taken into account in the comparison.

### Minimum voltage

A measuring-circuit voltage greater than 10 V<sub>eff</sub> must be applied to at least one of the voltage measurement inputs. If an adequately high measuring-circuit voltage is not applied the Energy Analyser D550/D550-24 cannot determine the system frequency and can therefore also not take a measurement.

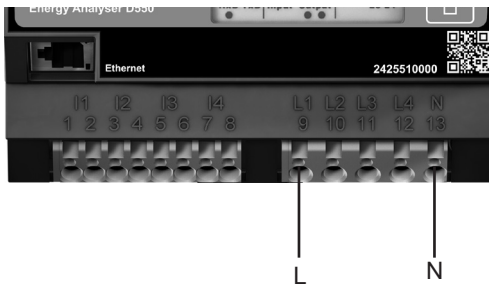

At least one phase (L) and the neutral conductor (N) must be connected to the voltage measurement input for the measurement.

### Phase sequence

Check the direction of the voltage rotating field in the measured value display of the Energy Analyser D550/D550-24.

A "right" rotating field usually exists.

### Applying the measuring-circuit current

The Energy Analyser D550/D550-24 is designed for the connection of  $\dots/1A$  and  $\dots/5A$  current transformers.

Only alternating currents, not direct currents, can be measured via the current measurement inputs.

Short-circuit all current transformer outputs except one. Compare the currents displayed by the Energy Analyser D550/D550-24 with the applied current.

Taking into account the current transformer transformation ratio, the current displayed by the Energy Analyser D550/D550-24 must correspond to the input current.

The Energy Analyser D550/D550-24 must display approximately zero Amperes in the short-circuited current measurement inputs.

The current transformer ratio is set to 5/5A in the factory and if necessary must be adapted to the current transformer used.

### Checking the energy measurement

Short-circuit all current transformer outputs except for one and check the displayed power outputs.

The Energy Analyser D550/D550-24 may only display one power output in the phase with a non short-circuited current transformer input. If this is not the case, check the connection of the measuring-circuit voltage and the measuring-circuit current.

If the power output amount is correct but the sign of the power output is negative, S1(k) and S2(l) could be inverted at the current transformer or they supply active energy back into the network.



## Configuration

### Current transformer ratio

You can assign each of the 4 current transformer inputs its own current transformer ratio. A current transformer ratio of 5 A/5 A is programmed in the factory for all 4 current transformer inputs.

You can program current transformers with the same current transformer ratios in addresses 000 and 001. Program current transformers with different current transformer ratios in addresses 010 to 041.

A change in current transformer values in address 000 or 001 overwrites the contents of addresses 010 to 041 with the current transformer values from addresses 000 and 001.

A change in current transformer values in one of the addresses 010 to 041 deletes the current transformer values in addresses 000 and 001.

Address	Current transformer values
000	L1 L2 L3 L4 (primary)
001	L1 L2 L3 L4 (secondary)
010	L1 (primary)
011	L1 (secondary)
020	L2 (primary)
021	L2 (secondary)
030	L3 (primary)
031	L3 (secondary)
040	L4 (primary)
041	L4 (secondary)

Fig.: Section of the parameter list for the current transformer values

### Current measurement connection options

The Energy Analyser D550/D550-24 recognises two connection options for the current measurement.

#### Connection option 0


- Measurement via 3 current transformers in three-phase-4-conductor systems.
- Measurement via 2 current transformers in systems with the same load.
- Measurement in one-phase-3-conductor systems.

#### Connection option 1

- Measurement via 2 current transformers (Aron circuit) in three-phase 3-conductor systems.

Address	Connection option
110	0 = Three current transformers (Default factory setting)  1 = Two current transformers (Aron circuit)

Fig.: Section of the parameter list for the current transformer connection options

	For the inputs L4 and I4 are no connection schemes required.
---	--

### Voltage transformer ratio

You can assign each of the 4 voltage transformer inputs its own voltage transformer ratio.

A voltage transformer ratio of 400V/400V direct measurement is programmed in the factory for all 4 voltage transformer inputs.

You can program voltage transformers with the same voltage transformer ratios in addresses 002 and 003. Program voltage transformers with different voltage transformer ratios in addresses 012 to 043.

A change in voltage transformer values in address 002 or 003 overwrites the contents of addresses 012 to 043 with the voltage transformer values from addresses 002 and 003.

Address	Voltage transformer values
002	L1 L2 L3 L4 (primary)
003	L1 L2 L3 L4 (secondary)
012	L1 (primary)
013	L1 (secondary)
022	L2 (primary)
023	L2 (secondary)
032	L3 (primary)
033	L3 (secondary)
042	L4 (primary)
043	L4 (secondary)

Fig.: Section of the parameter list for the voltage transformer values

### Voltage measurement connection options

The Energy Analyser D550/D550-24 recognises two connection options for the voltage measurement.

#### Connection option 0


- Direct measurement of the voltage in 3-phase 4-conductor systems.
- Measurement via 3 voltage transformers in 3-phase 4-conductor systems.
- Measurement in one-phase-3-conductor systems.

#### Connection option 1

- Direct measurement of the voltage in three-phase 3-conductor systems.
- Measurement via 2 voltage transformers (Aron circuit) in three-phase 3-conductor systems.

Address	Connection option
111	0 = Three-phase 4-conductor systems (default factory setting)  1 = Three-phase 3-conductor systems

Fig.: Section of the parameter list for the voltage transformer connection options

	For the inputs L4 and I4 are no connection schemes required.
---	--

Interfaces

The Energy Analyser D550/D550-24 has 3 serial interfaces:

- RS485
- RS232
- Ethernet

All interfaces can be used simultaneously.

RS232

The following data must be programmed for use of the RS232 interface:

- Baud rate,
- Operating mode.

Refer to the parameter list in the appendix for the default factory setting and the setting ranges.

RS485

The following data must be programmed for use of the RS485 interface:

- Device address,
- Baud rate,
- Operating mode.

Refer to the parameter list in the Appendix for the default factory setting and the setting ranges.

Address	Content
200	Device address (1...255) valid for Modbus and Profibus 1 = default factory setting

Ethernet

**Fixed IP address**  
In simple networks without DHCP servers the network address must be set directly at the device.

**BootP**  
BootP allows fully automatic integration of a Energy Analyser D550/D550-24 in an existing network. BootP is an older protocol and does not have the functional scope of DHCP.

**DHCP mode**  
DHCP enables fully automatic integration of a Energy Analyser D550/D550-24 in an existing network without any further configuration. On starting the Energy Analyser D550/D550-24 automatically imports the IP address, the net mask and the gateway from the DHCP server.  
The Energy Analyser D550/D550-24 is set in the factory to "DHCP".

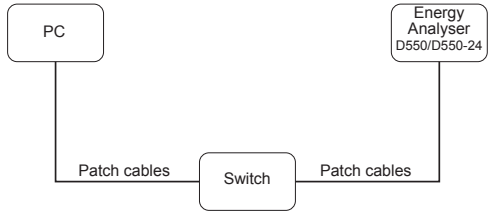


Fig.: Connection example, the Energy Analyser D550/D550-24 and PC require a fixed IP address

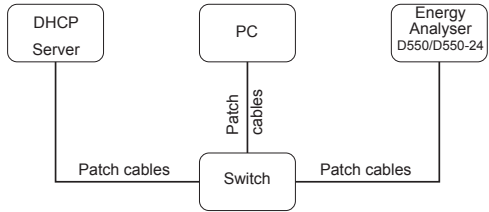



Fig.: Connection example, the Energy Analyser D550/D550-24 and PC are automatically assigned an IP address by a DHCP server



The Energy Analyser D550/D550-24 may only be connected to the ethernet following consultation with the network administrator!

## Configuration

### Factory pre-configured profiles

#### Profibus profile number 0

	Byte index	Value type	Value format	Scaling
1	1	Voltage L1-N	Float	1
2	5	Voltage L2-N	Float	1
3	9	Voltage L3-N	Float	1
4	13	Voltage L4-N	Float	1
5	17	Voltage L2-L1	Float	1
6	21	Voltage L3-L2	Float	1
7	25	Voltage L1-L3	Float	1
8	29	Current L1	Float	1
9	33	Current L2	Float	1
10	37	Current L3	Float	1
11	41	Current L4	Float	1
12	45	Effective power L1	Float	1
13	49	Effective power L2	Float	1
14	53	Effective power L3	Float	1
15	57	Effective power L4	Float	1
16	61	Cos phi (math.) L1	Float	1
17	65	Cos phi (math.) L2	Float	1
18	69	Cos phi (math.) L3	Float	1
19	73	Cos phi (math.) L4	Float	1
20	77	Frequency	Float	1
21	81	Effective power sum L1-L4	Float	1
22	85	Reactive power sum L1-L4	Float	1
23	89	Apparent power sum L1-L4	Float	1
24	93	Cos phi (math.) sum L1-L4	Float	1
25	97	Effective current sum L1-L4	Float	1
26	101	Active energy sum L1-L4	Float	1
27	105	Ind. Reactive energy sum L1-L4	Float	1
28	109	THD voltage L1	Float	1
29	113	THD voltage L2	Float	1
30	117	THD voltage L3	Float	1

#### Profibus profile number 1

	Byte index	Value type	Value format	Scaling
1	1	Voltage L1-N	Float	1
2	5	Voltage L2-N	Float	1
3	9	Voltage L3-N	Float	1
4	13	Voltage L2-L1	Float	1
5	17	Voltage L3-L2	Float	1
6	21	Voltage L1-L3	Float	1
7	25	Current L1	Float	1
8	29	Current L2	Float	1
9	33	Current L3	Float	1
10	37	Effective power L1	Float	1
11	41	Effective power L2	Float	1
12	45	Effective power L3	Float	1
13	49	Cos phi (math.) L1	Float	1
14	53	Cos phi (math.) L2	Float	1
15	57	Cos phi (math.) L3	Float	1
16	61	Frequency	Float	1
17	65	Effective power sum L1-L3	Float	1
18	69	Reactive power sum L1-L3	Float	1
19	73	Apparent power sum L1-L3	Float	1
20	77	Cos phi (math.) sum L1-L3	Float	1
21	81	Effective current sum L1-L3	Float	1
22	85	Active energy sum L1-L3	Float	1
23	89	Ind. Reactive energy sum L1-L3	Float	1
24	93	THD voltage L1	Float	1
25	97	THD voltage L2	Float	1
26	101	THD voltage L3	Float	1
27	105	THD current L1	Float	1
28	109	THD current L2	Float	1
29	113	THD current L3	Float	1

#### Profibus profile number 2

	Byte index	Value type	Value format	Scaling
1	1	Active energy sum L1-L3	Float	1
2	5	Rel. Active energy sum L1-L3	Float	1
3	9	Deliv. Active energy sum L1-L3	Float	1
4	13	Reactive energy sum L1-L3	Float	1
5	17	Ind. Reactive energy sum L1-L3	Float	1
6	21	Cap. reactive energy sum L1-L3	Float	1
7	25	Apparent energy sum L1-L3	Float	1
8	29	Active energy L1	Float	1
9	33	Active energy L2	Float	1
10	37	Active energy L3	Float	1
11	41	Inductive reactive energy L1	Float	1
12	45	Inductive reactive energy L2	Float	1
13	49	Inductive reactive energy L3	Float	1

#### Profibus profile number 3

	Byte index	Value type	Value format	Scaling
1	1	Effective power L1	Float	1
2	5	Effective power L2	Float	1
3	9	Effective power L3	Float	1
4	13	Effective power sum L1-L3	Float	1
5	17	Current L1	Float	1
6	21	Current L2	Float	1
7	25	Current L3	Float	1
8	29	Current sum L1-L3	Float	1
9	33	Active energy sum L1-L3	Float	1
10	37	Cos phi (math.) L1	Float	1
11	41	Cos phi (math.) L2	Float	1
12	45	Cos phi (math.) L3	Float	1
13	49	Cos phi (math.) sum L1-L3	Float	1
14	53	Reactive power L1	Float	1
15	57	Reactive power L2	Float	1
16	61	Reactive power L3	Float	1
17	65	Reactive power sum L1-L3	Float	1
18	69	Apparent power L1	Float	1
19	73	Apparent power L2	Float	1
20	77	Apparent power L3	Float	1
21	81	Apparent power sum L1-L3	Float	1

## Recordings

2 recordings are preconfigured in the default factory setting of the Energy Analyser D550/D550-24. Recordings are adjusted and extended via the software ecoExplorer go.

### Recording 1

The following measured values are recorded with the time base of 15 minutes:

- Voltage effective L1
- Voltage effective L2
- Voltage effective L3
- Voltage effective L4
- Voltage effective L2-L1
- Voltage effective L3-L2
- Voltage effective L1-L3
- Current effective L1
- Current effective L2
- Current effective L3
- Current effective L4
- Active Power L1
- Active Power L2
- Active Power L3
- Active Power L4
- Active Power Sum L1-L3
- Active Power Sum L1-L4
- Reactive power fundamental L1
- Reactive power fundamental L2
- Reactive power fundamental L3
- Reactive power fundamental L4
- Reactive power fundamental Sum L1-L3
- Reactive power fundamental Sum L1-L4

(The mean value, minimum value and maximum value are also recorded for each measured value.)

### Recording 2

The following measured values are recorded with the time base of 1 hour:

- Consumed Active Energy L1
- Consumed Active Energy L2
- Consumed Active Energy L3
- Consumed Active Energy L4
- Consumed Active Energy Sum L1-L3
- Consumed Active Energy Sum L1-L4
- Inductive Reactive Energy L1
- Inductive Reactive Energy L2
- Inductive Reactive Energy L3
- Inductive Reactive Energy L4
- Inductive Reactive Energy Sum L1-L3
- Inductive Reactive Energy Sum L1-L4

## System information

### Overrange

Overranges are displayed as long as they exist and cannot be acknowledged. An overrange exists if at least one of the four voltage or current measurement inputs lies outside their specified measuring range.

If an overrange exists it is shown in the display with "EEEE". The symbols L1, L2, L3 and L4 are used to indicate at which input the overrange has occurred. The "V" and "A" symbols indicate whether the overrange occurred in the current or in the voltage path.

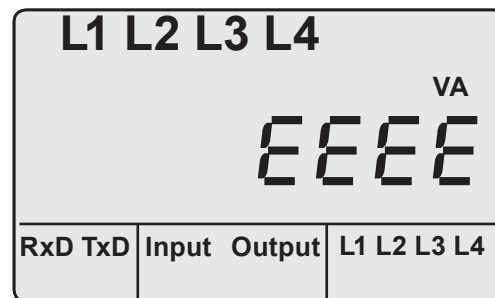


Fig.: Measured value display with overrange



#### Important!

Voltages and currents that lie outside the permissible measuring range can destroy the device.

### Serial number

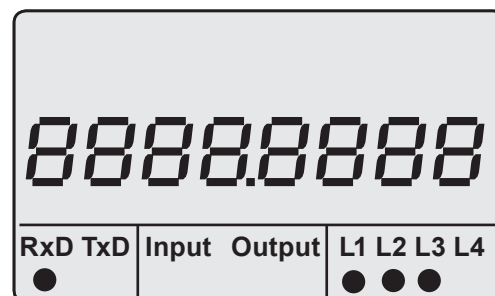


Fig.: Measured value display with serial number

## Date

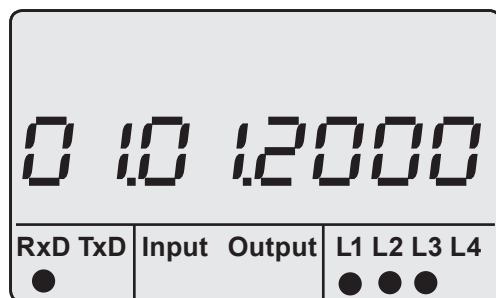


Fig.: Measured value display with date

## Firmware release

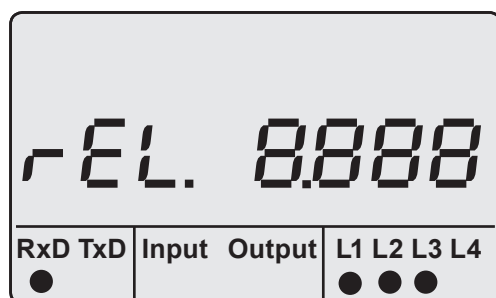


Fig.: Measured value display for the firmware release

## Time

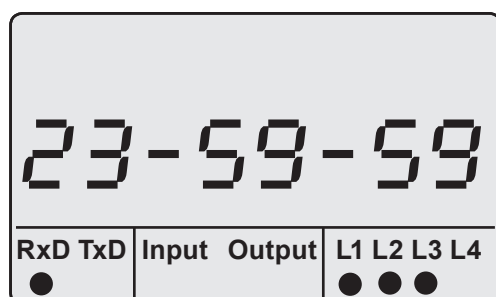


Fig.: Measured value display with time

## Service and maintenance

The device is subjected to various safety checks before delivery and marked with a seal. If a device is opened, the safety checks must be repeated. A warranty will be provided for unopened devices only.

### Repair and calibration

Repair work and calibration can be carried out by the manufacturer only.

### Front film

The front film can be cleaned with a soft cloth and standard household cleaning agent. Do not use acids and products containing acid for cleaning.

### Battery

The internal clock is provided with power from the power supply voltage. If the power supply voltage fails the clock is supplied by the battery. The clock supplies date and time information, e.g. for recordings, minimum and maximum values and events.

The life expectancy of the battery is at least 5 years, at a storage temperature of +45 °C. The typical life expectancy of the battery is 8 to 10 years.

The device must be opened to change the battery. If the device has been opened a renewed safety check is necessary for safe operation. A warranty will be provided for unopened devices only.

### Disposal

The Energy Analyser D550/D550-24 can be reused or recycled as electronic scrap in accordance with the legal provisions. The permanently installed lithium battery must be disposed of separately.

### Firmware update

If a firmware update has to be performed for your Energy Analyser D550/D550-24 you can do this with the ecoExplorer go software included in the scope of supply.

### Service

Should questions arise, which are not described in this manual, please contact the manufacturer directly.

We will need the following information from you to answer any questions:

- Device name (see rating plate),
- Serial name (see rating plate),
- Software release (see measured value display),
- Measuring-circuit voltage and power supply voltage,
- Precise description of the error.

## Trouble shooting

Possible error	Cause	Remedy
No display.	External fusing for the power supply voltage has tripped.	Replace fuse.
	Device is defective.	Send device to the manufacturer for repair.
No current display.	Measurement voltage is not connected.	Connect the measuring-circuit voltage.
	Measurement current is not connected.	Connect measuring-circuit current.
Displayed <b>current</b> is too large or too small.	Current measurement in the wrong phase.	Check connection and correct if necessary.
	Current transformer factor is incorrectly programmed.	Read out and program the current transformer transformation ratio at the current transformer.
"EEEE" and "A" in the display.	The current measuring range has been exceeded.	Check the measuring-circuit current and if necessary install a suitable current transformer.
Displayed <b>voltage</b> is too small or too large.	Measurement in the wrong phase.	Check connection and correct if necessary.
	Voltage transformer incorrectly programmed.	Read out and program the voltage transformer transformation ratio at the voltage transformer.
Displayed <b>voltage</b> is too small.	Overrange.	Install voltage transformers.
	The peak voltage value at the measurement input has been exceeded by harmonic components.	<b>Important!</b> Ensure the measurement inputs are not overloaded.
"EEEE" and "V" in the display.	The voltage measuring range has been exceeded.	Check the measuring-circuit voltage and if necessary install a suitable voltage transformer.
"Error CF" in the display.	The calibration data could not be read out.	Send device to the manufacturer for checking with a precise description of the error.
Active power consumption / supply is reversed.	At least one current transformer connection is mixed up/reversed.	Check connection and correct if necessary.
	A current path is assigned to the wrong voltage path.	Check connection and correct if necessary.
Active power too small or too large.	The programmed current transformer transformation ratio is incorrect.	Read out and program the current transformer transformation ratio at the current transformer.
	The current path is assigned to the wrong voltage path.	Check connection and correct if necessary.
	The programmed voltage transformer transformation ratio is incorrect.	Read out and program the voltage transformer transformation ratio at the voltage transformer.
No connection with the device.	RS485 - Device address is incorrect. - Wrong protocol. - Termination missing.	- Adjust the device address. - Select protocol. - Close bus with terminating resistor (120 ohm).
	Ethernet - IP address incorrect - The concealed key (service) was used.	- Adjust IP address at the device. - Overwriting the address 204 with 0 and set IP address or select DHCP.
Despite the measures above the device does not work.	Device is defective.	Send device to the manufacturer for checking with a precise description of the error.

## Technical specifications

### Technical specifications

General information	
Net weight	350 g
Device dimensions	approx. l = 107.5 mm, b = 90 mm, h = 82 mm (according to DIN 43871:1992)
Housing flammability class	UL 94V-0
Installed position	any
Fixing/mounting	35 mm top hat rail (according to IEC/EN 60999-1, DIN EN 50022)
Battery	Type Lithium CR2032, 3 V (according to UL 1642)
Backlight lifetime	40000 h (50 % of initial brightness)

Ambient conditions during operation	
The Energy Analyser D550/D550-24 is intended for weather-protected, stationary use. The Energy Analyser D550/D550-24 fulfils the use conditions according to DIN IEC 60721-3-3.	
Operating temperature range	-10...+55 °C
Relative humidity	5...95 %, (at +25 °C) without condensation
Degree of pollution	2
Operating altitude	0...2000 m above sea level
Installed position	any
Ventilation	Forced ventilation is not required.

Transport and storage	
The following information applies to devices which are transported or stored in the original packaging.	
Free fall	1 m
Temperature	-20...+70 °C

Power supply voltage	
The supply voltage to the Energy Analyser D550/D550-24 must be connected through a UL/IEC approved fuse (6 A, Char. B).	
Option 230 V (Energy Analyser D550):	
Nominal range	95...240 V (45...65 Hz) or DC 135...340 V
Operating range	+/-10 % of nominal range
Installation overvoltage category	300 V CAT II
Power consumption	max. 3.2 W / max. 9 VA
Option 90 V (without UL approval):	
Nominal range	50...110 V (45...65 Hz) or DC 50...155 V
Operating range	+/-10 % of nominal range
Installation overvoltage category	300 V CAT II
Power consumption	max. 3.2 W / max. 9 VA
Option 24 V (Energy Analyser D550-24):	
Nominal range	20...50 V (45...65 Hz) or DC 20...70 V
Operating range	+/-10 % of nominal range
Installation overvoltage category	150 V CAT II
Power consumption	max. 5 W / max. 8 VA

Connectable conductors	
Only one conductor may be connected per terminal connection!	
Solid core, multi-core, flexible core	0.08...2.5 mm², AWG 28...12
Pin-end connector, wire end ferrules	1.5 mm², AWG 16

Protection class	
Class II according to IEC 60536 (VDE 0106, Part 1), i.e. a PE terminal is not required!	
Protection against ingress of solid foreign bodies and water	IP20 according to EN 60529 September 2014, IEC 60529:2013

Digital inputs	
2 digital inputs	
Pulse input (S0)	
Maximum counting frequency	20 Hz
Switching input	
Response time (Jasic-Programm)	200 ms
Input signal applied	18...28 V DC (typically 4 mA)
Input signal not applied	0...5 V DC, current less than 0.5 mA
Cable length	- up to 30 m unshielded - greater than 30 m shielded

Digital outputs	
2 digital outputs, semi-conductor relay, not short-circuit proof.	
Switching voltage	max. 60 V DC, 30 V AC
Switching current	max. 50 mAeff AC/DC
Response time (Jasic program)	200 ms
Output of voltage dips	20 ms
Output of voltage overranges	20 ms
Pulse output (operating pulses)	max. 20 Hz
Cable length	- up to 30 m unshielded - greater than 30 m shielded

Connectable conductors (digital inputs and outputs)	
Solid core, multi-core, flexible core	0.08...1.5 mm²
Pin-end connector, wire end ferrules	1 mm², only one conductor may be connected per terminal connection!

Temperature measurement input	
Update time	approx. 200 ms
Connectable sensors	PT100, PT1000, KTY83, KTY84
Total burden (sensor + cable)	max. 4 kohm
Cable length	- up to 30 m unshielded - greater than 30 m shielded

Sensor type	Temperature range	Resistance range	Measurement uncertainty
KTY83	-55...+175 °C	500...2600 Ohm	±1.5 % rng
KTY84	-40...+300 °C	350...2600 Ohm	±1.5 % rng
PT100	-99...+500 °C	60...180 Ohm	±1.5 % rng
PT1000	-99...+500 °C	600...1800 Ohm	±1.5 % rng

rng = measuring range



Connectable conductors (temperature measurement input)	
Solid core, multi-core, flexible core	0.08...1.5 mm <sup>2</sup>
Pin-end connector, wire end ferrules	1 mm <sup>2</sup> , only one conductor may be connected per terminal connection!

Interfaces	
RS232	
Connection	5 pin screw-type terminals
Protocol	Modbus RTU/slave
Transfer rate	9.6 kbps / 19.2 kbps / 38.4 kbps / 57.6 kbps / 115.2 kbps

RS485	
Connection	2 pin screw-type terminals
Protocol, modbus RTU	Modbus RTU/slave, modbus RTU/master
Transfer rate	9.6 kbps / 19.2 kbps / 38.4 kbps / 57.6 kbps / 115.2 kbps / 921.6 kbps

RS485 (optional)	
Connection	Connector, SUB D 9 pin
Protocol, Profibus (Option)	Profibus DP/V0 acc. to EN 50170
Transfer rate	9.6 kBaud bis 12 MBaud

Ethernet 10/100Base-TX (optional)	
Connection	RJ45
Functions	Modbus gateway, embedded web server (HTTP)
Protocols	TCP/IP, EMAIL (SMTP), DHCP-Client (BootP), Modbus/TCP (Port 502), ICMP (Ping), NTP, TFTP, Modbus RTU over Ethernet (Port 8000), FTP, SNMP

Measurement uncertainty	
The measurement uncertainty of the Energy Analyser D550/D550-24 applies to use of the following measuring ranges. The measured value must lie within the given limits. Outside these limits the measurement uncertainty is unspecified.	

Measured value	Measurement uncertainties
Voltage	±0.2 % DIN EN 61557-12:2008
Current L	±0.2 % DIN EN 61557-12:2008
Current N	±0.6 % DIN EN 61557-12:2008
Power	±0.4 % DIN EN 61557-12:2008
Harmonic components U, I	Class 1, DIN EN 61000-4-7
Active energy	
Current transformer .../5A	Class 0.5 S (DIN EN 62053-22:2003, IEC 62053-22:2003)
Current transformer .../1A	Class 1 (DIN EN 62053-21:2003, IEC 62053-21:2003)
Reactive energy	
Current transformer .../5A	Class 2 (DIN EN 62053-23:2003, IEC 62053-23:2003)
Current transformer .../1A	Class 2 (DIN EN 62053-23:2003, IEC 62053-23:2003)
Frequency	±0.01 Hz
Internal clock	±1 minute/month (18...28 °C)

The specifications apply under the following conditions:

- Annual recalibration,
- a warming up time of 10 minutes,
- an ambient temperature of 18...28 °C.

If the device is operated outside the range from 18...28 °C an additional measurement error equal to ±0.01 % of the measured value must be taken into account per °C difference.

Measuring inputs	
Voltage measurement	
Three-phase 4-wire systems (L-N/L-L)	max. 277 V / 480 V
Three-phase 3-wire systems (L-L)	max. 480 V
Resolution	0.01 V
Measurement range L-N	0 <sup>1)</sup> ...600 Vrms
Measurement range L-L	0 <sup>1)</sup> ...1000 Vrms
Crest-factor	2 (referring to 480 Vrms)
Measurement category	300 V CAT III
Specified impulse withstand voltage	4 kV
Fuse protection for voltage measurement	1...10 A
Impedance	4 MOhm/phase
Power input	approx. 0.1 VA
Scanning frequency	20 kHz/phase
Transients	> 50 µs
Fundamental oscillation	45...65 Hz
Resolution	0.001 Hz

1) The Energy Analyser D550/D550-24 can only detect measurement values if a voltage L-N larger than 10 Veff or a voltage L-L larger than 18 Veff is applied to at least one voltage measurement input.

Current measurement	
Nominal current	5 A
Rated current	6 A
Fuse protection for direct measurement (without current transformer)	6 A Char. B (approved i.a.w. UL/IEC)
Resolution	1 mA
Measurement range	0.001...8.5 Arms
Crest-factor	2 (referring to 6 Arms)
Measurement category	300 V CAT III
Specified impulse withstand voltage	4 kV
Power input	approx. 0.2 VA (Ri = 5 mohm)
Overload for 1 second	100 A (sinusoidal)
Scanning frequency	20 kHz

Connectable conductors (voltage and current measurement)	
Only one conductor may be connected per terminal connection!	
Solid core, multi-core, flexible core	0.08...4 mm <sup>2</sup> , AWG 28...12
Pin-end connector, wire end ferrules	2.5 mm <sup>2</sup> , AWG 14

## Parameter list

Address	Name	Setting range	Unit	Default setting
000	Current transformer, primary, L1...L4	0...1000000	A	5
001	Current transformer, secondary, L1...L4	1...5	A	5
002	Voltage transformer, primary, L1...L4	0...1000000	V	400
003	Voltage transformer, secondary, L1...L4	1...400	V	400
010	Current transformer, primary, L1	0...1000000	A	5
011	Current transformer, secondary, L1	1...5	A	5
012	Voltage transformer, primary, L1	0...1000000	V	400
013	Voltage transformer, secondary, L1	1...400	V	400
020	Current transformer, primary, L2	0...1000000	A	5
021	Current transformer, secondary, L2	1...5	A	5
022	Voltage transformer, primary, L2	0...1000000	V	400
023	Voltage transformer, secondary, L2	1...400	V	400
030	Current transformer, primary, L3	0...1000000	A	5
031	Current transformer, secondary, L3	1...5	A	5
032	Voltage transformer, primary, L3	0...1000000	V	400
033	Voltage transformer, secondary, L3	1...400	V	400
040	Current transformer, primary, L4	0...1000000	A	5
041	Current transformer, secondary, L4	1...5	A	5
042	Voltage transformer, primary, L4	0...1000000	V	400
043	Voltage transformer, secondary, L4	1...400	V	400
100	Automatically get TFTP configuration file 0 = switched off x = file number	0...9999	-	0
101	TFTP error handling 0 = In the event of an error the configuration menu appears in the Energy Analyser D550/D550-24. 1 = In the event of an error the does NOT switch to the configuration menu of the Energy Analyser D550/D550-24.	0...1	-	0
110	Current transformer circuit (L1...L3) 0 = three current transformers 1 = two current transformers (Aron circuit)	0...1	-	0
111	Voltage measurement system configuration 0 = three-phase 4-conductor system (TT, TN system) 1 = three-phase 3-conductor system (IT system)	0...1	-	0
112	Deletes all real and apparent energy meters and S0-counters (1 = delete)	0...1	-	0
113	Deletes all reactive energy meters (1 = delete)	0...1	-	0
114	Resets all minimum and maximum values (1 = reset)	0...1	-	0
200	Device address, modbus/profibus	1...255		1
201	Baud rate, RS232 0 = 9600 Bit/s 1 = 19200 Bit/s 2 = 38400 Bit/s 3 = 57600 Bit/s 4 = 115200 Bit/s	0...4		4
202	Baud rate, RS485 0 = 9600 Bit/s 1 = 19200 Bit/s 2 = 38400 Bit/s 3 = 57600 Bit/s 4 = 115200 Bit/s 5 = 921600 Bit/s	0...5		4
203	RS485, mode 0 = modbus RTU/slave 1 = modbus RTU/master 2 = gateway transparent	0...6		0

204	RS232, mode 0 = modbus RTU/slave 3 = Debug 6 = SLIP (only for internal use)	0...6		0
205	DHCP mode 0 = fixed IP 1 = BootP 2 = DHCP-Client	0, 1, 2, 3		2
300	IP address, xxx --- --- ---	0...255		000
301	IP address, --- xxx --- ---	0...255		000
302	IP address, --- --- xxx ---	0...255		000
303	IP address, --- --- --- xxx	0...255		000
304	IP mask, xxx --- --- ---	0...255		000
305	IP mask, --- xxx --- ---	0...255		000
306	IP mask, --- --- xxx ---	0...255		000
307	IP mask, --- --- --- xxx	0...255		000
310	IP gateway, xxx --- --- ---	0...255		000
311	IP gateway, --- xxx --- ---	0...255		000
312	IP gateway, --- --- xxx ---	0...255		000
313	IP gateway, --- --- --- xxx	0...255		000
400	Day	1...31		xx
401	Month	1...12		xx
402	Year	1...9999		xxxx
403	Hour	0...23		xx
404	Minute	0...59		xx
405	Second	0...59		xx
406	Accept date and time 1 = accept set data	0, 1		0
500	Device password	0...9999		xxxx
501	Homepage, password mode	0, 2, 128, 130		0
502	Homepage, password	0...9999		xxxx
510	Activate "EMAX" option, licence part 1	0...9999		xxxx
511	Activate "EMAX" option, licence part 2	0...9999		xxxx
520	Activate "BACnet" option, licence part 1	0...9999		xxxx
521	Activate "BACnet" option, licence part 2	0...9999		xxxx
600	LCD, Contrast	0...99	-	50
601	LCD, Backlight, max. brightness	0...16	-	10
602	LCD, Backlight, min. brightness	0...8	-	3
603	LCD, Backlight	0...9999	s	60

### Measured value displays

You can have the following measured values shown on the display, with the default factory setting, using keys 1 and 2. The measured value names used are abbreviated and have the following meaning:

Active power demand = active power demand, imported supply  
 Reactive power = reactive power, inductive  
 Active power demand = active power demand, imported supply with return block


Voltage L1-N	Voltage L2-N	Voltage L3-N	Voltage L4-N		
Voltage L1-L2	Voltage L2-L3	Voltage L3-L1			
Current L1	Current L2	Current L3	Current L4		
Active Power demand L1	Active Power demand L2	Active Power demand L3	Active Power demand L4	Active Power demand L1..L3	Active Power demand L1..L4
Reactive Power L1	Reactive Power L2	Reactive Power L3	Reactive Power L4	Reactive Power L1..L3	Reactive Power L1..L4
Active Energy demand L1	Active Energy demand L2	Active Energy demand L3	Active Energy demand L4	Active Energy demand L1..L3	Active Energy demand L1..L4
cos(phi) L1	cos(phi) L2	cos(phi) L3	cos(phi) L4	cos(phi) L1..L3	
Frequency Rotating field	Temperature input	Date	Time	Serial number	Firmware release

### Declaration of conformity


The product fulfils the following EC Directives:	
2004/108/EC	Electromagnetic compatibility of electrical equipment.
2006/95/EC	Electrical equipment for use within certain voltage limits.
Considered standards:	
Noise immunity	
IEC/EN 61326-1:2013	Class A: Industrial environment
IEC/EN 61000-4-2:2009	Electrostatic discharge
IEC/EN 61000-4-3:2011	Electromagnetic RF fields 80 to 2700 MHz
IEC/EN 61000-4-4:2013	Burst
IEC/EN 61000-4-5:2007	Surge
IEC/EN 61000-4-6:2009	Conducted disturbances 0.15 to 80 MHz
IEC/EN 61000-4-8:2010	Power frequency magnetic field
IEC/EN 61000-4-11:2005	Voltage dips, short interrupts and voltage variations
Noise emission	
IEC/EN 61326-1:2013	Class B: Residential environment
IEC/CISPR11/EN 55011:2011	Radio disturbance field strength 30 to 1000 MHz
IEC/CISPR11/EN 55011:2011	Radio disturbance voltage 0.15 to 30 MHz
Equipment safety	
IEC/EN 61010-1:2011	Safety requirements for electrical equipment for Measurement, control and laboratory use – Part 1: General requirements
IEC/EN 61010-2-030:2011	Particular requirements for testing and measuring circuits

## Dimensioned drawings


Front view

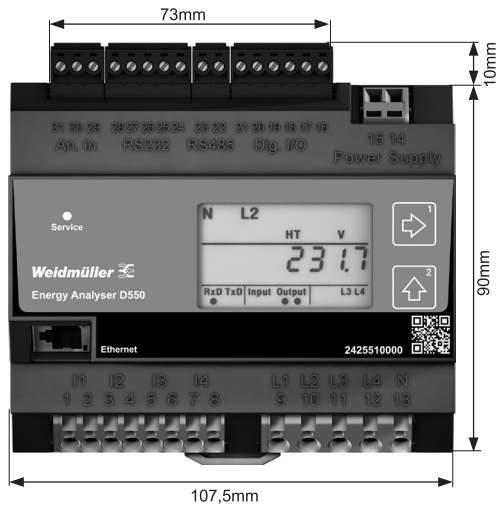

Side view

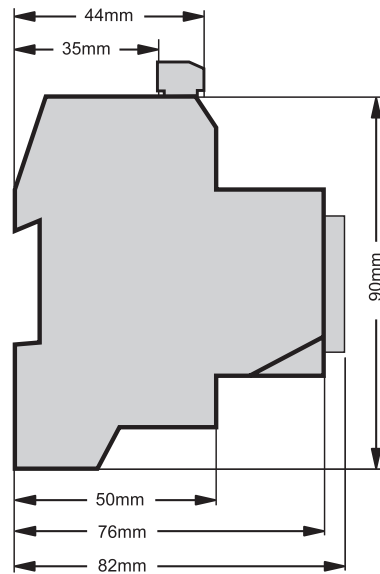

Energy Analyser D550/D550-24 connection example

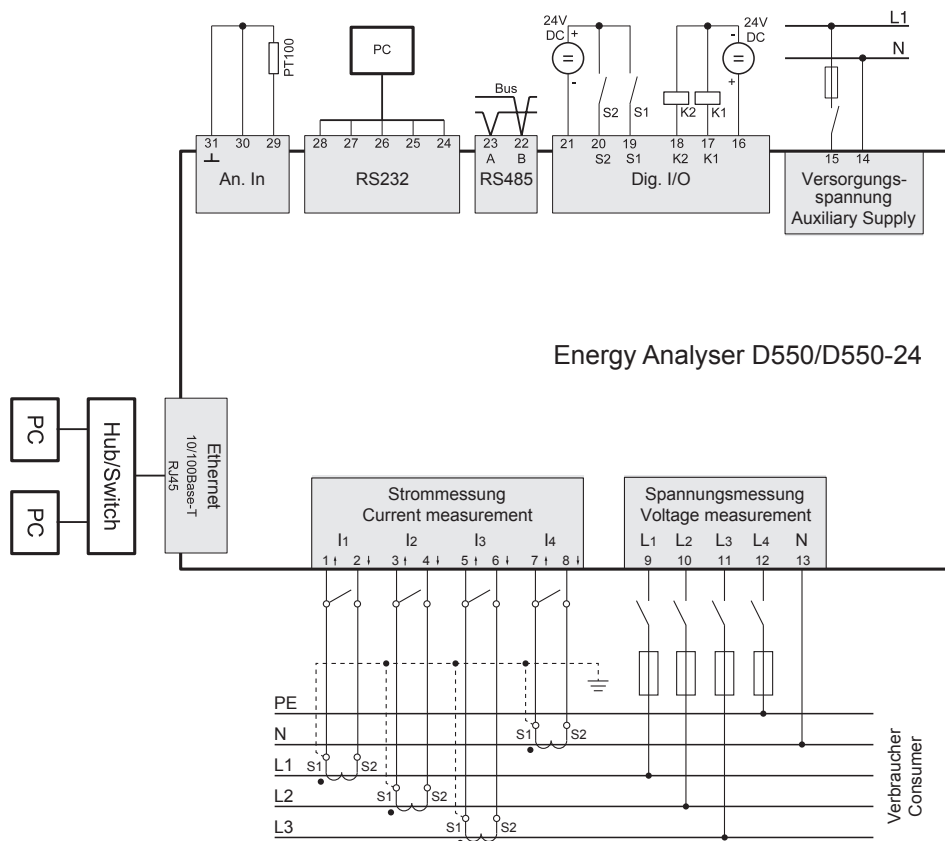

## Quick Reference Instructions

### Adjusting the primary current

You have three current transformers of the same type with a current transformer ratio of 200 A / 5 A.

You would like to program the primary current with 200 A.

To do this you must enter the value 200 for the primary current in the address 000.


The secondary current is preset to 5 A in address 001 in the factory.

### Switch to Program mode

Simultaneously press keys 1 and 2 for around one second.

The PRG symbol for programming mode appears.

The content of address 000 is displayed.

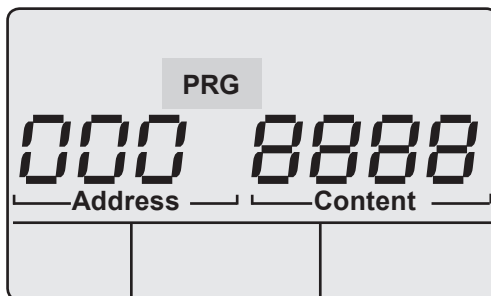


### Change address

As address 000 is already displayed the address does not have to be changed.

### Enter the primary current

Use Key 1 to select the digit to be changed.

Use Key 2 to change the selected digit.

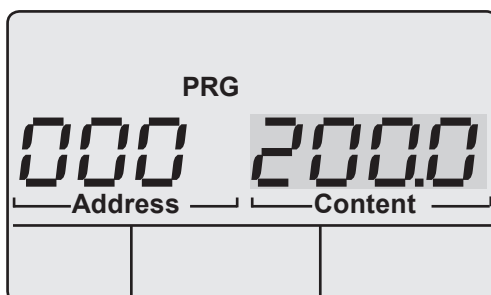

### Exit program mode

Simultaneously press both keys for around 1 second.

The current transformer setting is saved and the device returns to display mode.







# **[www.weidmueller.com](http://www.weidmueller.com)**

Weidmüller Interface GmbH & Co. KG  
Klingenbergstraße 16  
D-32758 Detmold  
Phone +49 (0) 5231 14-0  
Fax +49 (0) 5231 14-292083  
[info@weidmueller.com](mailto:info@weidmueller.com)  
[www.weidmueller.com](http://www.weidmueller.com)

Order number:  
2436120000/01/01.17