

Hardware Installation Guide

Unmanaged Fast Ethernet PoE Switches

IE-SW-EL08-8PoE (Part No. 2682380000)

IE-SW-EL06-4PoE-2SC (Part No. 2682390000)

1. Introduction

Ethernet Switches from Weidmüller are designed with a very compact housing size and are fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

2. Safety notice

	Switch off the electrical power before removing the power connection!
	The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.
	The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device. The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU and 2014/30/EU.
	Installation, commissioning and maintenance may only be performed by qualified electricians.
	Observe the operating instructions.
	<ul style="list-style-type: none"> Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label. <ul style="list-style-type: none"> Utilisation en intérieur et degré de pollution II, il faut l'essuyer avec un chiffon sec pour nettoyer l'appareil et son étiquette. Do not block air ventilation holes. Ne bouchez pas les orifices de ventilation. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Si l'appareil est utilisé d'une manière non spécifiée par le fabricant, la protection qu'il apporte peut se voir diminuée. Shall be mounted in the Industrial Control Panel and ambient temperature is not exceed 75 degrees C. Doit être monté dans le panneau de commande industriel et la température ambiante ne doit pas dépasser 75 degrés C.

Intended use

The device is intended for the realization of communication networks within an industrial environment, it is intended to be used in a restricted access location. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

Environmental conditions

This equipment is intended to be used in a restricted access location.

When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data.

Also make sure that the air flow will not be compromised by other devices.

Ensure that the mounted and wired device is not exposed to any mechanical stress.

FCC compliance


This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3. Package Checklist

Your Ethernet Switch is shipped with the following items:

- Ethernet Switch
- Hardware Installation Guide (printed)
- 6-Pin Terminal connector
- Protective caps for RJ45 and Fiber optic ports


4. Panel Layouts

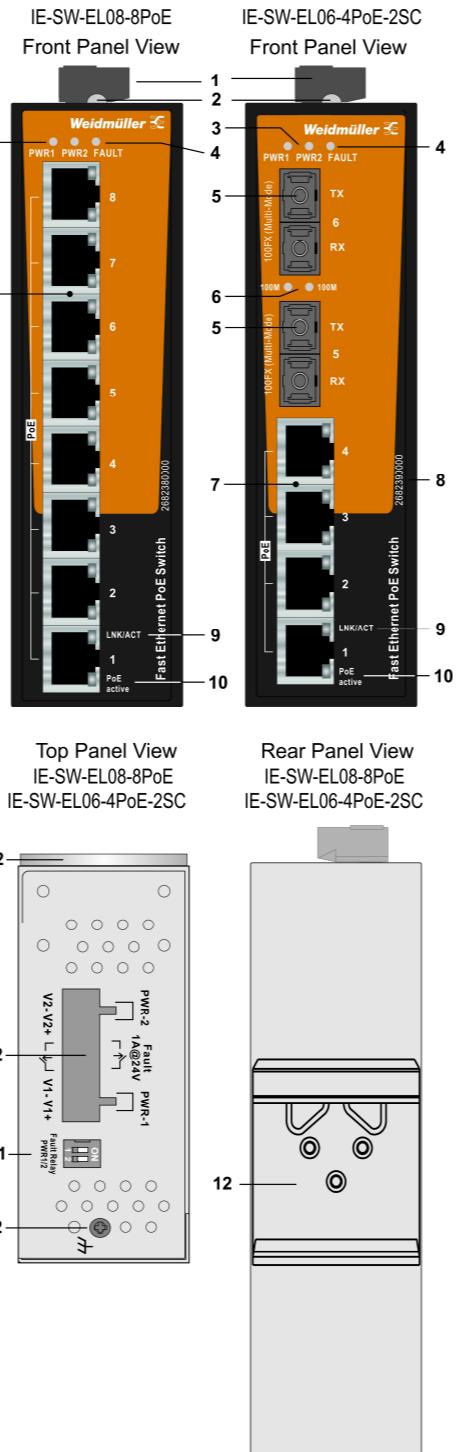

1. Terminal block for power input PWR1/PWR2 and Power failure relay (output)
2. Grounding screw / Frame ground (Note: The shielding ground of the LAN port is electrically connected to the grounding screw)
3. Power Input LEDs (PWR1 / PWR2)
4. Power Fault LED (PWR1 / PWR2 fault)
5. 100BaseFX port (Multi-mode, SC Connector)
6. Fiber port Link/Activity LED's
7. 10/100Base-T(X) PoE ports (P.S.E)
8. Article Number
9. LED RJ45 port Link/Activity
10. LED for PoE power injection
11. DIP switch for enabling / disabling Power Fault relay
SW1 ON: Switches relay if power 1 fails
SW2 ON: Switch relay if power 2 fails
12. DIN-Rail kit


5. Mounting Dimensions

(units = mm)

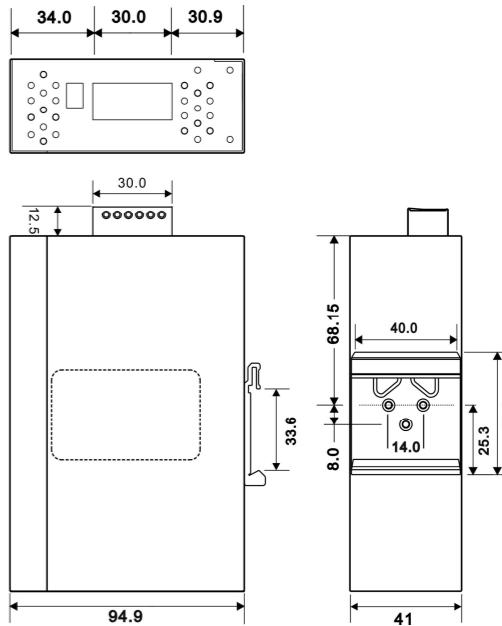

6. DIN-Rail Mounting

Slide the switch onto a DIN-rail and make sure that the switch's Din-rail clip clicks into the rail firmly.

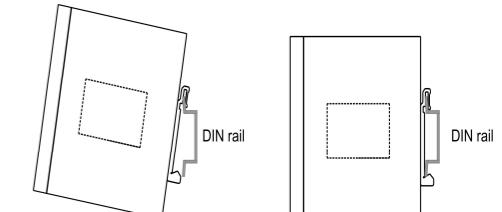

To remove the DIN-rail from the Ethernet Switch, simply reverse Steps 1 and 2.

7. Grounding Ethernet Switch



ATTENTION

- Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).
- the ground connection from the ground screw to the grounding surface prior to connecting devices.
- This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.
- The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).


8. Wiring Redundant Power Inputs and Power Fault Relay

The switch supports redundant power supply inputs and provides a power fault relay which can be used for alarming in case of interruption of Power 1 or Power 2 on the 6-pin terminal block. Refer to illustration below for correct wiring.



Warning / Avertissement

- Take into consideration the following guidelines before wiring the device
 - Tenez compte des directives suivantes avant de câbler l'appareil.
- Terminal block is mating with Plug and suitable for 12-24AWG. Torque value 4.5 lb-in.
- Le bornier est compatible avec les connecteurs et convient pour 12-24AWG. Valeur de couple 4,5 lb-in.
- The temperature rating of the input connection cable should higher than 105°C.
- La température de service nominale du câble d'entrée doit être supérieure à 105 °C.
- Supplied by SELV source evaluated by UL 61010-1 or 61010-2-201 power supply only.
- Fourni par la source SELV évaluée uniquement par l'alimentation UL 61010-1 ou 61010-2-201.

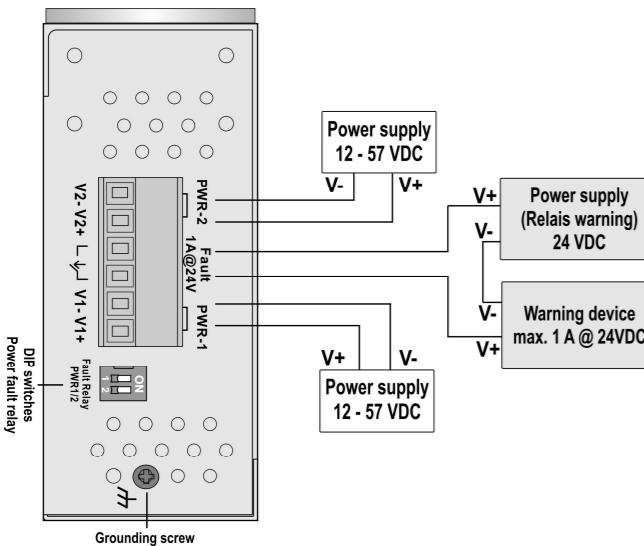

Note about behavior of power failure relay:

- Relay contact is closed if the device is powered-off.
- Relay contact always is open if the device is powered either by PWR1 or PWR2 and if DIP switches 1 and 2 for power control are set to off.
- Relay contact closes if DIP switch 1 is set to ON and PWR1 fails.
- Relay contact closes if DIP switch 2 is set to ON and PWR2 fails.

9. Communication Connections

Switch **IE-SW-EL08-8PoE** is equipped with the following communication interfaces:
8x 10/100Base-T(X) PoE ports (P.S.E)

Switch **IE-SW-EL06-4PoE-2SC** is equipped with following communication interfaces:
4x 10/100Base-T(X) PoE ports (P.S.E)

2x 100BaseFX port with SC Connector (Multi-mode)

Please only use cables suitable for the respective type of communication and ensure that signals are protected from possible interference.

9.1 10/100Base T(X) PoE Ports (P.S.E.)

For communication without PoE sourcing the switch supports auto negotiation speed, Full/Half duplex mode and auto MDI/MDI-X connection, means automatic setting of pinouts for both MDI ports (NIC-type) or MDI-X ports (HUB/Switch-type). In case of active PoE sourcing the switch uses the pinout of "Alternative A, MDI mode" of 802.3af/802.3at standards. Please see the details in the following table.


10/100Base T(X) RJ45 Pinouts (P.S.E. Port)

MDI Port Pinouts		MDI-X Port Pinouts		8-pin RJ45
Pin	Signal	Pin	Signal	
1	Tx+ with PoE Power +	1	Rx+	
2	Tx- with PoE Power +	2	Rx-	
3	Rx+ with PoE Power -	3	Tx+	
6	Rx- with PoE Power -	6	Tx-	

9.2 100BaseFX Port (only IE-SW-EL06-4PoE-2SC)

The switch is equipped with 2 * 100BaseFX Fiber optic ports with SC connectors.

For connecting fiber ports between 2 devices consider to connect wire Tx (transmit) of device 1 to wire Rx (receive) of device 2, and vice versa. Remember that fiber optic connections generally are using the full-duplex transmission mode.

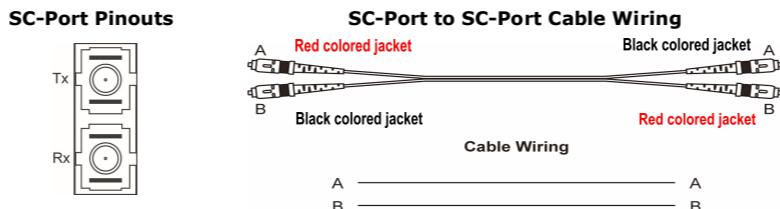

10. LED Indicators

The front panel of the Ethernet Switch contains several LED indicators. The function of each LED is described in the table below.

LED	Color	Status	Description
PWR1	Green	On	Power is being supplied to power input PWR1.
PWR1	Green	Off	Power is not being supplied to power input PWR1.
PWR2	Green	On	Power is being supplied to power input PWR2.
PWR2	Green	Off	Power is not being supplied to power input PWR2.
FAULT	Amber	On	Indicates PWR1 or PWR2 fault (if corresponding DIP switches are set to ON).
FAULT	Amber	Off	If DIP switches are set to OFF or no power failure.
LNK/ACT	Green	On	Link of RJ45 Port is active.
LNK/ACT	Green	Off	Link of RJ45 Port is inactive.
100M	Green	On	Link of Fiber Port is active.
100M	Green	Off	Link of Fiber Port is inactive.
PoE	Green	On	PoE power injection is active.
PoE	Active	Off	PoE power injection is inactive.

11. Specifications

Technology	
Standards	IEEE 802.3 for 10Base-T IEEE 802.3u for 100Base-TX and 100Base-FX IEEE 802.3af/at for Power over Ethernet IEEE 802.3x flow control
Processing Type	Store and Forward
MAC Table size	1K
Packet buffer size	448 Kbit
Backplane bandwidth	IE-SW-EL06-4PoE-2SC: 1.2 Gbps IE-SW-EL08-8PoE: 1.6 Gbps
Interfaces	

RJ45 Ports	10/100BaseT(X) auto negotiation speed, F/H duplex mode and auto MDI/MDI-X connection
LED Indicators	PWR1, PWR2 (Power), Power Fault, Port Link/Activity, Port Speed, PoE
Relay Contact	Max. 1A @ 24 VDC
DIP Switches	Enabling/Disabling relay alarm for PWR1/PWR2 failure
Fiber Ports	IE-SW-EL06-4PoE-2SC
Fiber Ports number	2
Fiber Ports standard	100Base-FX
Fiber Mode	Multi-mode
Fiber Diameter (μm)	62.5/125 μm; 50/125 μm
Connector Type	SC-Duplex
Typical Distance (km)	2 km
Power	
Input Voltage	IE-SW-EL08-8PoE: 12/24/48 V DC (12 - 57 V DC), 2 redundant inputs IE-SW-EL06-4PoE-2SC: 24/48 V DC (24 - 57 V DC), 2 redundant inputs
Input Current @24 V DC (with PD consumption)	IE-SW-EL08-8PoE: 5.74 A IE-SW-EL06-4PoE-2SC: 2.8 A
Connection	One removable 6-pin terminal block, Wiring cable 12-24AWG
Overload Current Protection	Present
Reverse Polarity Protection	Present
PoE	
Total PoE power budget	IE-SW-EL08-8PoE: 60 W @ 12 - 23 V DC; 120 W @ 24 - 57 V DC IE-SW-EL06-4PoE-2SC: 60 W @ 24 - 50 V DC; 120 W @ 50 - 57 V DC
PoE Pinout	Mode A: Pin 1, 2 (V+); Pin 3, 6 (V-); Alternative A; MDI
Physical Characteristics	
Housing	IP30 protection, metal
Dimension (W x H x D)	41 x 144.3 x 94.9 mm (1.61 x 5.68 x 3.74 in)
Weight	IE-SW-EL08-8PoE: 580 g IE-SW-EL06-4PoE-2SC: 435 g
Installation	DIN-rail
Environmental conditions	
Operating Temperature	-40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5 to 95% (non-condensing)
Operating Altitude	up to 2000 m
Regulatory Approvals	
Safety	UL 61010-1, UL 61010-2-201
EMC	EN 55032, EN 55024, FCC Part 15 Subpart B Class A, IEC 61000-4-2 ESD: Contact: 4 kV; Air: 8 kV, IEC 61000-4-3 RS: 80 MHz to 1 Ghz: 3 V/m, IEC 61000-4-4 EFT: Power: 0.5 kV; Signal: 0.5 kV, IEC 61000-4-5 Surge: Power: 0.5 kV; Signal: 1 kV, IEC 61000-4-6 CS: 3 Vrms
Shock	IEC 60068-2-27
Free Fall	IEC 60068-2-31
Vibration	IEC 60068-2-6
MTBF	
Time	IE-SW-EL08-8PoE: 744.974 hrs IE-SW-EL06-4PoE-2SC: 538.904 hrs
Database	Telcordia SR332
Warranty	
Time Period	5 years

Contact Information

Weidmüller Interface GmbH & Co. KG
Klingenbergsstraße 26, 32758 Detmold / Germany
Phone +49 (0) 5231 14-0, Fax +49 (0) 5231 14-292083
E-Mail weidmueller@weidmueller.com, Internet www.weidmueller.com