

Hardware installation guide

IEC 61850-3 Managed Fast/Gigabit Ethernet Switch

IE-SW-SL20M-8GT-12GESFP-HV (2778970000)
IE-SW-SL20M-8GT-12GESFP-LV (2778980000)

1. Introduction

Weidmüller Ethernet switches are designed for industrial applications and fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

2. Safety notes

 The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.

 The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device.

The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU and 2014/30/EU.

 Installation, commissioning and maintenance may only be performed by qualified electricians.

 Observe the operating instructions.

- Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label.
- Do not block air ventilation holes.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- Shall be mounted in the industrial control panel and ambient temperature is not exceed 85 °C.

Intended use

The device is intended for the realisation of communication networks within an industrial environment. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

Environmental conditions

This equipment is intended to be used in a restricted access location. When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data. Also make sure that the air flow will not be compromised by other devices. Ensure that the mounted and wired device is not exposed to any mechanical stress.

FCC compliance


This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3. Package checklist

The Ethernet switch is delivered with three terminal connectors (Power supply 1, Power supply 2 and Failure relay) and protective caps for RJ45 ports and SFP ports. Additionally, each Ethernet switch is shipped with the following items:


- Hardware installation guide (printed)
- Serial console cable
- Leaflet for China RoHS Declaration (printed)

4. Panel layout

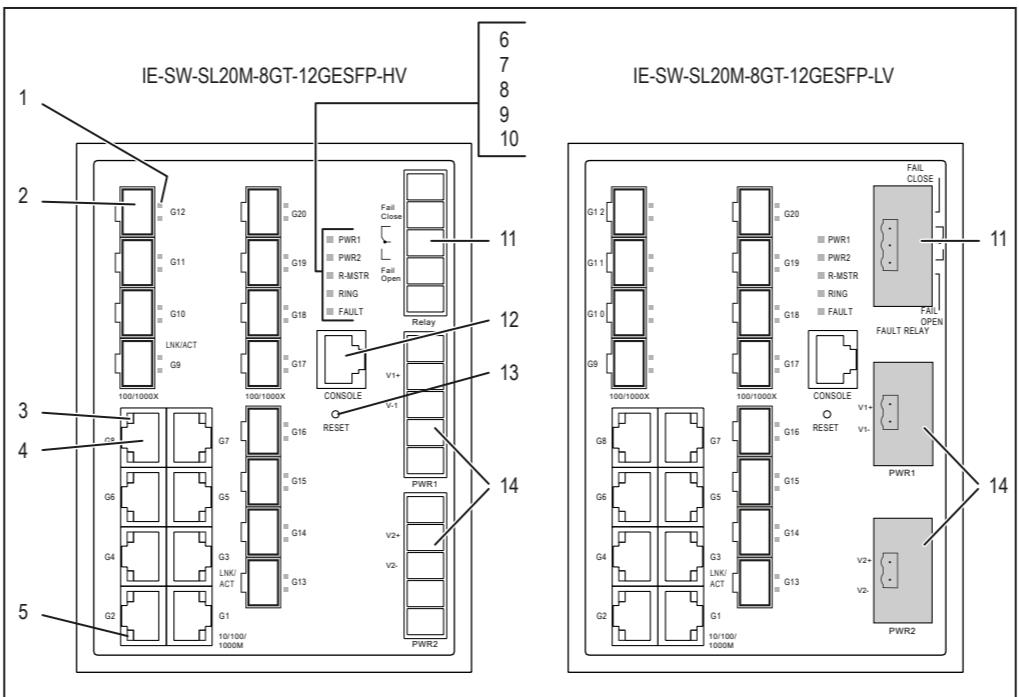

- 1 SFP port Link/Activity LEDs
- 2 12 x 100/1000 Base-X Ports (SFP Slots)
- 3 RJ45 port Link/Activity LED
- 4 8 x 10/100/1000Base-T(X) ports
- 5 LED for speed indication (Green=1000 Mbps, Amber=100 Mbps, Off=10 Mbps)
- 6 Power input 1 LED (PWR1)
- 7 Power input 2 LED (PWR2)
- 8 Ring master status LED
- 9 Ring status LED
- 10 Fault LED (PWR1/PWR2 fault or port link loss)
- 11 Terminal block for failure relay
- 12 Serial console port (RS232)
- 13 Reset button
- 14 Terminal blocks for power inputs PWR1 and PWR2


5. DIN rail mounting

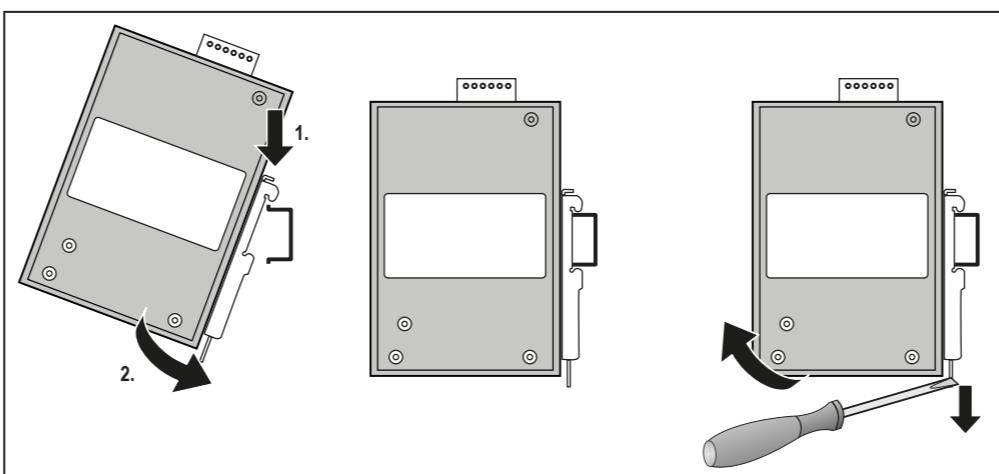

1. Place the mounting clip from above onto the DIN rail.
2. Press the device against the DIN rail until the mounting clip engages on the DIN rail with a click.

► To remove the Ethernet switch from the DIN rail pull down the latch with a screwdriver then move the device away from the DIN rail and lift it up.

6. Mounting dimensions [mm]

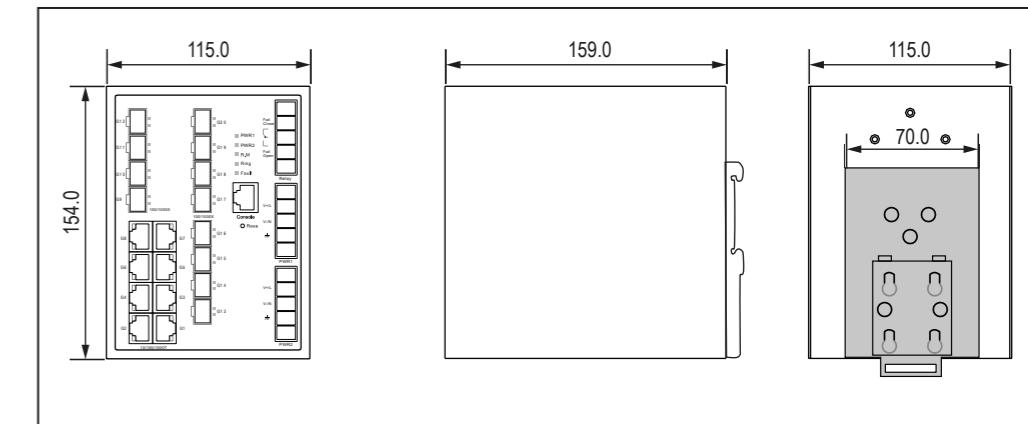

7. Grounding

ATTENTION

- Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).
- Run the ground connection from the ground screw (or from the ground pin of the power supply terminal blocks in IE-SW-SL20M-8GT-12GESFP-HV model) to the grounding surface prior to connecting devices.
- This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.
- The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).

8. Wiring redundant power supply and fault alarm relay

The switch has redundant power supply modules and provides a fault alarm relay for detecting the user-configurable failure events

- Interruption of Power 1 or Power 2
- Link loss of Ethernet ports.


In the IE-SW-SL20M-8GT-12GESFP-HV model, the connectors are protected with a transparent cover that has to be removed before wiring. After wiring is completed, this cover has to be put back to the connectors.

Warning

- Take into consideration the following guidelines before wiring the device
- Terminal block is suitable for 12-24AWG.
- The temperature rating of the input connection cable should be higher than 105 °C.

Avertissement

- Tenez compte des directives suivantes avant de câbler l'appareil.
- Le bornier est convient pour 12-24AWG.
- La température de service nominale du câble d'entrée doit être supérieure à 105 °C.

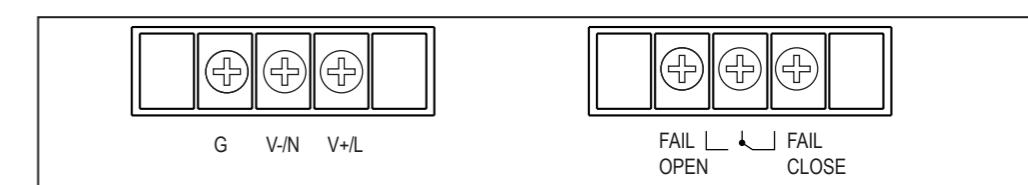

Behaviour of the failure relay

- Relay contact is connected between COMMON and FAIL CLOSE if the device is powered off.
- Relay contact is connected between COMMON and FAIL OPEN if the device is powered on and no alarm conditions exist (neither Power Failure Alarms nor Port Link Loss Alarms are activated, see web menu Warnings/Fault Relay Alarm).
- Relay contact is connected between COMMON and FAIL CLOSE if any of an activated alarm condition happens.

9. Communication connections

The Ethernet switch is equipped with following communication interfaces:

- 8 x 10/100/1000BASE-T(X) ports
- 12 x 100/1000BASE-X ports (SFP slots)

 Please only use cables suitable for the respective type of communication and ensure that signals are protected from possible interference.

9.1 10/100/1000BASE-T(X) RJ45 ports


The 10/100/1000BaseT(X) ports located on the front panel are used to connect to Ethernet-enabled devices. The following table shows pinouts for both MDI ports (NIC-type) and MDI-X ports (HUB/Switch-type). Auto MDI-X ensures that both wiring schemes are supported (automatic crossover function).

10/100/1000BASE-T(X) RJ45 Ports

10/100BASE-T(X) MDI/MDI-X			1000BASE-T(X) MDI/MDI-X			8-pin RJ45
Pin	MDI port	MDI-X port	Pin	MDI port	MDI-X port	
1	TD+ (transmit)	RD+ (receive)	1	BI_DA+	BI_DB+	
2	TD- (transmit)	RD- (receive)	2	BI_DA-	BI_DB-	
3	RD+ (receive)	TD+ (transmit)	3	BI_DB+	BI_DA+	
4	not used	not used	4	BI_DC+	BI_DD+	
5	not used	not used	5	BI_DC-	BI_DD-	
6	RD- (receive)	TD- (transmit)	6	BI_DB-	BI_DA-	
7	not used	not used	7	BI_DD+	BI_DC+	
8	not used	not used	8	BI_DD-	BI_DC-	

9.2 100/1000BASE-X SFP fiber optic port

The 100/1000BaseSFP type slots require either a 100BaseSFP or a 1000BaseSFP fiber transceiver (mini-GBIC) to work properly. Please only use SFP modules and cables that are compatible with each other to establish an optical connection.

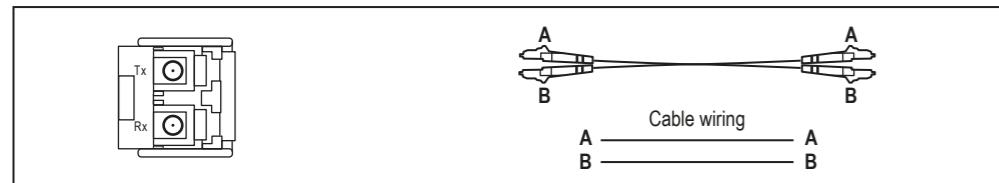

For a LC-Port with separate transmit and receive ports please remember to connect the Tx (transmit) port of device 1 to the Rx (receive) port of device 2, and the Rx (receive) port of device 1 to the Tx (transmit) port of device 2.

9.3 RS232 console port

The RS232 interface with RJ45 connector can be used to access the switch console for configuration.

Pin	Pin assignment	Communication parameters	8-pin RJ45
1	not assigned	Baud rate: 115200 bps	
2	RxD	Data bit: 8	
3	TxD	Parity: No	
5	GND	Stop bit: 1	
4, 6...8	not assigned	Flow control: No	

10. User management

10.1 Device access (login to web interface)

The web interface of the switch can be accessed via following factory default settings:

IP address / Netmask: 192.168.1.110 / 255.255.255.0
User name: admin
Password: Detmold

- ▶ Connect the PC to any Ethernet port of the managed switch and set the PC's IP address to a free one of range 192.168.1.0 / 255.255.255.0.
- ▶ Start a web browser and enter the IP address of the connected switch into the browser's address line (http://192.168.1.110).
- ▶ After the appearance of prompt (login) enter the login credentials.
- ▶ Confirm your input with **OK**.

The home page of the switch will be displayed.

 For detailed information about configuration and use of the device features please regard the manual. The manual is available to download from the Weidmüller website: Product catalogue/Automation & Software/Industrial Ethernet/Substation Line managed Switches>Select Product/Click and expand section „Downloads“/Download needed software or documentation.

10.2 Reset button

- ▶ To reboot the switch (warm start), press the reset button for 2 to 3 seconds.
- ▶ To reset the switch to factory default settings, press the reset button for more than 5 seconds.

11. LED indicators

The following table describes the functions of the LED indicators at the front panel.

LED	Color	Status	Description
PWR1	Green	On	Power supplied to power input PWR1.
PWR2	Green	On	Power supplied to power input PWR2.
R-MSTR (ring master)	Green	On	Is ring master of an enabled O-Ring.
		On	O-Ring redundancy is enabled.
RING	Green	Blinking	Ring structure is broken (no redundancy).
FAULT	Amber	On	Fault relay indication for power failure and port link loss.
LINK/ACT RJ45 ports G1 – G8	Green	On	Port link is active.
		Off	Port link is inactive.
		Blinking	Data is transmitted.
10/100/1000M RJ45 ports G1 – G8	Green/Amber	Green	Port speed is set to 1000 Mbps
		Amber	Port speed is set to 100 Mbps
		Blinking	Port speed is set to 10 Mbps
LINK/ACT SFP ports G9 – G20	Green	On	Port link is active.
		Blinking	Data is transmitted.

12. Disposal

 Observe the notes for proper disposal of the product. You can find the notes here: www.weidmueller.com/disposal.



13. Specifications

Technology		
Ethernet standards	IEEE 802.3 for 10BASE-T IEEE 802.3u for 100BASE-TX and 100BASE-FX IEEE 802.3ab for 1000BASE-T IEEE 802.3z for 1000BASE-X IEEE 802.3x for flow control IEEE 802.3az Energy-Efficient Ethernet IEEE 802.3ad for port trunk with LACP IEEE 802.1D for STP (Spanning Tree protocol) IEEE 802.1w for RSTP (Rapid Spanning Tree protocol) IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol) IEEE 802.1p for Class of Service IEEE 802.1Q for VLAN Tagging IEEE 802.1X for Authentication IEEE 802.1AB for LLDP (Link Layer Discovery Protocol)	
Processing type	Store-and-forward	
MAC address table size	8K	
Backplane bandwidth	40 Gbps	
Interfaces		
RJ45 ports	8 x 10/100/1000BASE-T(X) auto negotiation speed, F/H duplex mode and auto MDI/MDI-X connection	
Fibre optic ports	12 x 100/1000BASE-X SFP slots	
RS232 console port	RS232 interface with RJ45 connector for console access	
LED indicators	PWR1, PWR2 (Power), Fault (Relay), Ring Master, Ring Status, Port Link/Activity/Speed	
Relay contact	3-pin connector, max. 1 A @ 24 V DC	
Power supply	IE-SW-SL20M-8GT-12GESFP-LV	IE-SW-SL20M-8GT-12GESFP-HV
Input voltage	12 ... 52 V DC	88 ... 373 V DC, 85 ... 264 V AC
Power consumption (max.)	23 W	23 W
Connection	Clamping yoke connection (2-pin), Wiring cable 12 ... 24AWG	
Overload current protection	Yes	
Reverse polarity protection	Yes	
Physical characteristics	IE-SW-SL20M-8GT-12GESFP-LV	IE-SW-SL20M-8GT-12GESFP-HV
Housing	IP30 protection, metal	
Dimensions (W x H x D)	115.0 x 154.0 x 159.0 mm (4.52 x 6.06 x 6.26 inch)	
Weight	1520 g	1870 g
Installation	DIN-rail	
Environmental conditions		
Operating temperature	-40 ... 85 °C (-40 ... 185 °F)	
Storage temperature	-40 ... 85 °C (-40 ... 185 °F)	
Ambient relative humidity	5 ... 95 % (non-condensing)	
Operating altitude	Up to 2000 m	
Regulatory approvals		
Power T&D	IEC 61850-3, IEEE 1613	
EMC	FCC Part 15 Subpart B, CISPR 22 Class A, IEC 61000-4-2 ESD: Contact: 6 kV; Air: 8 kV, IEC 61000-4-3 RS: 80 MHz to 1 Ghz: 10 V/m, IEC 61000-4-4 EFT: Power: 4 kV; Signal: 4 kV, IEC 61000-4-5 Surge: Power: 4 kV; Signal: 4 kV, IEC 61000-4-6 CS: 10 Vrms	
Shock	IEC 60870-2-2 class Cm	
Free fall	IEC 60870-2-2 class Cm	
Vibration	IEC 60870-2-2 class Cm	
Safety	EN 62368-1	
MTBF	IE-SW-SL20M-8GT-12GESFP-LV	IE-SW-SL20M-8GT-12GESFP-HV
Time	273,551 hrs	421,961 hrs
Database	Telcordia SR332	
Warranty	5 years	